

NR-MZ50シリーズ

◆OpenInfoサービス対応機種一覧

docomo

分類	機種	Open Info
CA	CA-01C	○
	F-03B	○
F	F-06B	×
	F-07B	○
	F-01C	○
	F-02C	○
	F-03C	○
	F-09C	○
	F-10C	○
	F-12C	×
	F-02D	○
	F-03D	×
	F-04D	○
	F-05D	×
	F-07D	○
	F-08D	×
	F-09D	×
	F-10D	×
	F-12D	×
	F-01E	○
	F-04E	×
	L	L-03C
L-04C		×
L-07C		×
L-01D		×
L-02D		×
L-05D		×
L-06D		×
N	L-01E	×
	N-02A	×
	N-06A	○
	N-01B	○
	N-04B	○
	N-07B	×
	N-08B	○
	N-02C	○
	N-03C	○
	N-04C	×
	N-05C	○
	N-06C	×
	N-01D	×
	N-02D	○
	N-04D	×
N-05D	×	
N-06D	×	
N-07D	×	
M	M702iS	○
P	P-07A	○
	P-01B	○
	P-04B	×
	P-06B	×
	P-03C	×
	P-05C	○
	P-07C	×
	P-01D	×
	P-02D	×
	P-04D	×
	P-05D	×
	P-06D	×
	P-903i	○
	P-906i	○
	GALAXY S (SC-02B)	×

au

分類	機種	Open Info
A	iPhone4S	×
	iPhone5	×
CA	CA005	○
	CA006	○
	CA007	○
	G'zOne TYPE-X	○
	ISW11CA	×
	W63CA	○
	F001	○
F	ISW11F	×
	ISW13F	×
	IS12F	×
H	beskey	○
HT	ISW11HT	×
	ISW12HT	×
	ISW13HT	×
K	SA002	○
	K007	○
	K009	○
	K011	○
	ISW11K	×
	URBANO PROGRESSO	×
	IS11LG	×
M	ISW11M	×
	IS12M	×
N	IS11N	×
PT	IS06	×
	IS11PT	×
SH	SH001	○
	SH004	○
	SH007	○
	SH008	○
	SH009	○
	SH010	○
	SH011	○
	IS01	×
	IS03	×
	IS05	×
	IS12SH	×
	IS13SH	×
	IS14SH	×
	IS15SH	×
	ISW16SH	×
	IS17SH	×
	INFOBAR A01	×
	INFOBAR C01	×
	SHL21	×
	S	S001
S003		○
S004		○
S005		○
S006		○
S007		○
URBANO MOND		○
URBANO BARONE		○
URBANO AFFARE		○
G9		×
G11		○
IS11S		×
IS12S		×
Walkman Phone Premier3(SOY01)		○
SA	W63SA	○

SoftBank

分類	機種	Open Info	
A	iPhone3GS	×	
	iPhone4	×	
	iPhone4S	×	
	iPhone5	×	
DL	001DL	×	
	101DL	×	
F	101F	○	
HT	X06HT	×	
	X06HT II	×	
	001HT	×	
HW	007HW	×	
K	101K	×	
N	841N	×	
	001N	×	
	101N	×	
P	001P	○	
	003P	×	
	101P	×	
	102P	×	
	103P	×	
	930P	○	
	941P	×	
	942P	×	
	SC	941SC	×
	SH	001SH	○
002SH		○	
003SH		○	
004SH		○	
005SH		○	
006SH		○	
007SH		○	
009SH		○	
812SH		○	
841SH		○	
842SH		○	
933SH		○	
934SH		×	
942SH		○	
944SH		○	
945SH		○	
DM007SH		○	
DM008SH		○	
DM009SH		○	
841SHs		○	
DM010SH		○	
DM011SH		○	
DM012SH		○	
101SH	○		
102SH	×		
102SH II	×		
103SH	○		
104SH	×		
106SH	×		
107SH	○		
108SH	×		
109SH	○		
Z	003Z	×	
	008Z	×	
	009Z	×	

SC	GALAXY Tab (SC-01C)	x
	GALAXY S II (SC-02C)	x
	GALAXY S II LTE (SC-03D)	x
	GALAXY NEXUS (SC-04D)	x
	SC-05D	x
	SC-06D	x
SH	SH-01B	○
	SH-02B	○
	SH-07B	x
	SH-10B	x
	SH-01C	○
	SH-03C	x
	SH-05C	○
	SH-06C	○
	SH-10C	○
	SH-12C	x
	SH-13C	x
	SH-01D	x
	SH-02D	x
	SH-03D	○
	SH-04D	x
	SH-05D	○
	SH-06D	x
	SH-07D	x
	SH-09D	x
	SH-01E	x
S	Xperia (SO-01B)	x
	Xperia arc (SO-01C)	x
	Xperia acro (SO-02C)	x
	Xperia ray (SO-03C)	x
	Xperia PLAY (SO-01D)	x
	SO-02D	x
	Xperia acro HD (SO-03D)	x
	SO-04D	x
	SO-01E	x
T	T-01B	x
	T-01C	x
	T-01D	x
	T-02D	x

SC	ISW11SC	x
T	T004	○
	T005	○
	T006	○
	T007	○
	T008	○
	LIGHT POOL	○
	X-RAY	○
	IS04	x
	IS11T	x
	W61T	○

NR-MZ60シリーズ

◆OpenInfoサービス対応機種一覧

docomo

分類	機種	Open Info
F	F-12C	×
	F-02D	○
	F-03D	×
	F-04D	○
	F-05D	×
	F-07D	×
	F-08D	×
	F-09D	×
	F-10D	×
	F-12D	×
	F-01E	○
	F-04E	×
L	L-01D	×
	L-02D	×
	L-05D	×
	L-06D	×
	L-01E	×
N	N-02C	○
	N-04C	×
	N-01D	×
	N-02D	×
	N-04D	×
	N-06D	×
	N-07D	×
P	P-07A	○
	P-01D	×
	P-02D	×
	P-04D	×
	P-05D	×
	P-06D	×
	P-07C	×
SC	GALAXY S II LTE (SC-03D)	×
	GALAXY NEXUS (SC-04D)	×
	SC-05D	×
	SC-06D	×
SH	SH-13C	×
	SH-01D	×
	SH-02D	×
	SH-04D	×
	SH-05D	○
	SH-06D	×
	SH-07D	×
	SH-09D	×
	SH-01E	×
SH-813SH	○	
S	SO-02C	×
	SO-03C	×
	SO-01D	×
	SO-02D	×
	SO-03D	×
	SO-04D	×
	SO-01E	×
T	T-01D	×
	T-02D	×

au

分類	機種	Open Info
A	iPhone4S	×
	iPhone5	×
CA	G'zOne TYPE-X	○
F	ISW11F	×
	IS12F	×
	ISW13F	×
HTC	ISW12HT	×
	ISW13HT	×
K	ISW11K	×
	K011	○
	URBANO PROGRESSO	×
L	IS11LG	×
M	ISW11M	○
	IS12M	×
N	IS11N	×
PT	IS11PT	×
S	S007	○
	IS11S	×
	IS12S	×
	URBANO AFFARE	○
	Walkman Phone Premier3(SOY01)	○
SC	ISW11SC	×
SH	SH001	○
	IS13SH	×
	IS14SH	×
	IS15SH	×
	IS17SH	×
	ISW16SH	×
	INFOBAR A01	×
	INFOBAR C01	×
SHL21	×	
T	T004	×
	IS11T	×

SoftBank

分類	機種	Open Info
A	iPhone4S	×
	iPhone5	×
DELL	101DL	×
F	101F	○
HW	007HW	×
K	101K	×
N	101N	×
P	003P	×
	101P	×
	102P	×
	103P	×
SH	009SH	○
	101SH	○
	102SH	×
	102SH II	×
	103SH	○
	104SH	×
	106SH	×
	107SH	○
	108SH	×
	109SH	○
	813SH	○
	DM010SH	○
	DM011SH	○
DM012SH	○	
Z	008Z	×
	009Z	×