Sales and Service

Notice of Corrections to Mitsubishi General-Purpose AC Servo MR-J3-B Safety SERVO AMPLIFIER INSTRUCTION MANUAL Connection Diagram


Thank you for your continued patronage of the Mitsubishi general-purpose AC servo. Some errors were found in the MR-J3-B Safety SERVO AMPLIFIER INSTRUCTION MANUAL, in which the connection diagrams are explained. The servo amplifier could be damaged if the connection is mistaken. Please check the following details, and pay special attention to the connections.

1. Target Manual

Manual name	No Rev.	Relevant pages
MR-J3-B Safety SERVO AMPLIFIER INSTRUCTION MANUAL	SH030084-C	15-9, 15-10

2. Table of Errata

The signal name in connection diagrams is changed to as follows. STOF2 \rightarrow TOF1, STOF1 \rightarrow TOF2

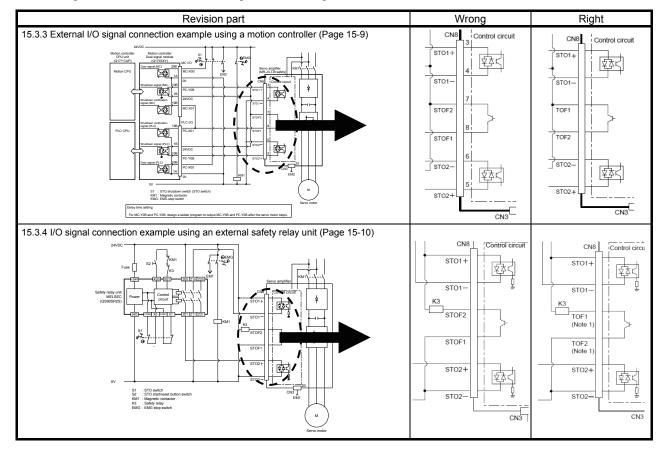

3. Publication of Revised Manuals

Technical material in which the corresponding sections have been corrected has been published as shown below.

Manual name	No Rev.	Revision timing
MR-J3-B Safety SERVO AMPLIFIER INSTRUCTION MANUAL	SH030084-D	Sep. 2012

Date of issue	November 2012	Title	Notice of Corrections to Mitsubishi General-Purpose AC Servo MR-J3-B Safety SERVO AMPLIFIER INSTRUCTION MANUAL Connection Diagram	Mitsubishi Electric Corp., Nagoya Works 5-1-14 Yada-minami, Higashi-ku, Nagoya 461-8670 Tel.: +81 (52) 721-2111 Main line
---------------------	------------------	-------	--	---