

Programmable Controller

Transition from MELSEC-A/QnA (Large Type) Series to MELSEC iQ-R Series Handbook

SAFETY PRECAUTIONS

(Read these precautions before using this product.)

Before using MELSEC iQ-R series programmable controllers, please read the manuals for the product and the relevant manuals introduced in those manuals carefully, and pay full attention to safety to handle the product correctly. In this manual, the safety precautions are classified into two levels: "NARNING" and "NARNING".

WARNING

Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.



Indicates that incorrect handling may cause hazardous conditions, resulting in minor or moderate injury or property damage.

Under some circumstances, failure to observe the precautions given under "ACAUTION" may lead to serious consequences.

Observe the precautions of both levels because they are important for personal and system safety.

Make sure that the end users read this manual and then keep the manual in a safe place for future reference.

/ WARNING

- Configure safety circuits external to the programmable controller to ensure that the entire system
 operates safely even when a fault occurs in the external power supply or the programmable controller.
 Failure to do so may result in an accident due to an incorrect output or malfunction.
 - (1) Emergency stop circuits, protection circuits, and protective interlock circuits for conflicting operations (such as forward/reverse rotations or upper/lower limit positioning) must be configured external to the programmable controller.
 - (2) When the programmable controller detects an abnormal condition, it stops the operation and all outputs are:
 - Turned off if the overcurrent or overvoltage protection of the power supply module is activated.
 - Held or turned off according to the parameter setting if the self-diagnostic function of the CPU module detects an error such as a watchdog timer error.
 - (3) All outputs may be turned on if an error occurs in a part, such as an I/O control part, where the CPU module cannot detect any error. To ensure safety operation in such a case, provide a safety mechanism or a fail-safe circuit external to the programmable controller.
 - (4) Outputs may remain on or off due to a failure of a component such as a relay and transistor in an output circuit. Configure an external circuit for monitoring output signals that could cause a serious accident.
- In an output circuit, when a load current exceeding the rated current or an overcurrent caused by a load short-circuit flows for a long time, it may cause smoke and fire. To prevent this, configure an external safety circuit, such as a fuse.
- Configure a circuit so that the programmable controller is turned on first and then the external power supply. If the external power supply is turned on first, an accident may occur due to an incorrect output or malfunction.
- For the operating status of each station after a communication failure, refer to manuals relevant to the network. Incorrect output or malfunction due to a communication failure may result in an accident.
- When connecting an external device with a CPU module or intelligent function module to modify data of a running programmable controller, configure an interlock circuit in the program to ensure that the entire system will always operate safely. For other forms of control (such as program modification, parameter change, forced output, or operating status change) of a running programmable controller, read the relevant manuals carefully and ensure that the operation is safe before proceeding. Improper operation may damage machines or cause accidents.

MARNING

- Especially, when a remote programmable controller is controlled by an external device, immediate action cannot be taken if a problem occurs in the programmable controller due to a communication failure. To prevent this, configure an interlock circuit in the program, and determine corrective actions to be taken between the external device and CPU module in case of a communication failure.
- Do not write any data to the "system area" and "write-protect area" of the buffer memory in the module. Also, do not use any "use prohibited" signals as an output signal from the CPU module to each module. Doing so may cause malfunction of the programmable controller system. For the "system area", "write-protect area", and the "use prohibited" signals, refer to the user's manual for the module used.
- If a communication cable is disconnected, the network may be unstable, resulting in a communication failure of multiple stations. Configure an interlock circuit in the program to ensure that the entire system will always operate safely even if communications fail. Incorrect output or malfunction due to a communication failure may result in an accident.
- To maintain the safety of the programmable controller system against unauthorized access from external devices via the network, take appropriate measures. To maintain the safety against unauthorized access via the Internet, take measures such as installing a firewall.

[Precautions for using digital-analog converter modules]

 Analog outputs may remain on due to a failure of the module. Configure an external interlock circuit for output signals that could cause a serious accident.

[Precautions for using high-speed counter modules]

Outputs may remain on or off due to a failure of a transistor for external output. Configure an external
circuit for monitoring output signals that could cause a serious accident.

[Precautions for using positioning modules]

- Configure safety circuits external to the programmable controller to ensure that the entire system operates safely even when a fault occurs in the external power supply or the programmable controller. Failure to do so may result in an accident due to an incorrect output or malfunction.
 - (1) Machine OPR (Original Point Return) is controlled by two kinds of data: an OPR direction and an OPR speed. Deceleration starts when the near-point dog signal turns on. If an incorrect OPR direction is set, motion control may continue without deceleration. To prevent machine damage caused by this, configure an interlock circuit external to the programmable controller.
 - (2) When the positioning module detects an error, the motion slows down and stops or the motion suddenly stops, depending on the stop group setting in parameter. Set the parameters to meet the specifications of the positioning control system used. In addition, set the OPR parameters and positioning data within the specified setting range.
 - (3) Outputs may remain on or off, or become undefined due to a failure of a component such as an insulation element and transistor in an output circuit, where the positioning module cannot detect any error. In a system where the incorrect outputs could cause a serious accident, configure an external circuit for monitoring output signals.
- An absolute position restoration by the positioning module may turn off the servo-on signal (servo off) for approximately 60ms + scan time, and the motor may run unexpectedly. If this causes a problem, provide an electromagnetic brake to lock the motor during absolute position restoration.

WARNING

[Precautions for using CC-Link system master/local modules]

■ To set a refresh device in the module parameters, select the device Y for the remote output (RY) refresh device. If a device other than Y, such as M and L, is selected, the CPU module holds the device status even after its status is changed to STOP. For how to stop data link, refer to the MELSEC iQ-R CC-Link System Master/Local Module User's Manual (Application).

[Precautions for using products in a Class I, Division 2 environment]

- Products with the Cl.I, DIV.2 mark on the rating plate are suitable for use in Class I, Division 2,
 Groups A, B, C and D hazardous locations, or nonhazardous locations only.
 - This mark indicates that the product is certified for use in the Class I, Division 2 environment where flammable gases, vapors, or liquids exist under abnormal conditions. When using the products in the Class I, Division 2 environment, observe the following to reduce the risk of explosion.
 - This device is open-type and is to be installed in an enclosure suitable for the environment and require a tool or key to open.
 - Warning Explosion Hazard Substitution of any component may impair suitability for Class I, Division 2.
 - Warning Explosion Hazard Do not disconnect equipment while the circuit is live or unless the area is known to be free of ignitable concentrations.
 - Do not open the cover of the CPU module and remove the battery unless the area is known to be nonhazardous.
 - All MELSEC iQ-R modules (except base modules) are to be connected to a base module only.

[Design Precautions]

- Do not install the control lines or communication cables together with the main circuit lines or power cables. Keep a distance of 100mm or more between them. Failure to do so may result in malfunction due to noise.
- During control of an inductive load such as a lamp, heater, or solenoid valve, a large current (approximately ten times greater than normal) may flow when the output is turned from off to on. Therefore, use a module that has a sufficient current rating.
- After the CPU module is powered on or is reset, the time taken to enter the RUN status varies depending on the system configuration, parameter settings, and/or program size. Design circuits so that the entire system will always operate safely, regardless of the time.
- Do not power off the programmable controller or reset the CPU module while the settings are being written. Doing so will make the data in the flash ROM and SD memory card undefined. The values need to be set in the buffer memory and written to the flash ROM and SD memory card again. Doing so also may cause malfunction or failure of the module.
- When changing the operating status of the CPU module from external devices (such as the remote RUN/STOP functions), select "Do Not Open by Program" for "Opening Method" of "Module Parameter". If "Open by Program" is selected, an execution of the remote STOP function causes the communication line to close. Consequently, the CPU module cannot reopen the line, and external devices cannot execute the remote RUN function.

CAUTION

[Precautions for using digital-analog converter modules]

- Power on or off the external power supply while the programmable controller is on. Failure to do so
 may result in incorrect output or malfunction.
- At on/off of the power or external power supply, or at the output range switching, a voltage may occur
 or a current may flow between output terminals for a moment. In this case, start the control after
 analog outputs become stable.

[Precautions for using high-speed counter modules]

 Do not install the control lines or communication cables together with the main circuit lines or power cables. Keep a distance of 150mm or more between them. Failure to do so may result in malfunction due to noise.

[Installation Precautions]

∱WARNING

• Shut off the external power supply (all phases) used in the system before mounting or removing the module. Failure to do so may result in electric shock or cause the module to fail or malfunction.

[Installation Precautions]

- Use the programmable controller in an environment that meets the general specifications. Failure to do so may result in electric shock, fire, malfunction, or damage to or deterioration of the product.
- To mount a module, place the concave part(s) located at the bottom onto the guide(s) of the base unit, and push in the module until the hook(s) located at the top snaps into place. Incorrect interconnection may cause malfunction, failure, or drop of the module.
- To mount a module with no module fixing hook, place the concave part(s) located at the bottom onto the guide(s) of the base unit, push in the module, and fix it with screw(s). Incorrect interconnection may cause malfunction, failure, or drop of the module.
- When using the programmable controller in an environment of frequent vibrations, fix the module with a screw.
- Tighten the screws within the specified torque range. Undertightening can cause drop of the screw, short circuit, or malfunction. Overtightening can damage the screw and/or module, resulting in drop, short circuit, or malfunction.
- When using an extension cable, connect it to the extension cable connector of the base unit securely.
 Check the connection for looseness. Poor contact may cause malfunction.
- When using an SD memory card, fully insert it into the SD memory card slot. Check that it is inserted completely. Poor contact may cause malfunction.
- Securely insert an extended SRAM cassette or a battery-less option cassette into the cassette
 connector of the CPU module. After insertion, close the cassette cover and check that the cassette is
 inserted completely. Poor contact may cause malfunction.
- Do not directly touch any conductive parts and electronic components of the module, SD memory card, extended SRAM cassette, battery-less option cassette, or connector. Doing so can cause malfunction or failure of the module.

[Wiring Precautions]

MARNING

- Shut off the external power supply (all phases) used in the system before installation and wiring. Failure to do so may result in electric shock or cause the module to fail or malfunction.
- After installation and wiring, attach a blank cover module (RG60) to each empty slot and an included extension connector protective cover to the unused extension cable connector before powering on the system for operation. Failure to do so may result in electric shock.

[Wiring Precautions]

- Individually ground the FG and LG terminals of the programmable controller with a ground resistance of 100 ohms or less. Failure to do so may result in electric shock or malfunction.
- Use applicable solderless terminals and tighten them within the specified torque range. If any spade solderless terminal is used, it may be disconnected when the terminal screw comes loose, resulting in failure.
- Check the rated voltage and signal layout before wiring to the module, and connect the cables correctly. Connecting a power supply with a different voltage rating or incorrect wiring may cause fire or failure.
- Connectors for external devices must be crimped or pressed with the tool specified by the manufacturer, or must be correctly soldered. Incomplete connections may cause short circuit, fire, or malfunction.
- Securely connect the connector to the module. Poor contact may cause malfunction.
- Do not install the control lines or communication cables together with the main circuit lines or power cables. Keep a distance of 100mm or more between them. Failure to do so may result in malfunction due to noise.
- Place the cables in a duct or clamp them. If not, dangling cables may swing or inadvertently be pulled, resulting in malfunction or damage to modules or cables.
 - In addition, the weight of the cables may put stress on modules in an environment of strong vibrations and shocks.
 - Do not clamp the extension cables with the jacket stripped. Doing so may change the characteristics of the cables, resulting in malfunction.
- Check the interface type and correctly connect the cable. Incorrect wiring (connecting the cable to an incorrect interface) may cause failure of the module and external device.
- Tighten the terminal screws or connector screws within the specified torque range. Undertightening
 can cause drop of the screw, short circuit, fire, or malfunction. Overtightening can damage the screw
 and/or module, resulting in drop, short circuit, fire, or malfunction.
- When disconnecting the cable from the module, do not pull the cable by the cable part. For the cable with connector, hold the connector part of the cable. For the cable connected to the terminal block, loosen the terminal screw. Pulling the cable connected to the module may result in malfunction or damage to the module or cable.
- Prevent foreign matter such as dust or wire chips from entering the module. Such foreign matter can cause a fire, failure, or malfunction.
- A protective film is attached to the top of the module to prevent foreign matter, such as wire chips, from entering the module during wiring. Do not remove the film during wiring. Remove it for heat dissipation before system operation.

[Wiring Precautions]

CAUTION

- Programmable controllers must be installed in control panels. Connect the main power supply to the power supply module in the control panel through a relay terminal block. Wiring and replacement of a power supply module must be performed by qualified maintenance personnel with knowledge of protection against electric shock.
- For Ethernet cables to be used in the system, select the ones that meet the specifications in the user's manual for the module used. If not, normal data transmission is not guaranteed.

[Precautions for using channel isolated RTD input modules]

• Individually ground the shielded cables of the programmable controller with a ground resistance of 100 ohms or less. Failure to do so may result in electric shock or malfunction.

[Precautions for using channel isolated thermocouple input modules]

- Individually ground the shielded cables of the programmable controller with a ground resistance of 100 ohms or less. Failure to do so may result in electric shock or malfunction.
- Do not place the module near a device that generates magnetic noise.

[Precautions for using high-speed counter modules]

- Do not install the control lines or communication cables together with the main circuit lines or power cables. Keep a distance of 150mm or more between them. Failure to do so may result in malfunction due to noise.
- Ground the shielded cables on the encoder side (relay box) with a ground resistance of 100 ohm or less. Failure to do so may cause malfunction.

[Precautions for using CC-Link system master/local modules]

Use Ver.1.10-compatible CC-Link dedicated cables in a CC-Link system. If not, the performance of the CC-Link system is not guaranteed. For the station-to-station cable length and the maximum overall cable length, follow the specifications in the MELSEC iQ-R CC-Link System Master/Local Module User's Manual (Startup). If not, normal data transmission is not guaranteed.

[Startup and Maintenance Precautions]

WARNING

- Do not touch any terminal while power is on. Doing so will cause electric shock or malfunction.
- Correctly connect the battery connector. Do not charge, disassemble, heat, short-circuit, solder, or throw the battery into the fire. Also, do not expose it to liquid or strong shock. Doing so will cause the battery to produce heat, explode, ignite, or leak, resulting in injury and fire.
- Shut off the external power supply (all phases) used in the system before cleaning the module or retightening the terminal screws, connector screws, or module fixing screws. Failure to do so may result in electric shock.

[Startup and Maintenance Precautions]

CAUTION

- When connecting an external device with a CPU module or intelligent function module to modify data of a running programmable controller, configure an interlock circuit in the program to ensure that the entire system will always operate safely. For other forms of control (such as program modification, parameter change, forced output, or operating status change) of a running programmable controller, read the relevant manuals carefully and ensure that the operation is safe before proceeding. Improper operation may damage machines or cause accidents.
- Especially, when a remote programmable controller is controlled by an external device, immediate action cannot be taken if a problem occurs in the programmable controller due to a communication failure. To prevent this, configure an interlock circuit in the program, and determine corrective actions to be taken between the external device and CPU module in case of a communication failure.
- Do not disassemble or modify the modules. Doing so may cause failure, malfunction, injury, or a fire.
- Use any radio communication device such as a cellular phone or PHS (Personal Handy-phone System) more than 25cm away in all directions from the programmable controller. Failure to do so may cause malfunction.
- Shut off the external power supply (all phases) used in the system before mounting or removing the module. Failure to do so may cause the module to fail or malfunction.
- Tighten the screws within the specified torque range. Undertightening can cause drop of the component or wire, short circuit, or malfunction. Overtightening can damage the screw and/or module, resulting in drop, short circuit, or malfunction.
- After the first use of the product, do not perform each of the following operations more than 50 times (IEC 61131-2/JIS B 3502 compliant).

Exceeding the limit may cause malfunction.

- Mounting/removing the module to/from the base unit
- Inserting/removing the extended SRAM cassette or battery-less option cassette to/from the CPU module
- Mounting/removing the terminal block to/from the module
- After the first use of the product, do not insert/remove the SD memory card to/from the CPU module more than 500 times. Exceeding the limit may cause malfunction.
- Do not touch the metal terminals on the back side of the SD memory card. Doing so may cause malfunction or failure of the module.
- Do not touch the integrated circuits on the circuit board of an extended SRAM cassette or a batteryless option cassette. Doing so may cause malfunction or failure of the module.
- Do not drop or apply shock to the battery to be installed in the module. Doing so may damage the battery, causing the battery fluid to leak inside the battery. If the battery is dropped or any shock is applied to it, dispose of it without using.
- Startup and maintenance of a control panel must be performed by qualified maintenance personnel with knowledge of protection against electric shock. Lock the control panel so that only qualified maintenance personnel can operate it.
- Before handling the module, touch a conducting object such as a grounded metal to discharge the static electricity from the human body. Failure to do so may cause the module to fail or malfunction.

[Operating Precautions]

CAUTION

- When changing data and operating status, and modifying program of the running programmable controller from an external device such as a personal computer connected to an intelligent function module, read relevant manuals carefully and ensure the safety before operation. Incorrect change or modification may cause system malfunction, damage to the machines, or accidents.
- Do not power off the programmable controller or reset the CPU module while the setting values in the buffer memory are being written to the flash ROM in the module. Doing so will make the data in the flash ROM and SD memory card undefined. The values need to be set in the buffer memory and written to the flash ROM and SD memory card again. Doing so can cause malfunction or failure of the module.

[Precautions for using positioning modules]

- Note that when the reference axis speed is specified for interpolation operation, the speed of the partner axis (2nd, 3rd, or 4th axis) may exceed the speed limit value.
- Do not go near the machine during test operations or during operations such as teaching. Doing so may lead to injuries.

[Disposal Precautions]

CAUTION

- When disposing of this product, treat it as industrial waste.
- When disposing of batteries, separate them from other wastes according to the local regulations.

[Transportation Precautions]

- When transporting lithium batteries, follow the transportation regulations.
- The halogens (such as fluorine, chlorine, bromine, and iodine), which are contained in a fumigant used for disinfection and pest control of wood packaging materials, may cause failure of the product. Prevent the entry of fumigant residues into the product or consider other methods (such as heat treatment) instead of fumigation. The disinfection and pest control measures must be applied to unprocessed raw wood.

CONDITIONS OF USE FOR THE PRODUCT

- (1) Mitsubishi programmable controller ("the PRODUCT") shall be used in conditions;
 - i) where any problem, fault or failure occurring in the PRODUCT, if any, shall not lead to any major or serious accident; and
 - ii) where the backup and fail-safe function are systematically or automatically provided outside of the PRODUCT for the case of any problem, fault or failure occurring in the PRODUCT.
- (2) The PRODUCT has been designed and manufactured for the purpose of being used in general industries.

 MITSUBISHI SHALL HAVE NO RESPONSIBILITY OR LIABILITY (INCLUDING, BUT NOT LIMITED TO ANY AND ALL RESPONSIBILITY OR LIABILITY BASED ON CONTRACT, WARRANTY, TORT, PRODUCT LIABILITY) FOR ANY INJURY OR DEATH TO PERSONS OR LOSS OR DAMAGE TO PROPERTY CAUSED BY the PRODUCT THAT ARE OPERATED OR USED IN APPLICATION NOT INTENDED OR EXCLUDED BY INSTRUCTIONS, PRECAUTIONS, OR WARNING CONTAINED IN MITSUBISHI'S USER, INSTRUCTION AND/OR SAFETY MANUALS, TECHNICAL BULLETINS AND GUIDELINES FOR the PRODUCT.

("Prohibited Application")

Prohibited Applications include, but not limited to, the use of the PRODUCT in;

- Nuclear Power Plants and any other power plants operated by Power companies, and/or any other cases in which the public could be affected if any problem or fault occurs in the PRODUCT.
- Railway companies or Public service purposes, and/or any other cases in which establishment of a special quality assurance system is required by the Purchaser or End User.
- Aircraft or Aerospace, Medical applications, Train equipment, transport equipment such as Elevator and Escalator, Incineration and Fuel devices, Vehicles, Manned transportation, Equipment for Recreation and Amusement, and Safety devices, handling of Nuclear or Hazardous Materials or Chemicals, Mining and Drilling, and/or other applications where there is a significant risk of injury to the public or property.

Notwithstanding the above restrictions, Mitsubishi may in its sole discretion, authorize use of the PRODUCT in one or more of the Prohibited Applications, provided that the usage of the PRODUCT is limited only for the specific applications agreed to by Mitsubishi and provided further that no special quality assurance or fail-safe, redundant or other safety features which exceed the general specifications of the PRODUCTs are required. For details, please contact the Mitsubishi representative in your region.

INTRODUCTION

Thank you for purchasing the Mitsubishi Electric MELSEC iQ-R series programmable controllers.

This document describes the system configuration, specifications, installation, wiring, maintenance, and inspection of MELSEC iQ-R series programmable controllers.

Before using this product, please read this document and the relevant manuals carefully and develop familiarity with the functions and performance of the MELSEC iQ-R series programmable controller to handle the product correctly.

When applying the program and circuit examples provided in this document to an actual system, ensure the applicability and confirm that it will not cause system control problems.

Please make sure that the end users read this document.

Specifications are subject to change without notice.

CONTENTS

| SAFE | TY PRECAUTIONS | 1 |
|-------|--|-----|
| CONE | DITIONS OF USE FOR THE PRODUCT | |
| INTRO | ODUCTION | |
| GENE | ERIC TERMS USED IN THIS DOCUMENT | 14 |
| СНА | APTER 1 OVERVIEW | 15 |
| 1.1 | Considerations Before Selecting Alternative Models for Replacement | |
| 1.2 | Overview of the MELSEC iQ-R Series | |
| 1.3 | How to Replace the System from the MELSEC-A/QnA Series to the MELSEC iQ-R Series | s18 |
| СНА | APTER 2 CPU MODULE REPLACEMENT | 19 |
| 2.1 | Alternative Model List | 19 |
| 2.2 | Specification Comparison Table | 23 |
| 2.3 | Function Comparison Table | |
| 2.4 | Precautions for Replacement | 29 |
| | | |
| CHA | APTER 3 I/O MODULE REPLACEMENT | 31 |
| 3.1 | Alternative Model List | |
| 3.2 | Specification Comparison Tables | 43 |
| | Input modules | 43 |
| | Output modules | 117 |
| | I/O combined modules. | 189 |
| | Interrupt modules | 191 |
| | Blank cover modules | 195 |
| 3.3 | Precautions for Replacement | 196 |
| | Wiring | 196 |
| | Input modules | 196 |
| | Output modules | 197 |
| | Interrupt modules | 197 |
| | | 400 |
| СНА | APTER 4 POWER SUPPLY MODULE REPLACEMENT | 198 |
| 4.1 | Alternative Model List | 198 |
| 4.2 | Specification Comparison Tables | |
| 4.3 | Precautions for Replacement | 213 |
| СНА | PTER 5 BASE UNIT AND EXTENSION CABLE REPLACEMENT | 214 |
| 5.1 | Alternative Model Lists | 214 |
| | Base units | 214 |
| | Extension cables | 215 |
| 5.2 | Specification Comparison Tables | 216 |
| | Base units | 216 |
| | Extension cables | 222 |
| 5.3 | Precautions for Replacement | 223 |
| | Base units | 223 |
| | Extension cables | 223 |

| CHA | PTER 6 MEMORY AND BATTERY REPLACEMENT | 224 |
|------|--|-----|
| 6.1 | Alternative Model List | 224 |
| 6.2 | Precautions for Replacement | 226 |
| | | |
| CHA | PTER 7 ANALOG I/O MODULE REPLACEMENT | 227 |
| 7.1 | Alternative Model List | 227 |
| 7.2 | Specification Comparison Tables | 229 |
| | Analog input modules | 229 |
| | Analog output modules | 237 |
| | Temperature input modules | 251 |
| 7.3 | Function Comparison Tables | 254 |
| | Analog input modules | 254 |
| | Analog output modules | 255 |
| | Temperature input modules | 256 |
| 7.4 | Precautions for Replacement | 257 |
| | | |
| СНА | PTER 8 POSITIONING MODULE AND PULSE I/O MODULE REPLACEMENT | 258 |
| 8.1 | Alternative Model List | |
| 8.2 | Specification Comparison Tables | 259 |
| | Positioning modules | 259 |
| | High-speed counter modules | 262 |
| 8.3 | Function Comparison Tables | 268 |
| | Positioning modules | 268 |
| | High-speed counter modules | 271 |
| 8.4 | Precautions for Replacement | 272 |
| СНА | PTER 9 CONTROL NETWORK MODULE REPLACEMENT | 273 |
| 9.1 | Alternative Model List | 273 |
| 9.2 | Specification Comparison Tables | |
| | CC-Link system master/local modules | |
| | MELSECNET/10 network modules | |
| 9.3 | Function Comparison Tables | |
| | CC-Link system master/local modules | |
| | MELSECNET/10 network modules | |
| 9.4 | Precautions for Replacement | 287 |
| | CC-Link system master/local modules | |
| | MELSECNET/10 network modules | |
| | | |
| CHA | PTER 10 INFORMATION MODULE REPLACEMENT | 289 |
| 10.1 | Alternative Model List | 289 |
| 10.2 | Specification Comparison Tables | 290 |
| | Serial communication modules | 290 |
| | Ethernet interface modules | 296 |
| 10.3 | Function Comparison Tables | |
| | Computer link/serial communication modules | 299 |
| | Ethernet interface modules | |
| 10.4 | Precautions for Replacement | |
| | Computer link/serial communication modules | 303 |
| | Ethernet interface modules | 303 |

| CHA | PTER 11 PROJECT REPLACEMENT | 306 |
|------|---|-----|
| 11.1 | Replacement Using MELSEC-A/QnA -> MELSEC iQ-R Conversion Support Tool | 306 |
| | Instant check of where to correct. | 307 |
| 11.2 | Replacement Using GX Developer/GX Works2/GX Works3 | |
| 11.3 | Instruction Replacement | 320 |
| 11.4 | Parameter Replacement | 320 |
| 11.5 | Special Relay and Special Register Replacement | 320 |
| 11.6 | Precautions for Replacement | 321 |
| REVI | SIONS | |
| WAR | RANTY | |
| INFO | RMATION AND SERVICES | 326 |
| TRAD | DEMARKS | |

GENERIC TERMS USED IN THIS DOCUMENT

| Generic term | Description |
|--------------|--|
| ACPU | A generic term for the MELSEC-A series CPU modules |
| AnACPU | A generic term for the A2ACPU(-S1), A3ACPU, A2ACPUP21/R21, A2ACPUP21/R21-S1, and A3ACPUP21/R21 |
| AnNCPU | A generic term for the A1NCPU, A1NCPUP21/R21, A1NCPUP21-S3, A2NCPU(-S1), A2NCPUP21/R21, A2NCPUP21/R21-S1, A2NCPUP21-S3/S4, A3NCPU, A3NCPUP21/R21, and A3NCPUP21-S3 |
| AnUCPU | A generic term for the A2UCPU(-S1), A3UCPU, and A4UCPU |
| QnACPU | A generic term for the MELSEC-QnA series CPU modules |
| RCPU | A generic term for the MELSEC iQ-R series CPU modules |
| RnCPU | A generic term for the R00CPU, R01CPU, R02CPU, R04CPU, R08CPU, R16CPU, R32CPU, and R120CPU |

1 OVERVIEW

This document describes models to select for replacing modules from the MELSEC-A/QnA series to the MELSEC iQ-R series.

1.1 Considerations Before Selecting Alternative Models for Replacement

Some items need to be considered before replacing modules from the MELSEC-A/QnA series to the MELSEC iQ-R series.

The following are main items to be considered. Consider them sufficiently in advance.

(It is necessary to understand the existing system configuration before taking the items into consideration.)

Replacement methods and installation location

Whether some space can be reserved when adding a base unit at the replacement work.

Model selection (I/O module)

Whether a module whose specifications (rated input current and others) and functions are equivalent to that of the existing module exists or not in the MELSEC iQ-R series.

Whether using the existing external wiring or wiring newly.

Model selection (intelligent function module)

Whether the specifications of the replaced module and connection external device match or not.

Whether using the existing external wiring or wiring newly.

Model selection (control network module)

Whether MELSECNET can be replaced with CC-Link IE Control or CC-Link IE Field.

Whether a new communication cable installation has been considered or not at the replacement of the network.

Model selection (communication module)

Whether the communication target device is compatible with the MELSEC iQ-R series module commands in the communications using the MC protocol or not.

Whether the software (program) of the communication target device can be converted into the one supported by the MELSEC iQ-R series.

Use of existing programs

Whether using the programs in the existing system or creating a new program.

Whether the workload and cost of correction have been considered or not when using the existing programs of intelligent function modules and communication modules.

1.2 Overview of the MELSEC iQ-R Series

MELSEC iQ-R series modules equipped with the newly developed high-speed system bus significantly reduces the takt time. And with its high-accuracy motion control achieved by the multiple CPU high-speed transmission, the MELSEC iQ-R series is at the core of automation systems, helping to provide solutions to customers.

Revolutionary, next-generation controllers building a new era in automation

To succeed in highly competitive markets, it is important to build automation systems that ensure high productivity and consistent product quality.

The MELSEC iQ-R Series has been developed from the ground up based on common problems faced by customers and rationalizing them into seven key areas: Productivity, Engineering, Maintenance, Quality, Connectivity, Security and Compatibility. Mitsubishi Electric is taking a three-point approach to solving these problems: Reducing TCO^{*1}, increasing Reliability and Reusability of existing assets.

*1 Total Cost of Ownership

Process: High availability process control in a scalable automation solution

- · Extensive visualization and data acquisition
- · High availability across multiple levels
- · Integrated process control software simplifies engineering

Safety: System design flexibility with integrated safety control

- · Integrated generic and safety control
- · Consolidated network topology
- · Complies with international safety standards

Intelligence: Extensive data handling from shop floor to business process systems

- · Direct data collection and analysis
- · C/C++ based programming
- · Collect factory data in real-time
- · Expand features using third party partner applications

Productivity: Improve productivity through advanced performance/functionality

- · New high-speed system bus realizing shorter production cycle
- Super-high-accuracy motion control utilizing advanced multiple CPU features
- · Inter-modular synchronization resulting in increased processing accuracy

Engineering: Reducing development costs through intuitive engineering

- · Intuitive engineering environment covering the product development cycle
- · Simple point-and-click programming architecture
- Understanding globalization by multiple language support

Maintenance: Reduce maintenance costs/downtime with easier maintenance features

- · Visualize entire plant data in real-time
- · Extensive preventative maintenance functions embedded into modules

Quality: Reliable and trusted MELSEC product quality

- · Robust design ideal for harsh industrial environments
- · Improve and maintain actual manufacturing quality
- · Conforms to main international standards

Connectivity: Seamless network reduces system costs

- · Seamless connectivity within all levels of manufacturing
- High-speed and large data bandwidth ideal for large-scale control systems
- · Easy connection of third-party components utilizing device library

Security: Robust security that can be relied on

- · Protect intellectual property
- · Unauthorized access protection across distributed control network

Compatibility: Extensive compatibility with existing products

- Utilize existing assets while taking advantage of cutting-edge technology
- Compatible with most existing MELSEC-Q series modules

1.3 How to Replace the System from the MELSEC-A/QnA Series to the MELSEC iQ-R Series

This section describes how to replace the system from the MELSEC-A/QnA series to the MELSEC iQ-R series.

Model selection

Select a model to be replaced. For details, refer to the following.

Page 19 CPU MODULE REPLACEMENT to Page 273 CONTROL NETWORK MODULE REPLACEMENT

Project conversion

Convert the project used in the MELSEC-A/QnA series so that it can be used in the MELSEC iQ-R series. For details, refer to the following.

Page 306 PROJECT REPLACEMENT

2 CPU MODULE REPLACEMENT

2.1 Alternative Model List

This section lists alternative models of the MELSEC iQ-R series CPU modules in accordance with the program capacity, number of I/O points, and functions of the MELSEC-A/QnA series CPU modules.

Select models that best suit your application considering the scope of control of the MELSEC-A/QnA series CPU module currently used, as well as the system specifications and extensibility after replacement.

| Item | MELSEC-A/QnA series | MELSEC iQ-R series | Specification difference |
|------|---|--------------------|---|
| ACPU | A1NCPU A1NCPUP21 A1NCPUR21 A1NCPUP21-S3 *1 | R00CPU | (1) I/O control: Refresh/direct switching → Refresh only (2) Processing speed (LD instruction): For refresh, 1.0μs → 0.031μs (3) PC MIX value: 0.2 → 19 (4) Number of I/O points: 256 → 4096 (5) Number of I/O device points: 256 → 8192 (6) Program capacity: 6K steps → 10K steps (7) Number of file register points: 0K → 96K (8) Extension level: 1 → 7 (9) Memory: 4KRAM/4KROM/4KEROM → Program memory/built-in RAM/built-in ROM (10)Microcomputer program: Available → Not available (11)Others: Equipped with the power supply module → None*2 |
| | A2NCPU A2NCPUP21 A2NCPUR21 A2NCPUP21-S3 *1 | R01CPU | (1) I/O control: Refresh/direct switching → Refresh only (2) Processing speed (LD instruction): For refresh, 1.0μs → 0.031μs (3) PC MIX value: 0.2 → 19 (4) Number of I/O points: 512 → 4096 (5) Number of I/O device points: 512 → 8192 (6) Program capacity: 14K steps → 15K steps (7) Number of file register points: 4K → 96K (8) Extension level: 3 → 7 (9) Memory: Depending on a memory cassette → Program memory/built-in RAM/built-in ROM/SD memory card (10)Microcomputer program: Available → Not available |
| | A2NCPU-S1 A2NCPUP21-S1 A2NCPUR21-S1 A2NCPUP21-S4 | R01CPU | (1) I/O control: Refresh/direct switching → Refresh only (2) Processing speed (LD instruction): For refresh, 1.0μs → 0.031μs (3) PC MIX value: 0.2 → 19 (4) Number of I/O points: 1024 → 4096 (5) Number of I/O device points: 1024 → 8192 (6) Program capacity: 14K steps → 15K steps (7) Number of file register points: 4K → 96K (8) Extension level: 7 → 7 (9) Memory: Depending on a memory cassette → Program memory/built-in RAM/built-in ROM/SD memory card (10)Microcomputer program: Available → Not available |
| | A3NCPU A3NCPUP21 A3NCPUR21 A3NCPUP21-S3 *1 | R04CPU | (1) I/O control: Refresh/direct switching → Refresh only (2) Processing speed (LD instruction): For refresh, 1.0μs → 0.98ns (3) PC MIX value: 0.2 → 419 (4) Number of I/O points: 2048 → 4096 (5) Number of I/O device points: 2048 → 12288 (6) Program capacity: 30K steps × 2 → 40K steps (7) Number of file register points: 4K → 160K (8) Extension level: 7 → 7 (9) Memory: Depending on a memory cassette → Program memory/built-in RAM/built-in ROM/SD memory card (10)Microcomputer program: Available → Not available |
| | | R08CPU | (1) I/O control: Refresh/direct switching → Refresh only (2) Processing speed (LD instruction): For refresh, 1.0μs → 0.98ns (3) PC MIX value: 0.2 → 419 (4) Number of I/O points: 2048 → 4096 (5) Number of I/O device points: 2048 → 12288 (6) Program capacity: 30K steps × 2 → 80K steps (7) Number of file register points: 4K → 544K (8) Extension level: 7 → 7 (9) Memory: Depending on a memory cassette → Program memory/built-in RAM/built-in ROM/SD memory card (10)Microcomputer program: Available → Not available |

| Item | MELSEC-A/QnA series | MELSEC iQ-R series | Specification difference |
|------|---|--------------------|--|
| ACPU | A2ACPU A2ACPUP21 A2ACPUR21 A2ACPUP21-S3 *1 | R01CPU | (1) I/O control: Refresh/direct switching → Refresh only (2) Processing speed (LD instruction): For refresh, 0.2μs → 0.031μs (3) PC MIX value: 0.9 → 19 (4) Number of I/O points: 512 → 4096 (5) Number of I/O device points: 512 → 8192 (6) Program capacity: 14K steps → 15K steps (7) Number of file register points: 8K → 96K (8) Extension level: 3 → 7 (9) Memory: Depending on a memory cassette → Program memory/built-in RAM/built-in ROM/SD memory card |
| | A2ACPU-S1 A2ACPUP21-S1 A2ACPUR21-S1 A2ACPUP21-S4 | R01CPU | (1) I/O control: Refresh/direct switching → Refresh only (2) Processing speed (LD instruction): For refresh, 0.2μs → 0.031μs (3) PC MIX value: 0.9 → 19 (4) Number of I/O points: 1024 → 4096 (5) Number of I/O device points: 1024 → 8192 (6) Program capacity: 14K steps → 15K steps (7) Number of file register points: 8K → 96K (8) Extension level: 7 → 7 (9) Memory: Depending on a memory cassette → Program memory/built-in RAM/built-in ROM/SD memory card |
| | A3ACPU A3ACPUP21 A3ACPUR21 A3ACPUP21-S3 *1 | R04CPU | (1) I/O control: Refresh/direct switching → Refresh only (2) Processing speed (LD instruction): For refresh, 0.15μs → 0.98ns (3) PC MIX value: 0.9 → 419 (4) Number of I/O points: 2048 → 4096 (5) Number of I/O device points: 2048 → 12288 (6) Program capacity: 30K steps × 2 → 40K steps (7) Number of file register points: 8K → 160K (8) Extension level: 7 → 7 (9) Memory: Depending on a memory cassette → Program memory/built-in RAM/built-in ROM/SD memory card |
| | | R08CPU | (1) I/O control: Refresh/direct switching → Refresh only (2) Processing speed (LD instruction): For refresh, 0.15μs → 0.98ns (3) PC MIX value: 0.9 → 419 (4) Number of I/O points: 2048 → 4096 (5) Number of I/O device points: 2048 → 12288 (6) Program capacity: 30K steps × 2 → 80K steps (7) Number of file register points: 8K → 544K (8) Extension level: 7 → 7 (9) Memory: Depending on a memory cassette → Program memory/built-in RAM/built-in ROM/SD memory card |
| | A2UCPU | R01CPU | (1) I/O control: Refresh/direct switching → Refresh only (2) Processing speed (LD instruction): For refresh, 0.2μs → 0.031μs (3) PC MIX value: 0.9 → 19 (4) Number of I/O points: 512 → 4096 (5) Number of I/O device points: 8192 → 8192 (6) Program capacity: 14K steps → 15K steps (7) Number of file register points: 8K → 96K (8) Extension level: 3 → 7 (9) Memory: Depending on a memory cassette → Program memory/built-in RAM/built-in ROM/SD memory card |
| | A2UCPU-S1 | R01CPU | (1) I/O control: Refresh/direct switching → Refresh only (2) Processing speed (LD instruction): For refresh, 0.2μs → 0.031μs (3) PC MIX value: 0.9 → 19 (4) Number of I/O points: 1024 → 4096 (5) Number of I/O device points: 8192 → 8192 (6) Program capacity: 14K steps → 15K steps (7) Number of file register points: 8K → 96K (8) Extension level: 3 → 7 (9) Memory: Depending on a memory cassette → Program memory/built-in RAM/built-in ROM/SD memory card |

| Item | MELSEC-A/QnA series | MELSEC iQ-R series | Specification difference |
|------|---------------------|--------------------|---|
| ACPU | A3UCPU | R04CPU | (1) I/O control: Refresh/direct switching → Refresh only (2) Processing speed (LD instruction): For refresh, 0.15μs → 0.98ns (3) PC MIX value: 1.2 → 419 (4) Number of I/O points: 2048 → 4096 (5) Number of I/O device points: 8192 → 12288 (6) Program capacity: 30K steps × 2 → 40K steps (7) Number of file register points: 8K → 160K (8) Extension level: 7 → 7 (9) Memory: Depending on a memory cassette → Program memory/built-in RAM/built-in ROM/SD memory card |
| | | R08CPU | (1) I/O control: Refresh/direct switching → Refresh only (2) Processing speed (LD instruction): For refresh, 0.15μs → 0.98ns (3) PC MIX value: 1.2 → 419 (4) Number of I/O points: 2048 → 4096 (5) Number of I/O device points: 8192 → 12288 (6) Program capacity: 30K steps × 2 → 80K steps (7) Number of file register points: 8K → 544K (8) Extension level: 7 → 7 (9) Memory: Depending on a memory cassette → Program memory/built-in RAM/built-in ROM/SD memory card |
| | A4UCPU | R08CPU | (1) I/O control: Refresh/direct switching → Refresh only (2) Processing speed (LD instruction): For refresh, 0.15μs → 0.98ns (3) PC MIX value: 1.2 → 419 (4) Number of I/O points: 4096 → 4096 (5) Number of I/O device points: 8192 → 12288 (6) Program capacity: 30K steps × 4 → 80K steps (7) Number of file register points: 8K → 544K (8) Extension level: 7 → 7 (9) Memory: Depending on a memory cassette → Program memory/built-in RAM/built-in ROM/SD memory card |
| | | R16CPU | (1) I/O control: Refresh/direct switching → Refresh only (2) Processing speed (LD instruction): For refresh, 0.15μs → 0.98ns (3) PC MIX value: 1.2 → 419 (4) Number of I/O points: 4096 → 4096 (5) Number of I/O device points: 8192 → 12288 (6) Program capacity: 30K steps × 4 → 160K steps (7) Number of file register points: 8K → 800K (8) Extension level: 7 → 7 (9) Memory: Depending on a memory cassette → Program memory/built-in RAM/built-in ROM/SD memory card |

| Item | MELSEC-A/QnA series | MELSEC iQ-R series | Specification difference |
|--------|---------------------|--------------------|---|
| QnACPU | Q2ACPU | R04CPU | (1) I/O control: Refresh only (2) Processing speed (LD instruction): For refresh, 0.2μs → 0.98ns (3) PC MIX value: 1.3 → 419 (4) Number of I/O points: 512 → 4096 (5) Number of I/O device points: 8192 → 12288 (6) Program capacity: 28K steps → 40K steps (7) Number of file register points: 1018K → 160K (when an extended SRAM cassette is used: 8352K maximum) (8) Extension level: 3 → 7 (9) Number of mountable memory cards: 2 → 1 |
| | Q2ACPU-S1 | R08CPU | (1) I/O control: Refresh only (2) Processing speed (LD instruction): For refresh, 0.2μs → 0.98ns (3) PC MIX value: 1.3 → 419 (4) Number of I/O points: 1024 → 4096 (5) Number of I/O device points: 8192 → 12288 (6) Program capacity: 60K steps → 80K steps (7) Number of file register points: 1018K → 544K (when an extended SRAM cassette is used: 8736K maximum) (8) Extension level: 7 → 7 (9)Number of mountable memory cards: 2 → 1 |
| | Q3ACPU | R16CPU | (1) I/O control: Refresh/direct switching → Refresh only (2) Processing speed (LD instruction): For refresh, 0.15μs → 0.98ns (3) PC MIX value: 1.8 → 419 (4) Number of I/O points: 2048 → 4096 (5) Number of I/O device points: 8192 → 12288 (6) Program capacity: 92K steps → 160K steps (7) Number of file register points: 1018K → 800K (when an extended SRAM cassette is used: 8992K maximum) (8) Extension level: 7 → 7 (9) Number of mountable memory cards: 2 → 1 |
| | Q4ACPU | R16CPU | (1) I/O control: Refresh/direct switching → Refresh only (2) Processing speed (LD instruction): For refresh, 0.075µs → 0.98ns (3) PC MIX value: 3.8 → 419 (4) Number of I/O points: 4096 → 4096 (5) Number of I/O device points: 8192 → 12288 (6) Program capacity: 124K steps → 160K steps (7) Number of file register points: 1018K → 800K (when an extended SRAM cassette is used: 8992K maximum) (8) Extension level: 7 → 7 (9) Number of mountable memory cards: 2 → 1 |

^{*1} Consider replacing the system on MELSECNET with a system on CC-Link IE Control or CC-Link IE Field.

^{*2} The A1NCPU is a CPU module that integrates the power supply module.

For the power supply module, refer to the following. (Page 211 A1NCPU (power supply part) and R62P)

2.2 Specification Comparison Table

 \bigcirc : Compatible, \triangle : Partly changed, \times : Incompatible, -: Not applicable

| Item | | MELSEC-A/QnA series | | MELSEC iQ-R series | Compatibility | Precautions |
|-----------------------------------|---------------------------------|--|---|--|---------------|-------------|
| | | ACPU | QnACPU | RnCPU | | |
| Control method | d | Stored program cyclic opera | tion | | 0 | |
| I/O control mode | | AnNCPU: Refresh mode or direct mode AnA/AnUCPU: Refresh mode (Direct access I/O is available by specifying direct access I/O (DX, DY).) | Refresh mode (Direct access I/O is available by specifying direct access I/O (DX, DY).) | | Δ | |
| Programming language | Sequence control language | Relay symbol language, logic symbol language, MELSAP-II (SFC) (except for the A1NCPU) | Relay symbol language, logic symbol language, MELSAP3 (SFC) | Ladder diagram (LD), sequential function chart (SFC), structured text (ST), function block diagram (FBD/LD) | Δ | *1 |
| Processing speed | Sequence instruction [LD] | AnNCPU: 1.0μs (for refresh) A2ACPU(-S1): 0.2 to 0.4μs A3ACPU: 0.15 to 0.3μs A2UCPU(-S1): 0.2μs A3U/A4UCPU: 0.15μs | Q2ACPU(-S1): 0.2μs Q3ACPU: 0.15μs Q4ACPU: 0.075μs | R00/R01CPU: 31.36ns R02CPU: 3.92ns R04/R08/R16CPU: 0.98ns | _ | |
| PC MIX value | | AnNCPU: 0.2 AnACPU: 0.9 AnUCPU: 1.2 | Q2ACPU(-S1): 1.3 Q3ACPU: 1.8 Q4ACPU: 3.8 | R00/R01CPU: 19 R02CPU: 146 R04/R08/R16CPU: 419 | 0 | |
| Constant scan | | 10 to 190ms (Setting available in increments of 10ms) | 5 to 2000ms (Setting available in increments of 5ms) | R00/R01/R02CPU: 0.5 to 2000ms (Setting available in increments of 0.1ms) R04/R08/R16CPU: 0.2 to 2000ms (Setting available in increments of 0.1ms) | 0 | |
| Memory capacity | | Capacity of the installed memory cassette AnNCPU: 448K bytes maximum AnACPU: 768K bytes maximum AnUCPU: 1024K bytes maximum | Capacity of the installed memory 2036K bytes maximum × 2 | Program memory: R00CPU: 40K bytes R01CPU: 60K bytes R02CPU: 80K bytes R04CPU: 160K bytes R08CPU: 320K bytes R16CPU: 640K bytes Memory card: Capacity of an SD memory card SD/SDHC memory card: 32G bytes maximum (except for the R00CPU) | _ | |
| Program Sequence capacity program | | A1NCPU: 6K steps A2N/A2A/A2UCPU(-S1): 14K steps A3N/A3A/A3UCPU: 30K × 2 steps A4UCPU: 30K × 4 steps | Q2ACPU: 28K steps Q2ACPU-S1: 60K steps Q3ACPU: 92K steps Q4ACPU: 124K steps | R00CPU: 10K steps R01CPU: 15K steps R02CPU: 20K steps R04CPU: 40K steps R08CPU: 80K steps R16CPU: 160K steps | 0 | |
| | Microcomputer program | AnNCPU: 58K bytes maximum AnA/AnUCPU: — | _ | | × | *2 |
| Number of I/O points | | A1NCPU: 256 A2N/A2A/A2UCPU: 512 A2N/A2A/A2UCPU-S1: 1024 A3N/A3A/A3UCPU: 2048 A4UCPU: 4096 | Q2ACPU: 512 Q2ACPU-S1: 1024, Q3ACPU: 2048, Q4ACPU: 4096 | 4096 | 0 | |

| Item | | MELSEC-A/QnA series | | MELSEC iQ-R series | Compatibility | Precautions |
|-------------------------|-----------------------|--|--|---|---------------|-------------|
| | | ACPU | QnACPU | RnCPU | | |
| Number of device points | Input [X] | A1NCPU: 256 A2N/A2A/A2UCPU: 512 A2N/A2A/A2UCPU-S1: 1024 A3N/A3A/A3UCPU: 2048 A4UCPU: 8192 | 8192 | R00/R01/R02CPU: 8192 R04/R08/R16CPU: 12288 | 0 | |
| | Output [Y] | A1NCPU: 256 A2N/A2A/A2UCPU: 512 A2N/A2A/A2UCPU-S1: 1024 A3N/A3A/A3UCPU: 2048 A4UCPU: 8192 | 8192 | R00/R01/R02CPU: 8192 R04/R08/R16CPU: 12288 | 0 | |
| | Internal relay [M] | AnNCPU: 1000 (Total 2048, shared by M/L/S) AnA/AnUCPU: 7144 (Total 8192, shared by M/L/S) | 8192 | R00/R01/R02CPU: 8192 R04/R08/R16CPU: 12288 | 0 | *3 |
| | Latch relay [L] | AnNCPU: 1048 (Total 2048, shared by M/L/S) AnA/AnUCPU: 1048 (Total 8192, shared by M/L/S) | 8192 | | 0 | *3 |
| | Step relay [S] | AnNCPU: 0 (Total 2048, shared by M/L/S) AnA/AnUCPU: 0 (Total 8192, shared by M/L/S) | 8192 | R00/R01/R02CPU: 8192 R04/R08/R16CPU: 16384 | 0 | *3 |
| | Annunciator [F] | AnNCPU: 256 AnA/AnUCPU: 2048 | 2048 | | 0 | *3 |
| | Edge relay [V] | _ | 2048 | | 0 | *3 |
| | Link relay [B] | AnNCPU: 1024 AnACPU: 4096 AnUCPU: 8192 | 8192 | | 0 | *3 |
| | Timer [T] | AnNCPU: 256 AnA/AnUCPU: 2048 | 2048 | R00/R01/R02CPU: 2048 R04/R08/R16CPU: 1024 (Timer [T]) + 1024 (Long timer [LT]) | 0 | *3 |
| | Counter [C] | AnNCPU: 256 AnA/AnUCPU: 1024 | 1024 | R00/R01/R02CPU: 1024 R04/R08/R16CPU: 512 (Counter [C]) + 512 (Long counter [LC]) | 0 | *3 |
| | Data register [D] | AnNCPU: 1024 AnACPU: 6144 AnUCPU: 8192 | 12288 | R00/R01/R02CPU: 12282 R04/R08/R16CPU: 18432 | 0 | *3 |
| | Link register [W] | AnNCPU: 1024 AnACPU: 4096 AnUCPU: 8192 | 8192 | | 0 | *3 |
| | File register [R] | 8192 | 32768 (1042432 maximum, by switching blocks) | The number of points specified in the [ZR] section can be used by switching blocks in increments of 32768 points. | 0 | *3 |
| | File register [ZR] | _ | 1042432 | R00/R01/R02CPU: 98304 R04/R08/R16CPU: Calculated by a formula.*4 (The maximum number of points varies depending on the model.) | 0 | *3 |
| | Accumulator [A] | 2 | _ | • | _ | *5 |
| | Index register [Z] | AnNCPU: 1 AnA/AnUCPU: 7 | 16 | 20 | 0 | *3 |
| | Index register [V] | AnNCPU: 1 AnA/AnUCPU: 7 | _ | • | _ | *6 |
| | Nesting [N] | 8 | 15 | 15 | 0 | |

| Item | | MELSEC-A/QnA series | | MELSEC iQ-R series | Compatibility | Precautions |
|-----------------------------------|----------------------------|--|--|---|---------------|-------------|
| | | ACPU | QnACPU | RnCPU | 1 | |
| Number of | Pointer [P] | 256 | 4096 | 8192 | 0 | *3 |
| device points | Interrupt pointer [I] | 32 | 48 | 1024 | 0 | |
| | Special relay [M/SM] | 256 | 2048 | 4096 | Δ | *7 |
| | Special register [D/SD] | 256 | 2048 | 4096 | Δ | *7 |
| | Link special relay [SB] | _ | 2048 | | 0 | *3 |
| | Link special register [SW] | _ | 2048 | | 0 | *3 |
| | Function input [FX] | _ | 16 | | 0 | |
| | Function output [FY] | _ | 16 | | 0 | |
| | Function register [FD] | _ | 5 | 5 points × 4 words | 0 | |
| Number of comments | Comment | 4032 maximum (only A1NCPU: 128) | 51200 maximum | Within memory capacity | 0 | |
| | Extended comment | 3968 maximum | _ | _ | _ | |
| Link direct dev | rice | _ | For MELSECNET/10 only Specification format: | Specified form: J□\X□, J□\Y□, J□\W□, J□\B□, J□\SW□, J□\SB□ | 0 | |
| Special function device | on module direct | _ | Specified form: U□\G□ | | 0 | |
| Latch (data ret power failure) | • | 1048 | 8192 | | 0 | |
| RUN/PAUSE of | contact | AnNCPU: One contact can be set up in X0 to FF for each of RUN and PAUSE. AnA/AnUCPU: One contact can be set up in X0 to 1FFF for each of RUN and PAUSE. | One contact can be set up in X0 to 1FFF for each of RUN and PAUSE. | R00/R01/R02CPU: One contact can be set up in X0 to 1FFF for each of RUN and PAUSE. R04/R08/R16CPU: One contact can be set up in X0 to 2FFF for each of RUN and PAUSE. | 0 | |
| Internal current (5VDC) | t consumption | A1NCPU: 0.53A A1NCPUP21(-S3): 1.23A A1NCPUP21: 1.63A A2NCPU(-S1): 0.73A A2NCPUP21(-S1/S3/S4): 1.38A A2NCPUR21(-S1): 1.78A A3NCPUR21(-S3): 1.55A A3NCPUP21(-S3): 1.55A A3NCPUP21: 1.95A A2ACPU(-S1): 0.4A A2ACPUP21(-S1): 1.4A A3ACPUP21(-S1): 1.4A A3ACPUP21(-S3): 1.1A A3ACPUP21(-S3): 1.1A A3ACPUP21: 1.66A A2UCPU(-S1): 0.4A A3U/A4UCPU: 0.5A | Q2ACPU/Q2ACPU-S1/ Q3ACPU: 0.4A Q4ACPU: 0.9A | 0.67A | | |
| External dimer | nsions | 250(H) × 79.5(W) × 121(D)mm (only A1NCPU: 250(H) × 135(W) × 121(D)mm) | 250(H) × 79.5(W) × 121(D)mm | 106(H) × 27.8(W) × 110(D)mm | _ | |

| Item | MELSEC-A/QnA series | | MELSEC iQ-R series | Compatibility | Precautions |
|--------|--|--------|--------------------|---------------|-------------|
| | ACPU | QnACPU | RnCPU | | |
| Weight | A1NCPU: 1.45kg A1NCPUP21(-S3)/ A1NCPUP21: 1.75kg A2NCPU(-S1): 0.62kg A2NCPUP21(-S1): 0.92kg A3NCPUR21(-S1): 0.92kg A3NCPUP21(-S3)/ A3NCPUP21(-S3)/ A3NCPUR21: 0.95kg A2ACPU(-S1)/A3ACPU: 0.7kg A2ACPUP21(-S1)/ A3ACPUP21(-S1)/ A3ACPUR21: 1.0kg A3ACPUAR21: 1.0kg A2UCPU(-S1): 0.5kg A3U/A4UCPU: 0.6kg | 0.80kg | 0.20kg | | |

^{*1} The relay symbol language is equivalent to the ladder diagram (LD).

α: <Capacity of the R**CPU> (R04CPU: 160K words, R08CPU: 544K words, R16CPU: 800K words)

 β : Capacity of the extended SRAM cassette

The value must be in the following range.

File register file storage area $\leq [\alpha + \beta]$

- *5 This device is converted to the special register area of SD4095 automatically when the project is converted.
- *6 The device "V" is used as the edge relay in the RnCPU.
- *7 The special relay areas of M9000 or later are replaced with those of SM, and the special register areas of D9000 or later are replaced with those of SD in the RnCPU.

^{*2} The RnCPU does not support the microcomputer program. Consider replacing it with other programs such as the sequence program.

^{*3} The number of device points to use can be changed with the engineering tool.

^{*4} The maximum value is $[\alpha + \beta]$.

2.3 Function Comparison Table

○: Compatible/function available, △: Partly changed, ×: Incompatible/function not available, —: Not applicable

| Function | | MELSEC-A/QnA series | | MELSEC iQ-R series | Precautions |
|---|--|----------------------------|--------|--------------------|---|
| | | ACPU | QnACPU | RnCPU | |
| Constant scan | Executes the sequence program at constant time intervals regardless of the processing time of the program. | 0 | 0 | Δ | Set this function with the special register (D9020) for the ACPU/QnACPU, and with parameters for the RnCPU. |
| Latch (data retention during power failure) | Holds the data of devices in the event of power OFF, resetting, and a momentary power failure longer than the allowable momentary power failure period. | 0 | 0 | 0 | |
| Remote RUN/STOP | Executes the remote RUN/STOP using external switches and peripheral devices. | 0 | 0 | 0 | |
| PAUSE | Stops operations while holding the output status. | 0 | 0 | Δ | The RnCPU transitions to the PAUSE state by turning on the PAUSE contact only, while the ACPU/QnACPU transitions to the PAUSE state by turning on both the PAUSE contact and the special relay M9040. |
| Interrupt processing | Executes the program that corresponds to the cause when an interrupt cause occurs. | 0 | 0 | 0 | |
| Microcomputer mode | Executes various controls and operations over utility programs and user created microcomputer programs stored in the microcomputer program area by calling them from the sequence program. | AnNCPU: ○ AnA/AnUCPU: × | × | × | The RnCPU does not support the microcomputer program. Consider replacing it with a sequence program. |
| ERROR LED display priority ranking | Sets for ON/OFF of ERROR LED at the occurrence of error. | AnNCPU: × AnA/AnUCPU: ○ | 0 | 0 | |
| File management | Manages all data such as parameters, sequence programs, device comments, file registers, as files. | × | 0 | 0 | Memory configuration and data to be stored differ. |
| Structured program | Selects a suitable execution type for program application, and divides each program by designer, process or others. | × | 0 | 0 | |
| I/O assignment | Performs the I/O assignment to any individual module regardless of its mounted position. | × | 0 | 0 | |
| ROM operation | Enables operation with parameters and programs stored in ROMs in order not to lose user programs due to battery exhaustion. | 0 | 0 | 0 | With the RnCPU, the ROM operation is not required since the program memory is the flash ROM. |
| Data protection function (system protect, keyword registration/ password registration) | Prohibits reading/writing from peripheral devices to programs and comments in the memory cassettes, the memory card, and built-in memory of a CPU module. | 0 | 0 | Δ | Programs can be protected from read/write using passwords in the RnCPU, while parameters/programs in the user memory can be protected from read/write using keywords in the ACPU/QnACPU. |
| Initial device value | Sets an initial value of device memory, file registers, and special function modules when the CPU module is placed in RUN status. | × | 0 | 0 | Memory configuration and data to be stored differ. |


| Function | | MELSEC-A/QnA series | | MELSEC iQ-R series | Precautions |
|--|--|----------------------------|-------------|--------------------|--|
| | | ACPU QnACPU | | RnCPU | |
| Output status setting at changing from STOP to RUN | Sets the output (Y) status at the change from STOP to RUN to reoutputting data before STOP or outputting data after the operation execution. | 0 | 0 | 0 | |
| Number of general data processing | Sets the number of general data processing executed in one END operation. | × | 0 | 0 | |
| Clock function | The CPU module incorporates a clock, which can be read/written. The clock data consists of year, month, day, hour, minute, second and a day of the week. | 0 | 0 | Δ | The RnCPU uses 4-digit year of the western calendar while the ACPU/QnACPU uses the lower 2-digit year. |
| Write during RUN | Changes (writes to) programs when the CPU module is in the RUN status. | 0 | 0 | 0 | Setting the reserved area for online change is required for the RnCPU. |
| Status latch | Stores the data of all devices in a memory cassette or a memory card at the occurrence of an error for monitoring by a peripheral. | (except for the A1NCPU) | O*1 | × | The status latch function cannot be used in the RnCPU. |
| Sampling trace | Stores the data of specified devices in a memory cassette or a memory card at the specified intervals for monitoring by a peripheral. | (except for the A1NCPU) | 0 | × | The sampling trace function cannot be used in the RnCPU. Use the trigger logging in the data logging function instead. |
| Program trace | Collects the execution status of specified programs and steps, and stores them in a file. | × | O*1 | × | The program trace function cannot be used in the RnCPU. |
| Simulation function | Detaches I/O modules or special modules from the CPU module and test-operates the program upon the step operation. | × | <u></u> ^*1 | Δ | Use the simulation function of the GX Works3 instead. |
| Step operation | Stops the execution of a sequence program at the specified step. | 0 | 0 | × | The step operation function cannot be used in the RnCPU. |
| Execution time measurement (Program list monitor, scan time measurement) | Measures the operation time for each program. | × | 0 | 0 | |
| Module access interval reading | Monitors the access interval of special function modules or peripheral devices. | × | 0 | 0 | |
| Off-line switch | Skips the devices used for OUT instruction in the operation processing of sequence program. | AnNCPU: ○ AnA/AnUCPU: × | × | × | The off-line switch function cannot be used in the RnCPU. Use the external input/output forced on/off function of the RnCPU instead. |
| Online I/O module replacement | Enables I/O modules to be replaced while the CPU is in RUN. | 0 | 0 | Δ | To use the online module change function of the RnCPU, use the Process CPU. |
| Self-diagnostics | Diagnoses whether any error has occurred, detects errors, and stops the CPU module, etc. | 0 | 0 | 0 | Error codes differ from the ones of ACPU and QnACPU. |
| Error history | Stores errors detected by the diagnostics function into the CPU module. Error details can be monitored from peripherals. | AnNCPU: × AnA/AnUCPU: ○ | 0 | 0 | |

^{*1} SW□IVD/NX-GPPQ is required. These functions are not applicable to GX Developer. (The production of SW□IVD/NX-GPPQ was discontinued.)

2.4 Precautions for Replacement

Memory configuration

The Memory configuration differs between the MELSEC-A/QnA series CPU module and the MELSEC iQ-R series CPU module. Depending on the capacity and application of the memory before replacement, consider which memory to use and whether to use a memory card.

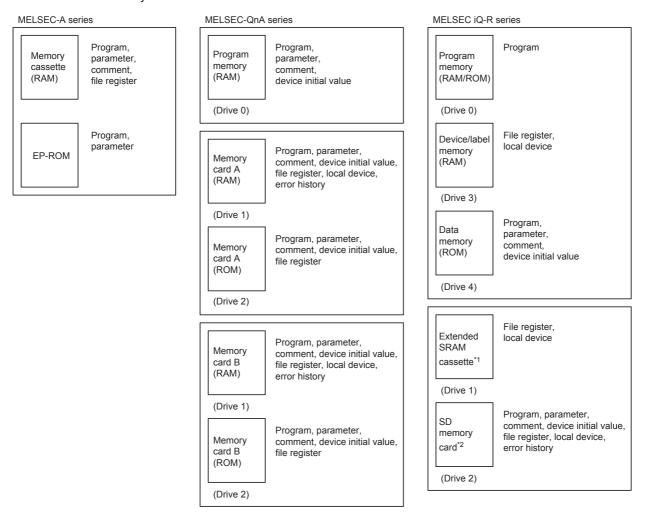

- *1 The R00CPU, R01CPU, and R02CPU do not support the extended SRAM cassette.
- *2 The R00CPU does not support SD memory cards.

Write during RUN

Before executing the online change function (the write during RUN function) in the MELSEC iQ-R series CPU module, reserve the area in advance for the program size that will be increased.

The default reserved area for online change is 500 steps (2000 bytes).

Parameters

Set parameters, such as the program setting, that are specific to each CPU module in the CPU parameter. In addition, set the module parameter to use the built-in Ethernet function of the CPU module, and set the memory card parameter to perform boot operation.

Sampling trace

The sampling trace function cannot be used in the RCPU.

Use the trigger logging of the data logging function instead. Note that an SD memory card is required to store the data because the CPU built-in memory cannot be used as data storage destination.

Password and keyword

In the RCPU, passwords are used to protect data such as programs from read/write, while in the ACPU/QnACPU, keywords are used.



For details on these precautions, refer to the following.

MELSEC iQ-R Module Configuration Manual

MELSEC iQ-R CPU Module User's Manual (Startup)

3 I/O MODULE REPLACEMENT

3.1 Alternative Model List

This section lists alternative models of the MELSEC iQ-R series I/O modules in accordance with the specifications of the MELSEC-A/QnA series I/O modules.

Select models that best suit your application considering the specifications of the MELSEC-A/QnA series I/O module currently used.

| Item | MELSEC-A/QnA series | MELSEC iQ-R series | Specification difference |
|--------------|---------------------|--------------------|--|
| Input module | AX10 | RX10 | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Rated input current (10mA → 8.2mA), ON current, OFF voltage/OFF current, and input impedance are changed. (5) Functions: Not changed (1) External wiring: Changed (An upgrade tool conversion adapter can be |
| | | | used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Rated input current (11mA → 8.2mA), ON current, OFF voltage/OFF current, and input impedance are changed. (5) Functions: Not changed |
| | AX11 | RX10 | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Changed (2 modules are required.) (3) Programs: The number of occupied I/O points is changed (32 → 16 × 2 modules). The number of input points is changed (32 → 16 × 2 modules). (4) Specifications: Rated input current (10mA → 8.2mA), ON current, OFF voltage/OFF current, and input impedance are changed. (5) Functions: Not changed |
| | AX11EU | RX10 | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Changed (2 modules are required.) (3) Programs: The number of occupied I/O points is changed (32 → 16 × 2 modules). The number of input points is changed (32 → 16 × 2 modules). (4) Specifications: Rated input current (12mA → 8.2mA), ON voltage/ON current, OFF voltage/OFF current, and input impedance are changed. (5) Functions: Not changed |
| | AX20 | RX28 | (1) External wiring: Changed (2) Number of slots: Changed (2 modules are required.) (3) Programs: The number of occupied I/O points is changed (16 → 16 × 2 modules). The number of input points is changed (16 → 8 × 2 modules). (4) Specifications: ON voltage/ON current, OFF voltage/OFF current, and input impedance are changed. (5) Functions: Not changed |
| | AX20-UL | RX28 | (1) External wiring: Changed (2) Number of slots: Changed (2 modules are required.) (3) Programs: The number of occupied I/O points is changed (16 → 16 × 2 modules). The number of input points is changed (16 → 8 × 2 modules). (4) Specifications: ON voltage/ON current, OFF voltage/OFF current, and input impedance are changed. (5) Functions: Not changed |
| | AX21 | RX28 | (1) External wiring: Changed (2) Number of slots: Changed (4 modules are required.) (3) Programs: The number of occupied I/O points is changed (32 → 16 × 4 modules). The number of input points is changed (32 → 8 × 4 modules). (4) Specifications: ON voltage/ON current, OFF voltage/OFF current, and input impedance are changed. (5) Functions: Not changed |

| Item | MELSEC-A/QnA series | MELSEC iQ-R series | Specification difference |
|--------------|---------------------------------|--------------------|---|
| Input module | AX21EU | RX28 | (1) External wiring: Changed (2) Number of slots: Changed (4 modules are required.) (3) Programs: The number of occupied I/O points is changed (32 → 16 × 4 modules). The number of input points is changed (32 → 8 × 4 modules). (4) Specifications: ON voltage/ON current, OFF voltage/OFF current, and input impedance are changed. (5) Functions: Not changed |
| | AX31 (when 24VDC is used) | RX41C4 | (1) External wiring: Changed (Screw terminal block → 40-pin connector. An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Rated input current (8.5mA → 4mA), ON voltage/ON current, OFF voltage/OFF current, and input resistance are changed. (5) Functions: Not changed |
| | AX31 (when 12VDC is used) | RX71C4 | (1) External wiring: Changed (Screw terminal block → 40-pin connector. An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: ON voltage/ON current, OFF voltage/OFF current, and input resistance are changed. (5) Functions: Not changed |
| | AX31 (when 12/24VAC is used) | None | Commute and smooth the 12/24VAC externally before inputting to the RX41C4 (24VDC) or RX71C4 (5/12VDC). |
| | AX31-S1 | RX41C4 | (1) External wiring: Changed (Screw terminal block → 40-pin connector. An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Rated input current (8.5mA → 4mA), ON voltage/ON current, OFF voltage/OFF current, and input resistance are changed. (5) Functions: Not changed |
| | AX40 (when 24VDC is used) | RX40C7 | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Rated input current (Approx. 10mA → 7mA), ON voltage/ON current, OFF voltage/OFF current, and input resistance are changed. (5) Functions: Not changed |
| | AX40 (when 12VDC is used) | RX70C4 | External wiring: Changed (An upgrade tool conversion adapter can be used.*1) Number of slots: Not changed Programs: Not changed Specifications: ON voltage/ON current, OFF voltage/OFF current, and input resistance are changed. Functions: Not changed |
| | AX40-UL (when 24VDC is used) | RX40C7 | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Rated input current (Approx. 10mA → 7mA), ON voltage/ON current, OFF voltage/OFF current, and input resistance are changed. (5) Functions: Not changed |
| | AX40-UL (when 12VDC is used) | RX70C4 | External wiring: Changed (An upgrade tool conversion adapter can be used.*1) Number of slots: Not changed Programs: Not changed Specifications: ON voltage/ON current, OFF voltage/OFF current, and input resistance are changed. Functions: Not changed |

| Item | MELSEC-A/QnA series | MELSEC iQ-R series | Specification difference |
|--------------|---------------------------------|--------------------|--|
| Input module | AX41 (when 24VDC is used) | RX41C4 | External wiring: Changed (Screw terminal block → 40-pin connector. An upgrade tool conversion adapter can be used.*1) Number of slots: Not changed Programs: Not changed Specifications: Rated input current (Approx. 10mA → 4mA), ON voltage, OFF current, and input resistance are changed. Functions: Not changed |
| | AX41 (when 12VDC is used) | RX71C4 | (1) External wiring: Changed (Screw terminal block → 40-pin connector. An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: ON voltage/ON current, OFF voltage/OFF current, and input resistance are changed. (5) Functions: Not changed |
| | AX41-S1 (when 24VDC is used) | RX41C4 | (1) External wiring: Changed (Screw terminal block → 40-pin connector. An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Rated input current (Approx. 10mA → 4mA), ON voltage, OFF current, and input resistance are changed. (5) Functions: Not changed |
| | AX41-S1 (when 12VDC is used) | RX71C4 | External wiring: Changed (Screw terminal block → 40-pin connector. An upgrade tool conversion adapter can be used.*1) Number of slots: Not changed Programs: Not changed Specifications: ON voltage/ON current, OFF voltage/OFF current, and input resistance are changed. Functions: Not changed |
| | AX41-UL (when 24VDC is used) | RX41C4 | (1) External wiring: Changed (Screw terminal block → 40-pin connector. An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Rated input current (Approx. 10mA → 4mA), ON voltage, OFF current, and input resistance are changed. (5) Functions: Not changed |
| | AX41-UL (when 12VDC is used) | RX71C4 | (1) External wiring: Changed (Screw terminal block → 40-pin connector. An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: ON voltage/ON current, OFF voltage/OFF current, and input resistance are changed. (5) Functions: Not changed |
| | AX42 (when 24VDC is used) | RX42C4 | (1) External wiring: Not changed (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Rated input current (Approx. 7mA → 4mA), ON voltage, OFF current, and input resistance are changed. (5) Functions: Not changed |
| | AX42 (when 12VDC is used) | RX72C4 | (1) External wiring: Not changed (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: ON voltage/ON current, OFF voltage/OFF current, and input resistance are changed. (5) Functions: Not changed |

| Item | MELSEC-A/QnA series | MELSEC iQ-R series | Specification difference |
|--------------|-----------------------------------|--------------------|--|
| Input module | AX42-S1 (when 24VDC is used) | RX42C4 | (1) External wiring: Not changed (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Rated input current (Approx. 7mA → 4mA), ON voltage, OFF current, and input resistance are changed. (5) Functions: Not changed |
| | AX42-S1 (when 12VDC is used) | RX72C4 | (1) External wiring: Not changed (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: ON voltage/ON current, OFF voltage/OFF current, and input resistance are changed. (5) Functions: Not changed |
| | AX50/AX50-S1 | None | Consider replacing it with the RX40C7 and FA-TH16X48D31L*1. |
| | AX60/AX60-S1 | None | Consider replacing it with the RX40C7 and FA-TH16X100D31L*1. |
| | AX70 (when 24VDC is used) | RX40C7 | External wiring: Changed (An upgrade tool conversion adapter can be used."1) Number of slots: Not changed Programs: Not changed Specifications: ON voltage/ON current, OFF voltage/OFF current, and input resistance are changed. Functions: Not changed |
| | AX70 (when 5/12VDC is used) | RX70C4 | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Rated input current (3.5/2mA → 1.7/4.8mA), ON voltage, OFF voltage/OFF current, and input resistance are changed. (5) Functions: Not changed |
| | AX70-UL (when 24VDC is used) | RX40C7 | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: ON voltage/ON current, OFF voltage/OFF current, and input resistance are changed. (5) Functions: Not changed |
| | AX70-UL (when 5/12VDC is used) | RX70C4 | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Rated input current (3.5/2mA → 1.7/4.8mA), ON voltage, OFF voltage/OFF current, and input resistance are changed. (5) Functions: Not changed |
| | AX71 (when 24VDC is used) | RX41C4 | (1) External wiring: Changed (Screw terminal block → 40-pin connector. An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Rated input current (Approx. 4.5mA → 4mA), ON voltage/ON current, OFF voltage/OFF current, and input resistance are changed. (5) Functions: Not changed |
| | AX71 (when 5/12VDC is used) | RX71C4 | (1) External wiring: Changed (Screw terminal block → 40-pin connector. An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Rated input current (3.5/2mA → 1.7/4.8mA), ON voltage, OFF voltage/OFF current, and input resistance are changed. (5) Functions: Not changed |
| | AX80 (when 24VDC is used) | RX40C7 | External wiring: Changed (An upgrade tool conversion adapter can be used.*1) Number of slots: Not changed Programs: Not changed Specifications: Rated input current (10mA → 7mA), ON voltage/ON current, OFF voltage/OFF current, and input resistance are changed. Functions: Not changed |

| Item | MELSEC-A/QnA series | MELSEC iQ-R series | Specification difference |
|--------------|---------------------------------|--------------------|---|
| Input module | AX80 (when 12VDC is used) | RX70C4 | External wiring: Changed (An upgrade tool conversion adapter can be used.*1) Number of slots: Not changed Programs: Not changed Specifications: ON voltage/ON current, OFF voltage/OFF current, and input resistance are changed. Functions: Not changed |
| | AX80-UL (when 24VDC is used) | RX40C7 | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Rated input current (10mA → 7mA), ON voltage/ON current, OFF voltage/OFF current, and input resistance are changed. (5) Functions: Not changed |
| | AX80-UL (when 12VDC is used) | RX70C4 | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: ON voltage/ON current, OFF voltage/OFF current, and input resistance are changed. (5) Functions: Not changed |
| | AX80E (when 24VDC is used) | RX40C7 | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Rated input current (10mA → 7mA), ON voltage/ON current, OFF voltage/OFF current, and input resistance are changed. (5) Functions: Not changed |
| | AX80E (when 12VDC is used) | RX70C4 | External wiring: Changed (An upgrade tool conversion adapter can be used.*1) Number of slots: Not changed Programs: Not changed Specifications: ON voltage/ON current, OFF voltage/OFF current, and input resistance are changed. Functions: Not changed |
| | AX81 (when 24VDC is used) | RX41C4 | External wiring: Changed (Screw terminal block → 40-pin connector. An upgrade tool conversion adapter can be used.*1) Number of slots: Not changed Programs: Not changed Specifications: Rated input current (10mA → 4mA), ON voltage, OFF voltage/OFF current, and input resistance are changed. Functions: Not changed |
| | AX81 (when 12VDC is used) | RX71C4 | (1) External wiring: Changed (Screw terminal block → 40-pin connector. An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: ON voltage/ON current, OFF voltage/OFF current, and input resistance are changed. (5) Functions: Not changed |
| | AX81B | RX41C4 | (1) External wiring: Changed (Screw terminal block → 40-pin connector) (2) Number of slots: Not changed (3) Programs: The number of occupied I/O points is changed (64 → 32). (4) Specifications: Rated input current (7mA → 4mA), ON voltage/ON current, OFF voltage/OFF current, and input resistance are changed. (5) Functions: Changed (No disconnection detection function) |
| | | RX40NC6B | (1) External wiring: Changed (An external power supply is required.) (2) Number of slots: Changed (2 modules are required.) (3) Programs: An input type is changed (positive common/negative common shared type → negative common). The number of occupied I/O points is changed (64 → 32). The diagnostic information is read from the buffer memory. (4) Specifications: Rated input current (7mA → 6mA), ON voltage/ON current, OFF voltage/OFF current, input resistance, and external resistance are changed. (5) Functions: Not changed |

| Item | MELSEC-A/QnA series | MELSEC iQ-R series | Specification difference | | |
|--------------|---------------------------------|--------------------|---|--|--|
| Input module | AX81-S1 (when 24VDC is used) | RX41C4 | External wiring: Changed (Screw terminal block → 40-pin connector. An upgrade tool conversion adapter can be used.*1) Number of slots: Not changed Programs: Not changed Specifications: Rated input current (5mA → 4mA), ON voltage/ON current, OFF voltage/OFF current, and input resistance are changed. Functions: Not changed | | |
| | AX81-S1 (when 12VDC is used) | RX71C4 | External wiring: Changed (Screw terminal block → 40-pin connector. An upgrade tool conversion adapter can be used.*1) Number of slots: Not changed Programs: Not changed Specifications: ON voltage/ON current, OFF voltage/OFF current, and input resistance are changed. Functions: Not changed | | |
| | AX81-S2 (when 48VDC is used) | None | Consider replacing it with the RX40C7 and FA-TH16X48D31L*1. | | |
| | AX81-S2 (when 60VDC is used) | None | _ | | |
| | AX81-S3 (when 24VDC is used) | RX41C4 | (1) External wiring: Changed (Screw terminal block → 40-pin connector. An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Rated input current (10mA → 4mA), ON voltage, OFF current, and input resistance are changed. (5) Functions: Not changed | | |
| | AX81-S3 (when 12VDC is used) | RX71C4 | (1) External wiring: Changed (Screw terminal block → 40-pin connector. An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: ON voltage/ON current, OFF voltage/OFF current, and input resistance are changed. (5) Functions: Not changed | | |
| | AX82 (when 24VDC is used) | RX42C4 | (1) External wiring: Changed (37-pin D-sub connector → 40-pin connector) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Rated input current (7mA → 4mA), ON voltage/ON current, and input resistance are changed. (5) Functions: Not changed | | |
| | | RX41C4 | (1) External wiring: Changed (37-pin D-sub connector → 40-pin connector. An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Changed (2 modules are required.) (3) Programs: Not changed (4) Specifications: Rated input current (7mA → 4mA), ON voltage/ON current, and input resistance are changed. (5) Functions: Not changed | | |
| | AX82 (when 12VDC is used) | RX72C4 | External wiring: Changed (37-pin D-sub connector → 40-pin connector) Number of slots: Not changed Programs: Not changed Specifications: ON voltage/ON current, OFF voltage/OFF current, and input resistance are changed. Functions: Not changed | | |
| | | RX71C4 | (1) External wiring: Changed (37-pin D-sub connector → 40-pin connector. An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Changed (2 modules are required.) (3) Programs: Not changed (4) Specifications: ON voltage/ON current, OFF voltage/OFF current, and input resistance are changed. (5) Functions: Not changed | | |

| Item | MELSEC-A/QnA series | MELSEC iQ-R series | Specification difference |
|---------------|---------------------|--------------------|---|
| Output module | AY10 | RY10R2 | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Rated output current is not changed. (Note that the contact life span is reduced to half.) (5) Functions: Not changed |
| | AY10A | RY18R2A | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Changed (2 modules are required.) (3) Programs: The number of occupied I/O points is changed (16 → 16 × 2 modules). The number of output points is changed (16 → 8 × 2 modules). (4) Specifications: Rated output current is not changed. (Note that the contact life span is reduced to half.) (5) Functions: Not changed |
| | AY10A-UL | RY18R2A | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Changed (2 modules are required.) (3) Programs: The number of occupied I/O points is changed (16 → 16 × 2 modules). The number of output points is changed (16 → 8 × 2 modules). (4) Specifications: Rated output current is not changed. (Note that the contact life span is reduced to half.) (5) Functions: Not changed |
| | AY11 | RY10R2 | External wiring: Changed (An upgrade tool conversion adapter can be used.*1) Number of slots: Not changed Programs: Not changed Specifications: Rated output current is not changed. (Note that the contact life span is reduced to half.) Functions: Changed (No varistor, relay not replaceable) |
| | AY11A | RY18R2A | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Changed (2 modules are required.) (3) Programs: The number of occupied I/O points is changed (16 → 16 × 2 modules). The number of output points is changed (16 × 1 module → 8 × 2 modules). (4) Specifications: Rated output current is not changed. (Note that the contact life span is reduced to half.) (5) Functions: Changed (No varistor) |
| | AY11AEU | RY18R2A | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Changed (2 modules are required.) (3) Programs: The number of occupied I/O points is changed (16 → 16 × 2 modules). The number of output points is changed (16 × 1 module → 8 × 2 modules). (4) Specifications: Rated output current is not changed. (Note that the contact life span is reduced to half.) (5) Functions: Changed (No varistor) |
| | AY11E | RY10R2 | External wiring: Changed (An upgrade tool conversion adapter can be used.*1) Number of slots: Not changed Programs: Not changed Specifications: Rated output current is not changed. (Note that the contact life span is reduced to half.) Functions: Changed (No fuse, no varistor) |
| | AY11EEU | RY10R2 | External wiring: Changed (An upgrade tool conversion adapter can be used.*1) Number of slots: Not changed Programs: Not changed Specifications: Rated output current is not changed. (Note that the contact life span is reduced to half.) Functions: Changed (No fuse, no varistor) |

| Item | MELSEC-A/QnA series | MELSEC iQ-R series | Specification difference |
|---------------|---------------------|--------------------|---|
| Output module | AY11-UL | RY10R2 | External wiring: Changed (An upgrade tool conversion adapter can be used.*1) Number of slots: Not changed Programs: Not changed Specifications: Rated output current is not changed. (Note that the contact life span is reduced to half.) Functions: Changed (No varistor, relay not replaceable) |
| | AY13 | RY10R2 | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Changed (2 modules are required.) (3) Programs: The number of occupied I/O points is changed (32 → 16 × 2 modules). The number of output points is changed (32 → 16 × 2 modules). (4) Specifications: Rated output current is not changed. (Note that the contact life span is reduced to half.) (5) Functions: Not changed |
| | AY13E | RY10R2 | External wiring: Changed (An upgrade tool conversion adapter can be used.*1) Number of slots: Changed (2 modules are required.) Programs: The number of occupied I/O points is changed (32 → 16 × 2 modules). The number of output points is changed (32 → 16 × 2 modules). Specifications: Rated output current is not changed. (Note that the contact life span is reduced to half.) Functions: Changed (No fuse) |
| | AY13EU | RY10R2 | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Changed (2 modules are required.) (3) Programs: The number of occupied I/O points is changed (32 → 16 × 2 modules). The number of output points is changed (32 → 16 × 2 modules). (4) Specifications: Rated output current is not changed. (Note that the contact life span is reduced to half.) (5) Functions: Not changed |
| | AY15EU | RY10R2 | (1) External wiring: Changed (2) Number of slots: Changed (2 modules are required.) (3) Programs: The number of occupied I/O points is changed (32 → 16 × 2 modules). The number of output points is changed (24 → 16 × 2 modules). (4) Specifications: Rated output current is not changed. (Note that the contact life span is reduced to half.) (5) Functions: Not changed |
| | AY20EU | RY20S6 | External wiring: Changed Number of slots: Not changed Programs: Not changed Specifications: Rated output current is changed (minimum load current). Functions: Changed (No fuse) |
| | AY22 | RY20S6 | External wiring: Changed (An upgrade tool conversion adapter can be used.*1) Number of slots: Not changed Programs: Not changed Specifications: Rated output current is changed (2A → 0.6A). Functions: Changed (No fuse, no varistor) |
| | AY23 | RY20S6 | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Changed (2 modules are required.) (3) Programs: The number of occupied I/O points is changed (32 → 16 × 2 modules). The number of output points is changed (32 → 16 × 2 modules). (4) Specifications: Not changed (5) Functions: Changed (No fuse) |
| | AY40 | RY40NT5P | External wiring: Changed (An upgrade tool conversion adapter can be used.*1) Number of slots: Not changed Programs: Not changed Specifications: Not changed Functions: Changed (The protection function is added.) |
| | AY40-UL | RY40NT5P | External wiring: Changed (An upgrade tool conversion adapter can be used.*1) Number of slots: Not changed Programs: Not changed Specifications: Not changed Functions: Changed (The protection function is added.) |

| Item | MELSEC-A/QnA series | MELSEC iQ-R series | Specification difference |
|---------------|---------------------|--------------------|---|
| Output module | AY40P | RY40NT5P | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Not changed (5) Functions: Not changed |
| | AY40A | RY18R2A | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Changed (2 modules are required.) (3) Programs: The number of occupied I/O points is changed (16 → 16 × 2 modules). The number of output points is changed (16 → 8 × 2 modules). (4) Specifications: An output type is changed (transistor output → contact output). A response time is changed (2/2ms or less → 10/12ms or less). (5) Functions: Changed (No surge suppressor) |
| | AY41 | RY41NT2P | (1) External wiring: Changed (Screw terminal block → 40-pin connector. An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Not changed (5) Functions: Changed (The protection function is added.) |
| | AY41P | RY41NT2P | (1) External wiring: Changed (Screw terminal block → 40-pin connector. An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Not changed (5) Functions: Not changed |
| | AY41-UL | RY41NT2P | (1) External wiring: Changed (Screw terminal block → 40-pin connector. An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Not changed (5) Functions: Changed (The protection function is added.) |
| | AY42 | RY42NT2P | (1) External wiring: Not changed (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Not changed (5) Functions: Changed (The protection function is added.) |
| | AY42-S1 | RY42NT2P | (1) External wiring: Not changed (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: A response time is changed (0.1/0.3ms or less → 0.5/1ms or less). (5) Functions: Changed (The protection function is added.) |
| | AY42-S3 | RY42NT2P | (1) External wiring: Not changed (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Not changed (5) Functions: Changed (No fuse. The protection function is added.) |
| | AY42-S4 | RY42NT2P | (1) External wiring: Changed (An external power supply is required.) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Not changed (5) Functions: Changed (The protection function is added.) |
| | AY50 | RY40NT5P | External wiring: Changed (An upgrade tool conversion adapter can be used.*1) Number of slots: Not changed Programs: Not changed Specifications: Not changed Functions: Changed (No fuse. The protection function is added.) |
| | AY50-UL | RY40NT5P | External wiring: Changed (An upgrade tool conversion adapter can be used.*1) Number of slots: Not changed Programs: Not changed Specifications: Not changed Functions: Changed (No fuse. The protection function is added.) |

| Item | MELSEC-A/QnA series | MELSEC iQ-R series | Specification difference | | |
|---------------|---------------------|--------------------|---|--|--|
| Output module | AY51 | RY40NT5P | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Changed (2 modules are required.) (3) Programs: The number of occupied I/O points is changed (32 → 16 × 2 modules). The number of output points is changed (32 → 16 × 2 modules). (4) Specifications: Not changed (5) Functions: Changed (The protection function is added.) | | |
| | AY51-S1 | RY40NT5P | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Changed (2 modules are required.) (3) Programs: The number of occupied I/O points is changed (32 → 16 × 2 modules). The number of output points is changed (32 → 16 × 2 modules). (4) Specifications: Not changed (5) Functions: Changed (No fuse. The protection function is added.) | | |
| | AY51-UL | RY40NT5P | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Changed (2 modules are required.) (3) Programs: The number of occupied I/O points is changed (32 → 16 × 2 modules). The number of output points is changed (32 → 16 × 2 modules). (4) Specifications: Not changed (5) Functions: Changed (The protection function is added.) | | |
| | AY60 | RY10R2 | (1) External wiring: Changed (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: An output type is changed (transistor output → contact output). A response time is changed (2/2ms or less → 10/12ms or less). (5) Functions: Changed (No surge suppressor, no fuse) | | |
| | AY60E | RY10R2 | (1) External wiring: Changed (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: An output type is changed (transistor output → contact output). A response time is changed (2/2ms or less → 10/12ms or less). (5) Functions: Changed (No surge suppressor, no fuse) | | |
| | AY60EP | RY10R2 | (1) External wiring: Changed (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: An output type is changed (transistor output → contact output). A response time is changed (0.5/1.5ms or less → 10/12ms or less). (5) Functions: Changed (No surge suppressor, no protection function) | | |
| | AY60S | RY10R2 | (1) External wiring: Changed (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: An output type is changed (transistor output → contact output). A response time is changed (1/3ms or less → 10/12ms or less). (5) Functions: Changed (No surge suppressor, no fuse) | | |
| | AY60S-UL | RY10R2 | (1) External wiring: Changed (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: An output type is changed (transistor output → contact output). A response time is changed (1/3ms or less → 10/12ms or less). (5) Functions: Changed (No surge suppressor, no fuse) | | |
| | AY70 | RY40NT5P | External wiring: Changed (An upgrade tool conversion adapter can be used.*1) Number of slots: Not changed Programs: Not changed Specifications: Rated output voltage is changed (5/12VDC → 12/24VDC). Functions: Changed (The surge suppressor and protection function are added.) | | |
| | AY70-UL | RY40NT5P | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Rated output voltage is changed (5/12VDC → 12/24VDC). (5) Functions: Changed (The protection function is added.) | | |

| Item | MELSEC-A/QnA series | MELSEC iQ-R series | Specification difference |
|----------------------|---------------------|--------------------|--|
| Output module | AY71 | RY41NT2H | (1) External wiring: Changed (Screw terminal block → 40-pin connector) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Not changed (5) Functions: Not changed |
| | AY72 | RY41NT2H | (1) External wiring: Not changed (2) Number of slots: Changed (2 modules are required.) (3) Programs: The number of occupied I/O points is changed (32 → 16 × 2 modules). The number of output points is changed (32 → 16 × 2 modules). (4) Specifications: Not changed (5) Functions: Not changed |
| | AY80 | RY40PT5P | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Not changed (5) Functions: Changed (No fuse. The protection function is added.) |
| | AY80EP | RY40PT5P | (1) External wiring: Changed (An upgrade tool conversion adapter can be used. (1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Rated output current is changed (0.8A → 0.5A). (5) Functions: Not changed |
| | AY81 | RY41PT1P | (1) External wiring: Changed (Screw terminal block → 40-pin connector. An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Rated output current is changed (0.5A → 0.1A). (5) Functions: Changed (The protection function is added.) |
| | AY81EP | RY41PT1P | (1) External wiring: Changed (Screw terminal block → 40-pin connector. An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: Not changed (4) Specifications: Rated output current is changed (0.8A → 0.1A). (5) Functions: Not changed |
| | AY82EP | RY42PT1P | External wiring: Changed (37-pin D-sub connector → 40-pin connector) Number of slots: Not changed Programs: Not changed Specifications: Not changed Functions: Not changed |
| | | RY41PT1P | (1) External wiring: Changed (37-pin D-sub connector → 40-pin connector. An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Changed (2 modules are required.) (3) Programs: Not changed (4) Specifications: Not changed (5) Functions: Not changed |
| I/O module | AH42 | RH42C4NT2P | (1) External wiring: Not changed (2) Number of slots: Not changed (3) Programs: The number of occupied I/O points is changed (64 → 32). (4) Specifications: Rated input voltage (12/24VDC → 24VDC), rated input current (7mA → 4mA), ON voltage, OFF current, and input resistance are changed. (5) Functions: Changed (The protection function is added.) |
| Dynamic input module | A42XY | None | Consider using the RX42C4/RY42NT2P after converting I/O signal from dynamic to static. |

| Item | MELSEC-A/QnA series | MELSEC iQ-R series | Specification difference |
|---------------------|------------------------------|--------------------|--|
| Interrupt module | Al61 (when 24VDC is used) | RX40C7 | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: The number of occupied I/O points is changed (32 → 16). (4) Specifications: Rated input current (14mA → 7mA), ON voltage, OFF voltage, and input resistance are changed. (5) Functions: Not changed |
| | Al61 (when 12VDC is used) | RX70C4 | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: The number of occupied I/O points is changed (32 → 16). (4) Specifications: Rated input current (6mA → 4.8mA), ON voltage, OFF voltage, and input resistance are changed. (5) Functions: Not changed |
| | Al61-S1 | RX40C7 | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: The number of occupied I/O points is changed (32 → 16). (4) Specifications: Rated input current (14mA → 7mA), ON voltage, OFF voltage, and input resistance are changed. (5) Functions: Not changed |
| Dummy module | AG62 | None | ■Dummy module function Consider using the RG60 and I/O assignment setting. ■Simulation switch function Consider using the RX40C7 and an external switch. |
| Blank cover module | AG60 | RG60 | None in particular |

^{*1} Please consult your local Mitsubishi Electric representative.

3.2 Specification Comparison Tables


Input modules

AX10 and RX10

 $\bigcirc \text{: Compatible, } \triangle \text{: Partly changed, } \times \text{: Incompatible, } - \text{: Not applicable}$

| Item | | Specifications | | Compatibility | Precautions |
|---|--------------|---|--|---------------|--|
| | | AX10 | RX10 | | |
| Input type | | AC input | | 0 | |
| Number of input points | | 16 | | 0 | |
| Isolation met | nod | Photocoupler | | 0 | |
| Rated input v frequency | oltage/rated | 100 to 120VAC (+10/-15%), 50/60Hz | z (±3Hz) | 0 | |
| Input voltage | distortion | Within 5% | | 0 | |
| Rated input o | urrent | 10mA (100VAC, 60Hz) | 8.2mA (100VAC, 60Hz) 6.8mA (100VAC, 50Hz) | Δ | The rated input current is decreased after replacement.* |
| Maximum number of simultaneous input points | | 100% (16 points) | Refer to the derating chart.*2 | Δ | Use the module within the range shown in the derating chart. |
| Inrush curren | t | 300mA maximum, within 0.3ms (at 132VAC) | 200mA maximum, within 1ms | 0 | |
| ON voltage/C | N current | 80VAC or higher/6mA or higher | 80VAC or higher/5mA or higher (50Hz, 60Hz) | Δ | The ON current is changed after replacement.*1 |
| OFF voltage/OFF current | | 40VAC or lower/4mA or lower | 30VAC or lower/1.7mA or lower (50Hz, 60Hz) | Δ | The OFF voltage and OFF current are changed after replacement.*1 |
| Input impeda | nce | Approx. 10kΩ (60Hz), approx. 12kΩ (50Hz) | 12.2kΩ (60Hz), 14.6kΩ (50Hz) | Δ | The input impedance is changed after replacement.*1 |
| Response | OFF to ON | 15ms or less | 15ms or less (100VAC 50Hz, 60Hz) | 0 | |
| time | ON to OFF | 25ms or less | 20ms or less (100VAC 50Hz, 60Hz) | 0 | |
| Common terr arrangement | ninal | 16 points/common (common terminal: TB9, TB18) | 16 points/common (common terminal: TB17) | 0 | |
| Operation inc | lication | ON indication (LED) | | 0 | |
| External inter | face | 20-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after replacement. |
| Applicable wi | re size | 0.75 to 2mm | 0.3 to 0.75mm ² (Outside diameter: 2.8mm or less) | × | By using the upgrade tool conversion adapter (ERNT- |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | 1AR10XY), the existing external wiring and terminal blocks in the existing system can be used.*3 |
| Number of occupied I/O points | | 16 (I/O assignment: Input 16 points) | | 0 | |
| Internal curre | | 55mA (TYP. all points ON) | 110mA (TYP. all points ON) | _ | |
| External dime | ensions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.39kg | 0.18kg | _ | |

- *1 Check the specifications of sensors and switches connected to the RX10.
- *2 The following figure shows a derating chart.

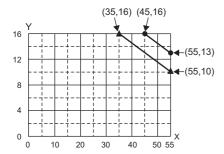


- ▲: Input voltage 120VAC
- ●: Input voltage 132VAC
- X: Ambient temperature (°C)
- Y: Number of simultaneous on points (point)
- *3 For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX10-UL and RX10

| Item | | Specifications | | Compatibility | Precautions | |
|--------------------------------|--------------|--|---|---------------|---|--|
| | | AX10-UL | RX10 | | | |
| Input type | | AC input | | 0 | | |
| Number of in | out points | 16 | | 0 | | |
| Isolation meth | nod | Photocoupler | | 0 | | |
| Rated input v frequency | oltage/rated | 110 to 120VAC (+10/-15%), 50/ 60Hz | 100 to 120VAC (+10/-15%), 50/ 60Hz (±3Hz) | 0 | | |
| Input voltage | distortion | Within 5% | | 0 | | |
| Rated input c | urrent | 11mA (110VAC) 12mA (120VAC) | 8.2mA (100VAC, 60Hz) 6.8mA (100VAC, 50Hz) | Δ | The rated input current is decreased after replacement.*1 | |
| Maximum nui simultaneous | | 100% (16 points) | Refer to the derating chart.*2 | Δ | Use the module within the range shown in the derating chart. | |
| Inrush curren | t | 300mA maximum, within 0.3ms (at 132VAC) | 200mA maximum, within 1ms | 0 | | |
| ON voltage/C | N current | 80VAC or higher/6mA or higher | 80VAC or higher/5mA or higher (50Hz, 60Hz) | Δ | The ON current is changed after replacement.*1 | |
| OFF voltage/ | OFF current | 40VAC or lower/4mA or lower | 30VAC or lower/1.7mA or lower (50Hz, 60Hz) | Δ | The OFF voltage and OFF current are changed after replacement.*1 | |
| Input impeda | nce | Approx. $10k\Omega$ (60Hz), approx. $12k\Omega$ (50Hz) | 12.2kΩ (60Hz), 14.6kΩ (50Hz) | Δ | The input impedance is changed after replacement.*1 | |
| Response | OFF to ON | 15ms or less | 15ms or less (100VAC 50Hz, 60Hz) | 0 | | |
| time | ON to OFF | 25ms or less | 20ms or less (100VAC 50Hz, 60Hz) | 0 | | |
| Withstand vo | ltage | For 1 minute at 1500VAC rms between AC external connecting terminals and general grounding | 1400VAC rms for 1 minute | 0 | | |
| Isolation resis | stance | 5 M Ω or more by insulation resistance tester | 10MΩ or more by insulation resistance tester | 0 | | |
| Noise immun | ity | By noise simulator of 1500Vp-p noise voltage, 1μs noise width and 25 to 60Hz noise frequency | | 0 | | |
| Common terr | ninal | 16 points/common (common terminal: TB9, TB18) | 16 points/common (common terminal: TB17) | 0 | | |
| Operation ind | lication | ON indication (LED) | | 0 | | |
| External inter | face | 20-point terminal block (M3.5 \times 7 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after replacement. | |
| Applicable wire size | | 0.75 to 2mm² (14 to 18 AWG) | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | By using the upgrade tool conversion adapter (ERNT-1AR10XY), the existing external wiring and terminal blocks in the existing system can be used.*3 | |
| Applicable solderless terminal | | RAV1.25-3.5, RAV2-3.5 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | | |
| Number of occupied I/O points | | 16 (I/O assignment: Input 16 points) | , | 0 | | |
| Internal curre consumption | | 55mA (TYP. all points ON) | 110mA (TYP. all points ON) | _ | | |
| External dime | ensions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | | |
| Weight | | 0.39kg | 0.18kg | _ | | |
| Weight | | บ.อฮห์ั | U. TOKY | | | |

- *1 Check the specifications of sensors and switches connected to the RX10.
- *2 The following figure shows a derating chart.

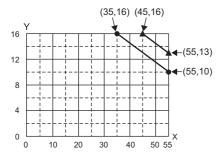


- ▲: Input voltage 120VAC
- ●: Input voltage 132VAC
- X: Ambient temperature (°C)
- Y: Number of simultaneous on points (point)
- *3 For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX11 and RX10

| Item | | Specifications | | Compatibility | Precautions |
|---|--------------|---|---|---------------|---|
| | | AX11 | RX10 | | |
| Input type | | AC input | | 0 | |
| Number of input points | | 32 | 16 | Δ | When 17 or more points are required, use two modules of the RX10. |
| Isolation meth | nod | Photocoupler | | 0 | |
| Rated input v frequency | oltage/rated | 100 to 120VAC (+10/-15%), 50/60Hz | (±3Hz) | 0 | |
| Input voltage | distortion | Within 5% | | 0 | |
| Rated input c | urrent | 10mA (100VAC, 60Hz) | 8.2mA (100VAC, 60Hz) 6.8mA (100VAC, 50Hz) | Δ | The rated input current is decreased after replacement.* |
| Maximum number of simultaneous input points | | 60% (20 points) | Refer to the derating chart.*2 | Δ | Use the module within the range shown in the derating chart. |
| Inrush curren | t | 300mA maximum, within 0.3ms (at 132VAC) | 200mA maximum, within 1ms | 0 | |
| ON voltage/C | N current | 80VAC or higher/6mA or higher | 80VAC or higher/5mA or higher (50Hz, 60Hz) | Δ | The ON current is changed after replacement.*1 |
| OFF voltage/ | OFF current | 40VAC or lower/4mA or lower | 30VAC or lower/1.7mA or lower (50Hz, 60Hz) | Δ | The OFF voltage and OFF current are changed after replacement.*1 |
| Input impeda | nce | Approx. $10k\Omega$ (60Hz), approx. $12k\Omega$ (50Hz) | 12.2kΩ (60Hz), 14.6kΩ (50Hz) | Δ | The input impedance is changed after replacement.*1 |
| Response | OFF to ON | 15ms or less | 15ms or less (100VAC 50Hz, 60Hz) | 0 | |
| time | ON to OFF | 25ms or less | 20ms or less (100VAC 50Hz, 60Hz) | 0 | |
| Common tern arrangement | ninal | 32 points/common (common terminal: TB9, TB18, TB27, TB36) | 16 points/common (common terminal: TB17) | 0 | |
| Operation ind | lication | ON indication (LED) | | 0 | |
| External inter | face | 38-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after replacement. |
| Applicable wire size | | 0.75 to 2mm | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | By using the upgrade tool conversion adapter (ERNT-1AR11X13Y), the existing |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | external wiring and terminal blocks in the existing system can be used.*3 |
| Number of occupied I/O points | | 32 (I/O assignment: Input 32 points) | 16 (I/O assignment: Input 16 points) | Δ | |
| Internal curre consumption | | 110mA (TYP. all points ON) | 110mA (TYP. all points ON) | _ | |
| External dime | ensions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.49kg | 0.18kg | _ | |

- *1 Check the specifications of sensors and switches connected to the RX10.
- *2 The following figure shows a derating chart.

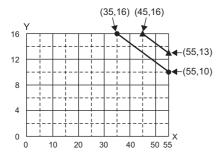


- ▲: Input voltage 120VAC
- ●: Input voltage 132VAC
- X: Ambient temperature (°C)
- Y: Number of simultaneous on points (point)
- *3 For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX11EU and RX10

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|--------------|---|--|---------------|---|
| | | AX11EU | RX10 | | |
| Input type | | AC input | | 0 | |
| Number of in | out points | 32 | 16 | Δ | When 17 or more points are required, use two modules of the RX10. |
| Isolation meth | nod | Photocoupler | | 0 | |
| Rated input v frequency | oltage/rated | 100 to 120VAC (+10/-15%), 50/60Hz | (±3Hz) | 0 | |
| Input voltage | distortion | Within 5% | | 0 | |
| Rated input c | urrent | Approx. 12mA (120VAC) | 8.2mA (100VAC, 60Hz) 6.8mA (100VAC, 50Hz) | Δ | The rated input current is decreased after replacement.* |
| Maximum nui simultaneous | | 60% (20 points) | Refer to the derating chart.*2 | Δ | Use the module within the range shown in the derating chart. |
| Inrush curren | t | 300mA maximum, within 1ms (at 132VAC) | 200mA maximum, within 1ms | 0 | |
| ON voltage/C | N current | 79VAC or higher/6mA or higher | 80VAC or higher/5mA or higher (50Hz, 60Hz) | Δ | The ON voltage and ON current are changed after replacement.*1 |
| OFF voltage/ | OFF current | 40VAC or lower/4mA or lower | 30VAC or lower/1.7mA or lower (50Hz, 60Hz) | Δ | The OFF voltage and OFF current are changed after replacement.*1 |
| Input impeda | nce | Approx. $10k\Omega$ (60Hz), approx. $12k\Omega$ (50Hz) | 12.2kΩ (60Hz), 14.6kΩ (50Hz) | Δ | The input impedance is changed after replacement.*1 |
| Response | OFF to ON | 15ms or less (100VAC, 60Hz) | 15ms or less (100VAC 50Hz, 60Hz) | 0 | |
| time | ON to OFF | 25ms or less (100VAC, 60Hz) | 20ms or less (100VAC 50Hz, 60Hz) | 0 | |
| Withstand vo | ltage | 1780VAC rms/3 cycles (Altitude 2000m) | 1400VAC rms for 1 minute | 0 | |
| Isolation resis | stance | 10M Ω or more by insulation resistance tester | | 0 | |
| Noise immun | ity | IEC801-4: 1kV | By noise simulator of 1500Vp-p noise voltage, 1μs noise width and 25 to 60Hz noise frequency | 0 | |
| Common tern arrangement | ninal | 32 points/common (common terminal: TB9, TB18, TB27, TB36) | 16 points/common (common terminal: TB17) | 0 | |
| Operation ind | lication | ON indication (LED) | | 0 | |
| External inter | face | 38-point terminal block (M3.5 \times 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after replacement. |
| Applicable wi | re size | 0.75 to 2mm² (14 to 19 AWG) | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | By using the upgrade tool conversion adapter (ERNT- |
| Applicable solderless terminal | | RAV1.25-3.5, RAV2-3.5 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | 1AR11X13Y), the existing external wiring and terminal blocks in the existing system can be used. 13 |
| Number of oc | cupied I/O | 32 (I/O assignment: Input 32 points) | 16 (I/O assignment: Input 16 points) | Δ | |
| Internal curre consumption | | 150mA (TYP. all points ON) | 110mA (TYP. all points ON) | _ | |
| External dime | ensions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.50kg | 0.18kg | _ | |

- *1 Check the specifications of sensors and switches connected to the RX10.
- *2 The following figure shows a derating chart.

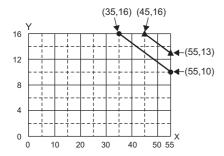


- ▲: Input voltage 120VAC
- ●: Input voltage 132VAC
- X: Ambient temperature (°C)
- Y: Number of simultaneous on points (point)
- *3 For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX20 and RX28

| Item | | Specifications | | Compatibility | Precautions |
|---|--------------|--|--|---------------|--|
| | | AX20 | RX28 | | |
| Input type | | AC input | | 0 | |
| Number of in | put points | 16 | 8 | Δ | When 9 or more points are required, use two modules of the RX28. |
| Isolation met | hod | Photocoupler | | 0 | |
| Rated input v | oltage/rated | 200 to 240VAC (+10/-15%), 50/ 60Hz (±3Hz) | 100 to 240VAC (+10/-15%), 50/ 60Hz (±3Hz) | 0 | |
| Input voltage | distortion | Within 5% | 0 | | |
| Rated input current | | 10mA (200VAC, 60Hz) | 16.4mA (200VAC, 60Hz) 13.7mA (200VAC, 50Hz) 8.2mA (100VAC, 60Hz) 6.8mA (100VAC, 50Hz) | 0 | |
| Maximum number of simultaneous input points | | 100% (16 points) | Refer to the derating chart.*2 | Δ | Use the module within the range shown in the derating chart. |
| Inrush curren | t | 600mA maximum within 0.12ms (at 264VAC) | 950mA maximum within 1ms (at 264VAC) | Δ | The maximum inrush current is increased after replacement.*1 |
| ON voltage/ON current | | 160VAC or higher/5.5mA or higher | 80VAC or higher/5mA or higher (50Hz, 60Hz) | Δ | The ON voltage and ON current are changed after replacement.*1 |
| OFF voltage/OFF current | | 70VAC or lower/3.5mA or lower | 30VAC or lower/1.7mA or lower (50Hz, 60Hz) | Δ | The OFF voltage and OFF current are changed after replacement.*1 |
| Input impeda | nce | Approx. $22k\Omega$ (60Hz), approx. $24k\Omega$ (50Hz) | 12.1kΩ (60Hz), 14.5kΩ (50Hz) | Δ | The input impedance is changed after replacement.*1 |
| Response | OFF to ON | 15ms or less | 10ms or less (200VAC 50Hz, 60Hz) | 0 | |
| time | ON to OFF | 25ms or less | 20ms or less (200VAC 50Hz, 60Hz) | 0 | |
| Common terr arrangement | | 16 points/common (common terminal: TB9, TB18) | 8 points/common (common terminal: TB17) | 0 | |
| Operation inc | lication | ON indication (LED) | | 0 | |
| External inter | face | 20-point terminal block (M3 \times 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after replacement. |
| Applicable wi | re size | 0.75 to 2mm | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | |
| Number of oc | ccupied I/O | 16 (I/O assignment: Input 16 points) | 16 (I/O assignment: Input 16 points) | Δ | The number of input points is 8 but 16 points are occupied. |
| Internal curre consumption | | 55mA (TYP. all points ON) | 90mA (TYP. all points ON) | _ | |
| External dime | ensions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.38kg | 0.18kg | _ | |

- *1 Check the specifications of sensors and switches connected to the RX28.
- *2 The following figure shows a derating chart.

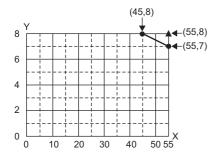


- ▲: Input voltage 240VAC
- ●: Input voltage 264VAC
- X: Ambient temperature (°C)
- Y: Number of simultaneous on points (point)

AX20-UL and RX28

| Item | | Specifications | | Compatibility | Precautions |
|-----------------------------|--------------|---|--|---------------|--|
| | | AX20-UL | RX28 | | |
| Input type | | AC input | | 0 | |
| Number of inp | out points | 16 | 8 | Δ | When 9 or more points are required, use two modules of the RX28. |
| Isolation meth | nod | Photocoupler | | 0 | |
| Rated input v | oltage/rated | 220 to 240VAC (+10/-15%), 50/ 60Hz (±3Hz) | 100 to 240VAC (+10/-15%), 50/ 60Hz (±3Hz) | 0 | |
| Input voltage | distortion | Within 5% | | 0 | |
| Rated input c | urrent | 11mA (220VAC) 12mA (240VAC) | 16.4mA (200VAC, 60Hz) 13.7mA (200VAC, 50Hz) 8.2mA (100VAC, 60Hz) 6.8mA (100VAC, 50Hz) | 0 | |
| Maximum nui simultaneous | | 100% (16 points) | Refer to the derating chart.*2 | Δ | Use the module within the range shown in the derating chart. |
| Inrush curren | t | 600mA maximum within 0.12ms (at 264VAC) | 950mA maximum within 1ms (at 264VAC) | Δ | The maximum inrush current is increased after replacement.*1 |
| ON voltage/O | N current | 160VAC or higher/5.5mA or higher | 80VAC or higher/5mA or higher (50Hz, 60Hz) | Δ | The ON voltage and ON current are changed after replacement.*1 |
| OFF voltage/OFF current | | 70VAC or lower/3.5mA or lower | 30VAC or lower/1.7mA or lower (50Hz, 60Hz) | Δ | The OFF voltage and OFF current are changed after replacement.*1 |
| Input impedance | | Approx. $22k\Omega$ (60Hz), approx. $24k\Omega$ (50Hz) | 12.1kΩ (60Hz), 14.5kΩ (50Hz) | Δ | The input impedance is changed after replacement.*1 |
| Response | OFF to ON | 15ms or less | 10ms or less (200VAC 50Hz, 60Hz) | 0 | |
| time | ON to OFF | 25ms or less | 20ms or less (200VAC 50Hz, 60Hz) | 0 | |
| Withstand vol | tage | Between AC external connecting terminals and general grounding 1500VAC rms for 1 minute | 2300VAC rms for 1 minute | 0 | |
| Isolation resis | stance | $5M\Omega$ or more by insulation resistance tester | 10MΩ or more by insulation resistance tester | 0 | |
| Noise immun | ity | By noise simulator of 1500Vp-p noise and 25 to 60Hz noise frequency | e voltage, 1μs noise width | 0 | |
| Common tern arrangement | ninal | 16 points/common (common terminal: TB9, TB18) | 8 points/common (common terminal: TB17) | 0 | |
| Operation ind | ication | ON indication (LED) | | 0 | |
| External inter | face | 20-point terminal block (M3.5 × 7 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after replacement. |
| Applicable wi | re size | 0.75 to 2mm ² (14 to 18 AWG) | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | |
| Applicable so terminal | Iderless | RAV1.25-3.5, RAV2-3.5 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | |
| Number of oc | cupied I/O | 16 (I/O assignment: Input 16 points) | 16 (I/O assignment: Input 16 points) | Δ | The number of input points is 8, but 16 points are occupied. |
| Internal curre consumption | | 55mA (TYP. all points ON) | 90mA (TYP. all points ON) | _ | |
| External dime | ensions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.38kg | 0.18kg | _ | |

- *1 Check the specifications of sensors and switches connected to the RX28.
- *2 The following figure shows a derating chart.

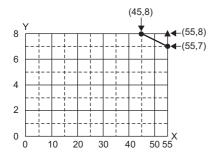


- ▲: Input voltage 240VAC
- ●: Input voltage 264VAC
- X: Ambient temperature (°C)
- Y: Number of simultaneous on points (point)

AX21 and RX28

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|--------------|---|--|---------------|--|
| | | AX21 | RX28 | | |
| Input type | | AC input | | 0 | |
| Number of in | put points | 32 | 8 | Δ | When 9 or more points are required, use multiple RX28s. |
| Isolation met | hod | Photocoupler | | 0 | |
| Rated input v | oltage/rated | 200 to 240VAC (+10/-15%), 50/ 60Hz (±3Hz) | 100 to 240VAC (+10/-15%), 50/ 60Hz (±3Hz) | 0 | |
| Input voltage | distortion | Within 5% | | 0 | |
| Rated input current | | 10mA (220VAC, 60Hz) | 16.4mA (200VAC, 60Hz) 13.7mA (200VAC, 50Hz) 8.2mA (100VAC, 60Hz) 6.8mA (100VAC, 50Hz) | 0 | |
| Maximum nu simultaneous | | 60% (20 points) | Refer to the derating chart.*2 | Δ | Use the module within the range shown in the derating chart. |
| Inrush currer | t | 600mA maximum within 0.12ms (at 264VAC) | 950mA maximum within 1ms (at 264VAC) | Δ | The maximum inrush current is increased after replacement.*1 |
| ON voltage/ON current | | 160VAC or higher/5.5mA or higher | 80VAC or higher/5mA or higher (50Hz, 60Hz) | Δ | The ON voltage and ON current are changed after replacement.*1 |
| OFF voltage/OFF current | | 70VAC or lower/3.5mA or lower | 30VAC or lower/1.7mA or lower (50Hz, 60Hz) | Δ | The OFF voltage and OFF current are changed after replacement.*1 |
| Input impeda | nce | Approx. $22k\Omega$ (60Hz), approx. $24k\Omega$ (50Hz) | 12.1kΩ (60Hz), 14.5kΩ (50Hz) | Δ | The input impedance is changed after replacement.*1 |
| Response | OFF to ON | 15ms or less | 10ms or less (200VAC 50Hz, 60Hz) | 0 | |
| time | ON to OFF | 25ms or less | 20ms or less (200VAC 50Hz, 60Hz) | 0 | |
| Common terr arrangement | | 32 points/common (common terminal: TB9, TB18, TB27, TB36) | 8 points/common (common terminal: TB17) | 0 | |
| Operation inc | lication | ON indication (LED) | | 0 | |
| External inter | face | 38-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after replacement. |
| Applicable w | re size | 0.75 to 2mm | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | |
| Number of oo | ccupied I/O | 32 (I/O assignment: Input 32 points) | 16 (I/O assignment: Input 16 points) | Δ | The number of input points is 8 but 16 points are occupied. |
| Internal curre | | 110mA (TYP. all points ON) | 90mA (TYP. all points ON) | _ | |
| External dime | ensions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.50kg | 0.18kg | _ | |

- *1 Check the specifications of sensors and switches connected to the RX28.
- *2 The following figure shows a derating chart.

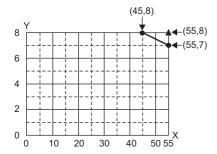


- ▲: Input voltage 240VAC
- ●: Input voltage 264VAC
- X: Ambient temperature (°C)
- Y: Number of simultaneous on points (point)

AX21EU and RX28

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|--------------|---|--|---------------|--|
| | | AX21EU | RX28 | | |
| Input type | | AC input | | 0 | |
| Number of in | out points | 32 | 8 | Δ | When 9 or more points are required, use multiple RX28s. |
| Isolation met | nod | Photocoupler | | 0 | |
| Rated input v frequency | oltage/rated | 200 to 240VAC (+10/-15%), 50/ 60Hz (±3Hz) | 100 to 240VAC (+10/-15%), 50/ 60Hz (±3Hz) | 0 | |
| Input voltage | distortion | Within 5% | | 0 | |
| Rated input o | urrent | Approx. 12mA (240VAC, 60Hz) | 16.4mA (200VAC, 60Hz) 13.7mA (200VAC, 50Hz) 8.2mA (100VAC, 60Hz) 6.8mA (100VAC, 50Hz) | 0 | |
| Maximum nu simultaneous | | 60% (20 points) | Refer to the derating chart.*2 | Δ | Use the module within the range shown in the derating chart. |
| Inrush curren | t | 600mA maximum within 0.5ms (at 264VAC) | 950mA maximum within 1ms (at 264VAC) | Δ | The maximum inrush current is increased after replacement.*1 |
| ON voltage/ON current | | 160VAC or higher/5.5mA or higher | 80VAC or higher/5mA or higher (50Hz, 60Hz) | Δ | The ON voltage and ON current are changed after replacement.*1 |
| OFF voltage/OFF current | | 70VAC or lower/3.5mA or lower | 30VAC or lower/1.7mA or lower (50Hz, 60Hz) | Δ | The OFF voltage and OFF current are changed after replacement.*1 |
| Input impeda | nce | Approx. $22k\Omega$ (60Hz), approx. $24k\Omega$ (50Hz) | 12.1kΩ (60Hz), 14.5kΩ (50Hz) | Δ | The input impedance is changed after replacement.*1 |
| Response | OFF to ON | 15ms or less (200VAC, 60Hz) | 10ms or less (200VAC 50Hz, 60Hz) | 0 | |
| time | ON to OFF | 25ms or less (200VAC, 60Hz) | 20ms or less (200VAC 50Hz, 60Hz) | 0 | |
| Withstand vo | ltage | 2830VAC rms/3 cycles (Altitude 2000m) | 2300VAC rms for 1 minute | 0 | |
| Isolation resis | stance | 10M Ω or more by insulation resistance | ce tester | 0 | |
| Noise immun | ity | IEC801-4: 1kV | By noise simulator of 1500Vp-p noise voltage, 1μs noise width and 25 to 60Hz noise frequency | 0 | |
| Common terr arrangement | ninal | 32 points/common (common terminal: TB9, TB18, TB27, TB36) | 8 points/common (common terminal: TB17) | 0 | |
| Operation inc | lication | ON indication (LED) | | 0 | |
| External inter | face | 38-point terminal block (M3.5 \times 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after replacement. |
| Applicable wi | re size | 0.75 to 2mm² (14 to 19 AWG) | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | |
| Applicable solderless terminal | | RAV1.25-3.5, RAV2-3.5 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | |
| Number of oc | cupied I/O | 32 (I/O assignment: Input 32 points) | 16 (I/O assignment: Input 16 points) | Δ | The number of input points is 8, but 16 points are occupied. |
| Internal curre consumption | | 150mA (TYP. all points ON) | 90mA (TYP. all points ON) | _ | |
| External dime | ensions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| | | 0.50kg | 0.18kg | | |

- *1 Check the specifications of sensors and switches connected to the RX28.
- *2 The following figure shows a derating chart.

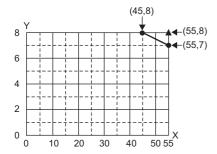


- ▲: Input voltage 240VAC
- ●: Input voltage 264VAC
- X: Ambient temperature (°C)
- Y: Number of simultaneous on points (point)

AX31 (when 24VDC is used) and RX41C4

| Item | | Specifications | | Compatibility | Precautions |
|---|-------------|---|--|---------------|---|
| | | AX31 | RX41C4 | 1 | |
| Input type | | AC/DC input | DC input (positive common/ negative common shared type) | 0 | |
| Number of in | put points | 32 | | 0 | |
| Isolation met | hod | Photocoupler | | 0 | |
| Rated input v | /oltage | DC input: 12/24VDC (+10/-15%, ripple ratio within 5%) AC input: 12/24VAC (+10/-15%), 50/60Hz (±3Hz) | 24VDC (+20/-15%, ripple ratio within 5%) | 0 | |
| Rated input of | current | 4mA (12VDC/VAC), 8.5mA (24VDC/VAC) | 4mA TYP. (at 24VDC) | Δ | The rated input current is decreased after replacement.*1 |
| Maximum number of simultaneous input points | | 100% (32 points) | Refer to the derating chart.*2 | Δ | Use the module within the range shown in the derating chart. |
| ON voltage/ON current | | 7VDC/VAC or higher/2mA or higher | 19V or higher/3mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1 |
| OFF voltage/OFF current | | 2.5VDC/VAC or lower/0.7mA or lower | 6V or lower/1mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1 |
| Input resista | nce | Approx. 2.7kΩ | 5.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| Response time | OFF to ON | DC input: 20ms or less (12/24VDC) AC input: 25ms or less (12/24VAC, 60Hz) | Configured in the parameter.*3 | 0 | Set the input response time of parameters to 20ms. |
| | ON to OFF | DC input: 20ms or less (12/24VDC) AC input: 20ms or less (12/24VAC, 60Hz) | Configured in the parameter.*3 | 0 | |
| Common terrangement | | 32 points/common (common terminal: TB9, TB18, TB27, TB36) | 32 points/common (common terminal: B01, B02) | 0 | |
| Operation in | dication | ON indication (LED) | | 0 | |
| External inte | rface | 38-point terminal block (M3 × 6 screws) | 40-pin connector (A6CON1/2/3/4) | × | Wiring needs to be changed after replacement. |
| Applicable w | ire size | 0.75 to 2mm | 0.088 to 0.3mm | × | By using the upgrade tool |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | _ | _ | conversion adapter (ERNT- 1AR41X), the existing external wiring and terminal blocks in the existing system can be used.*4 |
| Number of o | ccupied I/O | 32 (I/O assignment: Input 32 points) | | 0 | |
| Internal curre | | 110mA (TYP. all points ON) | 150mA (TYP. all points ON) | _ | |
| External dim | ensions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×110(D)mm | _ | |
| Weight | | 0.49kg | 0.11kg | <u> </u> | |
| | | | | | |

- *1 Check the specifications of sensors and switches connected to the RX41C4.
- *2 The following figure shows a derating chart.

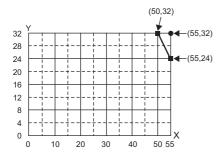

- ●: Input voltage 26.4VDC
- ■: Input voltage 28.8VDC
- X: Ambient temperature (°C)
- Y: Number of simultaneous on points (point)
- *3 The following table shows the input response times.

| Timing | Set value | Set value | | | | | | | | |
|------------------|-----------|-----------|-------|-------|-----|-----|------|------|------|--|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms | |
| OFF to ON (MAX.) | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms | |
| ON to OFF (MAX.) | 0.2ms | 0.3ms | 0.5ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms | |

^{*4} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX31 (when 12VDC is used) and RX71C4

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|-------------|---|--|---------------|---|
| | | AX31 | RX71C4 | | |
| Input type | | AC/DC input | DC input (positive common/ negative common shared type) | 0 | |
| Number of in | put points | 32 | • | 0 | |
| Isolation met | nod | Photocoupler | | 0 | |
| Rated input v | oltage | DC input: 12/24VDC (+10/-15%, ripple ratio within 5%) AC input: 12/24VAC (+10/-15%), 50/60Hz (±3Hz) | 5/12VDC (+20/-15%, ripple ratio within 5%) | 0 | |
| Rated input o | urrent | 4mA (12VDC/VAC) 1.7mA TYP. (at 5VDC) 8.5mA (24VDC/VAC) 4.8mA TYP. (at 12VDC) | | 0 | |
| Maximum nu | | 100% (32 points) | | 0 | |
| ON voltage/ON current | | 7VDC/VAC or higher/2mA or higher | 3.5V or higher/1mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1 |
| OFF voltage/OFF current | | 2.5VDC/VAC or lower/0.7mA or lower | 1V or lower/0.1mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1 |
| Input resistance | | Approx. 2.7kΩ | 2.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| Response C | OFF to ON | DC input: 20ms or less (12/24VDC) AC input: 25ms or less (12/24VAC, 60Hz) | Configured in the parameter.*2 | 0 | Set the input response time of parameters to 20ms. |
| | ON to OFF | DC input: 20ms or less (12/24VDC) AC input: 20ms or less (12/24VAC, 60Hz) | Configured in the parameter.*2 | 0 | |
| Common terr arrangement | ninal | 32 points/common (common terminal: TB9, TB18, TB27, TB36) | 32 points/common (common terminal: B01, B02) | 0 | |
| Operation inc | lication | ON indication (LED) | | 0 | |
| External inter | face | 38-point terminal block (M3 × 6 screws) | 40-pin connector (A6CON1/2/3/4) | × | Wiring needs to be changed after replacement. |
| Applicable wi | re size | 0.75 to 2mm | 0.088 to 0.3mm² | × | By using the upgrade tool conversion adapter (ERNT- |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | _ | _ | 1AR41X), the existing external wiring and terminal blocks in the existing system can be used.*3 |
| Number of oc | ccupied I/O | 32 (I/O assignment: Input 32 points) | | 0 | |
| Internal curre | | 110mA (TYP. all points ON) | 140mA (TYP. all points ON) | _ | |
| External dime | ensions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×110(D)mm | _ | |
| Weight | | 0.49kg | 0.12kg | - | |

^{*1} Check the specifications of sensors and switches connected to the RX71C4.

^{*2} The following table shows the input response times.

| Timing | Set value | Set value | | | | | | | | |
|------------------|-----------|-----------|-------|-------|-----|-----|------|------|------|--|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms | |
| OFF to ON (MAX.) | 0.2ms | 0.3ms | 0.5ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms | |
| ON to OFF (MAX.) | 0.21ms | 0.3ms | 0.5ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms | |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.


AX31-S1 and RX41C4

O: Compatible, △: Partly changed, ×: Incompatible, —: Not applicable

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|-------------|---|---|---------------|---|
| | | AX31-S1 | RX41C4 | | |
| Input type | | DC input (positive common/negative | common shared type) | 0 | |
| Number of in | put points | 32 | | 0 | |
| Isolation met | nod | Photocoupler | | 0 | |
| Rated input v | oltage | 24VDC (+10/-20%, ripple ratio within 5%) | 24VDC (+20/-15%, ripple ratio within 5%) | Δ | The allowable voltage range is changed after replacement.*1 |
| Rated input o | urrent | 8.5mA | 4mA TYP. (at 24VDC) | | The rated input current is decreased after replacement.*1 |
| Maximum nu | | 100% (32 points) | Refer to the derating chart.*2 | Δ | Use the module within the range shown in the derating chart. |
| ON voltage/ON current | | 16VDC or higher/5mA or higher | 19V or higher/3mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1 |
| OFF voltage/OFF current | | 8VDC or lower/2mA or lower | 6V or lower/1mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1 |
| Input resistance | | Approx. 2.7kΩ | 5.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| Response | OFF to ON | 10ms or less | Configured in the parameter.*3 | 0 | Set the input response time of |
| time | ON to OFF | 10ms or less | Configured in the parameter.*3 | 0 | parameters to 10ms. |
| Common terr arrangement | ninal | 32 points/common (common terminal: TB9, TB18, TB27, TB36) | 32 points/common (common terminal: B01, B02) | 0 | |
| Operation inc | lication | ON indication (LED) | | 0 | |
| External inter | face | 38-point terminal block (M3 × 6 screws) | 40-pin connector (A6CON1/2/3/4) | × | Wiring needs to be changed after replacement. |
| Applicable wi | re size | 0.75 to 2mm | 0.088 to 0.3mm | × | By using the upgrade tool conversion adapter (ERNT- |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | _ | _ | 1AR41X), the existing external wiring and terminal blocks in the existing system can be used.*4 |
| Number of oc | ccupied I/O | 32 (I/O assignment: Input 32 points) | | 0 | |
| Internal curre | | 110mA (TYP. all points ON) | 150mA (TYP. all points ON) | _ | |
| External dime | ensions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×110(D)mm | _ | |
| Weight | | 0.49kg | 0.11kg | - | |
| | | | | | |

^{*1} Check the specifications of sensors and switches connected to the RX41C4.

^{*2} The following figure shows a derating chart.

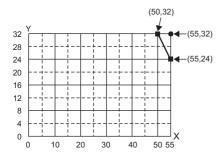

- ●: Input voltage 26.4VDC
- ■: Input voltage 28.8VDC
- X: Ambient temperature (°C)

Y: Number of simultaneous on points (point)

*3 The following table shows the input response times.

| Timing | Set value | Set value | | | | | | | | |
|------------------|-----------|-----------|-------|-------|-----|-----|------|------|------|--|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms | |
| OFF to ON (MAX.) | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms | |
| ON to OFF (MAX.) | 0.2ms | 0.3ms | 0.5ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms | |

^{*4} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX40 (when 24VDC is used) and RX40C7

| Item | | Specifications | | Compatibility | Precautions | | |
|--------------------------------|-------------|---|---|---------------|--|--|--|
| | | AX40 | RX40C7 | _ | | | |
| Input type | | DC input (positive common type) | DC input (positive common/ negative common shared type) | 0 | | | |
| Number of in | put points | 16 | | 0 | | | |
| Isolation met | nod | Photocoupler | | 0 | | | |
| Rated input v | oltage | 12/24VDC (+10/-15%, ripple ratio within 5%) | 24VDC (+20/-15%, ripple ratio within 5%) | 0 | | | |
| Rated input o | urrent | Approx. 4mA (12VDC) Approx. 10mA (24VDC) | 7mA TYP. (at 24VDC) | Δ | The rated input current is decreased after replacement.*1 | | |
| Maximum nu | | 100% (8 points/common) | 100% (16 points) | 0 | | | |
| ON voltage/C | N current | 9.5VDC or higher/3mA or higher | 15V or higher/4mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1 | | |
| OFF voltage/OFF current | | 6VDC or lower/1.5mA or lower | 8V or lower/2mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1 | | |
| Input resistance | | Approx. 2.4kΩ | 3.3kΩ | Δ | The input resistance is changed after replacement.*1 | | |
| Response | OFF to ON | 10ms or less | Configured in the parameter.*2 | 0 | Set the input response time of | | |
| time | ON to OFF | 10ms or less | Configured in the parameter.*2 | 0 | parameters to 10ms. | | |
| Common terr arrangement | ninal | 8 points/common (common terminal: TB9, TB18) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. | | |
| Operation inc | lication | ON indication (LED) | | 0 | | | |
| External inter | face | 20-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after replacement. | | |
| Applicable wi | re size | 0.75 to 2mm | 0.3 to 0.75mm ² (Outside diameter: 2.8mm or less) | × | By using the upgrade tool conversion adapter (ERNT- | | |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | 1AR10XY), the existing external wiring and terminal blocks in the existing system can be used.*3 | | |
| Number of oc | ccupied I/O | 16 (I/O assignment: Input 16 points) | | 0 | | | |
| Internal curre | | 55mA (TYP. all points ON) | 110mA (TYP. all points ON) | _ | | | |
| External dime | ensions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | | | |
| Weight | | 0.36kg | 0.16kg | _ | | | |

^{*1} Check the specifications of sensors and switches connected to the RX40C7.

^{*2} The following table shows the input response times.

| Timing | Set value | Set value | | | | | | | | |
|------------------|-----------|-----------|-------|-------|-----|-----|------|------|------|--|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms | |
| OFF to ON (MAX.) | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms | |
| ON to OFF (MAX.) | 0.35ms | 0.4ms | 0.5ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms | |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX40 (when 12VDC is used) and RX70C4

 $\bigcirc : \textbf{Compatible}, \ \triangle : \textbf{Partly changed}, \ \times : \textbf{Incompatible}, \ - : \textbf{Not applicable}$

| Item | | Specifications | | Compatibility | Precautions |
|---|------------|---|--|---------------|--|
| | | AX40 | RX70C4 | | |
| Input type | | DC input (positive common type) | DC input (positive common/ negative common shared type) | 0 | |
| Number of in | out points | 16 | | 0 | |
| Isolation meth | nod | Photocoupler | | 0 | |
| Rated input v | oltage | 12/24VDC (+10/-15%, ripple ratio within 5%) | 5/12VDC (+20/-15%, ripple ratio within 5%) | 0 | |
| Rated input current | | Approx. 4mA (12VDC) Approx. 10mA (24VDC) | 1.7mA TYP. (at 5VDC) 4.8mA TYP. (at 12VDC) | 0 | |
| Maximum number of simultaneous input points | | 100% (8 points/common) | 100% (16 points) | 0 | |
| ON voltage/ON current | | 9.5VDC or higher/3mA or higher | 3.5V or higher/1mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1 |
| OFF voltage/OFF current | | 6VDC or lower/1.5mA or lower | 1V or lower/0.1mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1 |
| Input resistance | | Approx. 2.4kΩ | 2.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| Response | OFF to ON | 10ms or less | Configured in the parameter.*2 | 0 | Set the input response time of |
| time | ON to OFF | 10ms or less | Configured in the parameter.*2 | 0 | parameters to 10ms. |
| Common terminal arrangement | | 8 points/common (common terminal: TB9, TB18) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation ind | ication | ON indication (LED) | | 0 | |
| External inter | face | 20-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after replacement. |
| Applicable wire size | | 0.75 to 2mm | 0.3 to 0.75mm ² (Outside diameter: 2.8mm or less) | × | By using the upgrade tool conversion adapter (ERNT- |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | - 1AR10XY), the existing external wiring and terminal blocks in the existing system can be used. ^{*3} |
| Number of oc | cupied I/O | 16 (I/O assignment: Input 16 points) | | 0 | |
| Internal curre consumption | | 55mA (TYP. all points ON) | 100mA (TYP. all points ON) | - | |
| External dime | ensions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.36kg | 0.16kg | _ | |

^{*1} Check the specifications of sensors and switches connected to the RX70C4.

^{*2} The following table shows the input response times.

| Timing | Set value | Set value | | | | | | | |
|------------------|-----------|-----------|-------|-------|-----|-----|------|------|------|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| OFF to ON (MAX.) | 0.2ms | 0.3ms | 0.4ms | 0.5ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| ON to OFF (MAX.) | 0.41ms | 0.5ms | 0.6ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX40-UL (when 24VDC is used) and RX40C7

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|------------|--|---|---------------|--|
| | | AX40-UL | RX40C7 | _ | |
| Input type | | DC input (positive common type) | DC input (positive common/ negative common shared type) | 0 | |
| Number of inp | out points | 16 | 0 | | |
| Isolation meth | od | Photocoupler | | 0 | |
| Rated input v | oltage | 12/24VDC (+10/-15%, ripple ratio within 5%) | 24VDC (+20/-15%, ripple ratio within 5%) | 0 | |
| Rated input c | urrent | Approx. 4mA (12VDC), Approx. 10mA (24VDC) | 7mA TYP. (at 24VDC) | Δ | The rated input current is decreased after replacement.*1 |
| Maximum nur simultaneous | | 100% (8 points/common) | 100% (16 points) | 0 | |
| ON voltage/O | N current | 9.5VDC or higher/3mA or higher | 15V or higher/4mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1 |
| OFF voltage/OFF current | | 6VDC or lower/1.5mA or lower | 8V or lower/2mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1 |
| Input resistance | | Approx. 2.4kΩ | 3.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| Response OFF to ON | | 10ms or less | Configured in the parameter.*2 | 0 | Set the input response time of |
| time | ON to OFF | 10ms or less | Configured in the parameter.*2 | 0 | parameters to 10ms. |
| Withstand voltage | | Between DC external connecting terminals and general grounding 500VAC rms for 1 minute | 510VAC rms for 1 minute | 0 | |
| Isolation resis | tance | $5M\Omega$ or more by insulation resistance tester | 10MΩ or more by insulation resistance tester | 0 | |
| Noise immuni | ty | By noise simulator of 500Vp-p noise and 25 to 60Hz noise frequency | e voltage, 1μs noise width | 0 | |
| Common terminal arrangement | | 8 points/common (common terminal: TB9, TB18) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation ind | ication | ON indication (LED) | | 0 | |
| External inter | face | 20-point terminal block (M3.5 \times 7 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after replacement. |
| Applicable wire size | | 0.75 to 2mm² (14 to 18 AWG) | 0.3 to 0.75mm (Outside diameter: 2.8mm or less) | × | By using the upgrade tool conversion adapter (ERNT-1AR10XY), the existing |
| Applicable solderless terminal | | RAV1.25-3.5, RAV2-3.5 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | external wiring and terminal blocks in the existing system can be used.*3 |
| Number of oc points | cupied I/O | 16 (I/O assignment: Input 16 points) | | 0 | |
| Internal curre | | 55mA (TYP. all points ON) | 110mA (TYP. all points ON) | _ | |
| External dime | nsions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.36kg | 0.16kg | _ | |

^{*1} Check the specifications of sensors and switches connected to the RX40C7.

^{*2} The following table shows the input response times.

| Timing | Set value | | | | | | | | |
|------------------|-----------|-------|-------|-------|-----|-----|------|------|------|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| OFF to ON (MAX.) | 0.2ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| ON to OFF (MAX.) | 0.35ms | 0.4ms | 0.5ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX40-UL (when 12VDC is used) and RX70C4

 $\bigcirc : \textbf{Compatible}, \ \triangle : \textbf{Partly changed}, \ \times : \textbf{Incompatible}, \ - : \textbf{Not applicable}$

| Item | | Specifications | Compatibility | Precautions | | |
|---|-------------|--|---|-------------|---|--|
| | | AX40-UL | RX70C4 | | | |
| Input type | | DC input (positive common type) | DC input (positive common/ negative common shared type) | 0 | | |
| Number of in | out points | 16 | 0 | | | |
| Isolation meth | nod | Photocoupler | 0 | | | |
| Rated input v | oltage | 12/24VDC (+10/-15%, ripple ratio within 5%) | 5/12VDC (+20/-15%, ripple ratio within 5%) | 0 | | |
| Rated input current | | Approx. 4mA (12VDC) Approx. 10mA (24VDC) | 1.7mA TYP. (at 5VDC) 4.8mA TYP. (at 12VDC) | 0 | | |
| Maximum nui simultaneous | | 100% (8 points/common) | 100% (16 points) | 0 | | |
| ON voltage/ON current | | 9.5VDC or higher/3mA or higher | 3.5V or higher/1mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1 | |
| OFF voltage/ | OFF current | 6VDC or lower/1.5mA or lower | 1V or lower/0.1mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1 | |
| Input resistan | ice | Approx. 2.4kΩ | 2.3kΩ | Δ | The input resistance is changed after replacement.*1 | |
| Response time OFF to ON ON to OFF Withstand voltage | | 10ms or less | Configured in the parameter.*2 | 0 | Set the input response time of | |
| | | 10ms or less | Configured in the parameter.*2 | 0 | parameters to 10ms. | |
| | | Between DC external connecting terminals and general grounding 500VAC rms for 1 minute | 510VAC rms for 1 minute | 0 | | |
| Isolation resis | stance | 5M $Ω$ or more by insulation resistance tester | 10MΩ or more by insulation resistance tester | 0 | | |
| Noise immun | ity | By noise simulator of 500Vp-p noise and 25 to 60Hz noise frequency | e voltage, 1μs noise width | 0 | | |
| Common terminal arrangement | | 8 points/common (common terminal: TB9, TB18) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. | |
| Operation ind | lication | ON indication (LED) | | 0 | | |
| External inter | face | 20-point terminal block (M3.5 \times 7 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after replacement. | |
| Applicable wire size | | 0.75 to 2mm² (14 to 18 AWG) | 0.3 to 0.75mm ² (Outside diameter: 2.8mm or less) | × | By using the upgrade tool conversion adapter (ERNT- | |
| Applicable solderless terminal | | RAV1.25-3.5, RAV2-3.5 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | 1AR10XY), the existing external wiring and terminal blocks in the existing system can be used. ^{*3} | |
| Number of occupied I/O points | | 16 (I/O assignment: Input 16 points) |) | 0 | | |
| Internal curre consumption | | 55mA (TYP. all points ON) | 100mA (TYP. all points ON) | _ | | |
| External dime | ensions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | | |
| Weight | | 0.36kg | 0.16kg | _ | | |

^{*1} Check the specifications of sensors and switches connected to the RX70C4.

^{*2} The following table shows the input response times.

| Timing | Set value | | | | | | | | |
|------------------|-----------|-------|-------|-------|-----|-----|------|------|------|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| OFF to ON (MAX.) | 0.2ms | 0.3ms | 0.4ms | 0.5ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| ON to OFF (MAX.) | 0.41ms | 0.5ms | 0.6ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms |


^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX41 (when 24VDC is used) and RX41C4

 $\bigcirc : \textbf{Compatible}, \ \triangle : \textbf{Partly changed}, \ \times : \textbf{Incompatible}, \ -\!\!\!-\!\!\!- : \textbf{Not applicable}$

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|-------------|--|--|---------------|---|
| | | AX41 | RX41C4 | | |
| Input type | | DC input (positive common type) | DC input (positive common/ negative common shared type) | 0 | |
| Number of in | put points | 32 | 0 | | |
| Isolation met | nod | Photocoupler | | 0 | |
| Rated input v | oltage | 12/24VDC (+10/-15%, ripple ratio within 5%) | 24VDC (+20/-15%, ripple ratio within 5%) | 0 | |
| Rated input current | | Approx. 4mA (12VDC) Approx. 10mA (24VDC) | 4mA TYP. (at 24VDC) | Δ | The rated input current is decreased after replacement.*1 |
| Maximum nu simultaneous | | 60% (5 points/common) | Refer to the derating chart.*2 | Δ | Use the module within the range shown in the derating chart. |
| ON voltage/0 | N current | 9.5VDC or higher/3mA or higher | 19V or higher/3mA or higher | Δ | The ON voltage is changed after replacement.*1 |
| OFF voltage/ | OFF current | 6VDC or lower/1.5mA or lower | 6V or lower/1mA or lower | Δ | The OFF current is changed after replacement.*1 |
| Input resistance | | Approx. 2.4kΩ | 5.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| Response OFF to ON | | 10ms or less | Configured in the parameter.*3 | 0 | Set the input response time of |
| time | ON to OFF | 10ms or less | Configured in the parameter.*3 | 0 | parameters to 10ms. |
| Common terr arrangement | ninal | 8 points/common (common terminal: TB9, TB18, TB27, TB36) | 32 points/common (common terminal: B01, B02) | Δ | As the common changes from four commons to a common, wiring with a different voltage for each common is not possible. |
| Operation inc | lication | ON indication (LED) | | 0 | |
| External inter | face | 38-point terminal block (M3 × 6 screws) | 40-pin connector (A6CON1/2/3/4) | × | Wiring needs to be changed after replacement. |
| Applicable wi | re size | 0.75 to 2mm² | 0.088 to 0.3mm² | × | By using the upgrade tool |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | _ | _ | conversion adapter (ERNT- 1AR41X), the existing external wiring and terminal blocks in the existing system can be used.*4 |
| Number of occupied I/O points | | 32 (I/O assignment: Input 32 points) | | 0 | |
| Internal curre | | 110mA (TYP. all points ON) | 150mA (TYP. all points ON) | _ | |
| External dime | ensions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×110(D)mm | _ | |
| Weight | | 0.44kg | 0.11kg | _ | |

- *1 Check the specifications of sensors and switches connected to the RX41C4.
- *2 The following figure shows a derating chart.

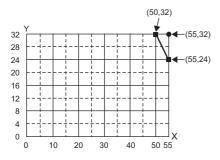

- ●: Input voltage 26.4VDC
- ■: Input voltage 28.8VDC
- X: Ambient temperature (°C)
- Y: Number of simultaneous on points (point)

*3 The following table shows the input response times.

| Timing | Set value | | | | | | | | |
|------------------|-----------|-------|-------|-------|-----|-----|------|------|------|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| OFF to ON (MAX.) | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| ON to OFF (MAX.) | 0.2ms | 0.3ms | 0.5ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms |

^{*4} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX41 (when 12VDC is used) and RX71C4

| current are changed replacement. 1 Input resistance Approx. 2.4kΩ Approx. 2.4kΩ Configured in the parameter. 2 OSet the input resistance changed after replacement. 1 Number of occupied I/O Approx. 2.4kΩ Approx. 2.4kΩ 2.3kΩ Configured in the parameter. 2 OSet the input respondence parameters to 10ms Configured in the parameter. 2 OSet the input respondence parameters to 10ms As the common changed after replacement. 32 points/common (common terminal: TB9, TB18, TB27, TB36) Approx. 2.4kΩ Approx. 2 | Precautions | | Compatibility | | Specifications | | Item | |
|--|--|--|---------------|---------------------------------|---------------------------------------|-------------|-------------------------|--|
| Number of input points 32 Sample of the points 32 Sample of the points Sample | | | | RX71C4 | AX41 | | | |
| Solation method Photocoupler | | | 0 | | DC input (positive common type) | | Input type | |
| Rated input voltage 12/24VDC (+10/-15%, ripple ratio within 5%) 5/12VDC (+20/-15%, ripple ratio with 5%) 5/12VDC (+20/-15%, ripple ratio within 5%) 5/12VDC (+20/-15%, ripple ratio with 5%) 5/12VDC (+20/-15%, ripple ratio within 5%) 5/12VDC (+20/-15%, ripple ratio within 5%) 5/12VDC (+20/-15%) 5/12VDC | | | 0 | | 32 | out points | Number of inp | |
| Within 5% Within 5% Within 5% Within 5% | | | 0 | | Photocoupler | nod | Isolation meth | |
| Approx. 10mA (24VDC) 4.8mA TYP. (at 12VDC) 5.8min | | | 0 | | | oltage | Rated input vo | |
| simultaneous input points The ON voltage and current are changed replacement. 1 OFF voltage/OFF current 6VDC or lower/1.5mA or lower 1V or lower/0.1mA or lower Δ The OFF voltage and current are changed replacement. 1 OFF voltage/OFF current 6VDC or lower/1.5mA or lower 1V or lower/0.1mA or lower Δ The OFF voltage and current are changed replacement. 1 Input resistance Approx. 2.4kΩ 2.3kΩ Δ The input resistance changed after replacement. 1 Response Response time 0Ft to ON 10ms or less Configured in the parameter. 2 ○ Set the input response parameters to 10ms arrangement. 4 8 points/common (common terminal: B01, B02) As the common change four common terminal: B01, B02) As the common change four common terminal: B01, B02) As the common change four common terminal: B01, B02) As the common change four common terminal: B01, B02) Wirring needs to be after replacement. 4 External interface 38-point terminal block (M3 × 6 screws) 40-pin connector (A6CON1/2/3/4) × Wirring needs to be after replacement. 4 Applicable wire less terminal block terminal block terminal block terminal block terminal the existing system used. 3 Number of occupied I/O 32 (I | | | 0 | , , | · · · · · · · · · · · · · · · · · · · | urrent | Rated input current | |
| Current are changed replacement.¹¹ OFF voltage/OFF current 6VDC or lower/1.5mA or lower 1V or lower/0.1mA or lower △ The OFF voltage are current are changed replacement.¹¹ Input resistance Approx. 2.4kΩ 2.3kΩ △ The input resistance changed after replacement.¹¹ Response time OFF to ON 10ms or less Configured in the parameter.²² ○ Set the input response parameters to 10ms Common terminal arrangement 8 points/common (common terminal: TB9, TB18, TB27, TB36) 32 points/common (common terminal: B01, B02) As the common change for each common terminal: B01, B02) Operation indication ON indication (LED) External interface 38-point terminal block (M3 × 6 screws) 40-pin connector (A6CON1/2/3/4) × Wiring needs to be after replacement. Applicable wire size 0.75 to 2mm² 0.088 to 0.3mm² × By using the upgrade conversion adapter 1AR41X), the existing system used.³3 Number of occupied I/O 32 (I/O assignment: Input 32 points) ○ ○ | | | 0 | 100% (32 points) | 60% (5 points/common) | | | |
| Courrent are changed replacement.*1 | are changed after | curre | Δ | 3.5V or higher/1mA or higher | 9.5VDC or higher/3mA or higher | N current | ON voltage/O | |
| Response time OFF to ON 10ms or less Configured in the parameter.*2 ○ Set the input response time ON to OFF 10ms or less Configured in the parameter.*2 ○ Parameters to 10ms or less Configured in the parameter.*2 ○ As the common character or parameters to 10ms or less Configured in the parameter.*2 ○ As the common character or learning or l | are changed after | current are changed | | 1V or lower/0.1mA or lower | 6VDC or lower/1.5mA or lower | OFF current | OFF voltage/OFF current | |
| time ON to OFF 10ms or less Configured in the parameter.*2 ○ parameters to 10ms Common terminal arrangement | it resistance is after replacement.*1 | | Δ | 2.3kΩ | Approx. 2.4kΩ | ce | Input resistance | |
| Common terminal arrangement | nput response time o | | 0 | Configured in the parameter.*2 | 10ms or less | OFF to ON | Response | |
| arrangement terminal: TB9, TB18, TB27, TB36) terminal: B01, B02) four commons to a wiring with a different for each common is possible. Operation indication ON indication (LED) OBSTACLARY STATES OF STATES | ers to 10ms. | parar | 0 | Configured in the parameter.*2 | 10ms or less | ON to OFF | time | |
| External interface 38-point terminal block (M3 × 6 screws) Applicable wire size 0.75 to 2mm² Applicable solderless terminal R1.25-3, R2-3, RAV1.25-3, RAV2-3 The matrix of a cocupied I/O 32 (I/O assignment: Input 32 points) 40-pin connector (A6CON1/2/3/4) × 0.088 to 0.3mm² × 0.088 to 0.3mm² × The matrix of a conversion adapter 1AR41X), the existing wiring and terminal the existing system used.*3 | | four of wiring for ea | Δ | · · | | ninal | | |
| Applicable wire size 0.75 to 2mm² 0.088 to 0.3mm² × Applicable solderless terminal R1.25-3, R2-3, RAV1.25-3, RAV2-3 RAV2-3 RIAPITICAL RAV1.25-3, RAV1.25-3, RAV1.25-3, RAV2-3 RIAPITICAL RAV1.25-3, RAV1. | | | 0 | | ON indication (LED) | ication | Operation indi | |
| Applicable wire size 0.73 to 2lilli 0.08 to 0.3lilli 2 conversion adapter 1AR41X), the existing wiring and terminal the existing system used.*3 Number of occupied I/O 32 (I/O assignment: Input 32 points) | • | Wiring needs to be char after replacement. | | 40-pin connector (A6CON1/2/3/4) | ' ' | face | External interf | |
| Applicable solderless terminal R1.25-3, R2-3, RAV1.25-3, RAV2-3 | · - | - | × | 0.088 to 0.3mm | 0.75 to 2mm² | re size | Applicable wir | |
| · · · · · · · · · · · · · · · · · · · |), the existing externand terminal blocks in | 1AR4 wiring the e | _ | _ | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | • • | | |
| pointo | | | 0 | | 32 (I/O assignment: Input 32 points) | cupied I/O | Number of occupoints | |
| Internal current consumption (5VDC) 110mA (TYP. all points ON) 140mA (TYP. all points ON) — | | | _ | 140mA (TYP. all points ON) | 110mA (TYP. all points ON) | | | |
| External dimensions 250(H)×37.5(W)×131(D)mm 106(H)×27.8(W)×110(D)mm — | | | _ | 106(H)×27.8(W)×110(D)mm | 250(H)×37.5(W)×131(D)mm | ensions | External dime | |
| Weight 0.44kg 0.12kg — | | | _ | 0.12kg | 0.44kg | | Weight | |

^{*1} Check the specifications of sensors and switches connected to the RX71C4.

^{*2} The following table shows the input response times.

| Timing | Set value | Set value | | | | | | | |
|------------------|-----------|-----------|-------|-------|-----|-----|------|------|------|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| OFF to ON (MAX.) | 0.2ms | 0.3ms | 0.5ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| ON to OFF (MAX.) | 0.21ms | 0.3ms | 0.5ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.


AX41-S1 (when 24VDC is used) and RX41C4

 \bigcirc : Compatible, \triangle : Partly changed, \times : Incompatible, -: Not applicable

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|-------------|--|--|---------------|---|
| | | AX41-S1 | RX41C4 | | |
| Input type | | DC input (positive common type) | DC input (positive common/ negative common shared type) | 0 | |
| Number of in | put points | 32 | | 0 | |
| Isolation met | hod | Photocoupler | | 0 | |
| Rated input v | oltage | 12/24VDC (+10/-15%, ripple ratio within 5%) | 24VDC (+20/-15%, ripple ratio within 5%) | 0 | |
| Rated input of | current | Approx. 4mA (12VDC) Approx. 10mA (24VDC) | 4mA TYP. (at 24VDC) | Δ | The rated input current is decreased after replacement.*1 |
| Maximum nu simultaneous | | 60% (5 points/common) | Refer to the derating chart.*2 | Δ | Use the module within the range shown in the derating chart. |
| ON voltage/0 | ON current | 9.5VDC or higher/3mA or higher | 19V or higher/3mA or higher | Δ | The ON voltage is changed after replacement.*1 |
| OFF voltage/ | OFF current | 6VDC or lower/1.5mA or lower | 6V or lower/1mA or lower | Δ | The OFF current is changed after replacement.*1 |
| Input resistar | nce | Approx. 2.4kΩ | 5.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| Response OFF to ON | | 0.1ms or less | Configured in the parameter.*3 | 0 | Set the input response time of |
| time | ON to OFF | 0.2ms or less | Configured in the parameter.*3 | 0 | parameters to 0.1ms. |
| Common terr arrangement | | 8 points/common (common terminal: TB9, TB18, TB27, TB36) | 32 points/common (common terminal: B01, B02) | Δ | As the common changes from four commons to a common, wiring with a different voltage for each common is not possible. |
| Operation inc | dication | ON indication (LED) | 1 | 0 | |
| External inter | face | 38-point terminal block (M3 × 6 screws) | 40-pin connector (A6CON1/2/3/4) | × | Wiring needs to be changed after replacement. |
| Applicable w | ire size | 0.75 to 2mm² | 0.088 to 0.3mm² | × | By using the upgrade tool |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | _ | × | conversion adapter (ERNT- 1AR41X), the existing external wiring and terminal blocks in the existing system can be used.*4 |
| Number of oc | ccupied I/O | 32 (I/O assignment: Input 32 points) | | 0 | |
| Internal curre | | 110mA (TYP. all points ON) | 150mA (TYP. all points ON) | _ | |
| External dime | ensions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×110(D)mm | _ | |
| Weight | | 0.44kg | 0.11kg | _ | |

^{*1} Check the specifications of sensors and switches connected to the RX41C4.

^{*2} The following figure shows a derating chart.

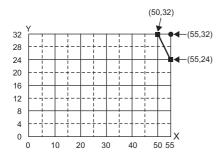

- ●: Input voltage 26.4VDC
- ■: Input voltage 28.8VDC

X: Ambient temperature (°C)

Y: Number of simultaneous on points (point)

*3 The following table shows the input response times.

| Timing | Set value | | | | | | | | |
|------------------|-----------|-------|-------|-------|-----|-----|------|------|------|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| OFF to ON (MAX.) | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| ON to OFF (MAX.) | 0.2ms | 0.3ms | 0.5ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms |

^{*4} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX41-S1 (when 12VDC is used) and RX71C4

| Item | | Specifications | | Compatibility | Precautions |
|---|-------------|--|--|---------------|---|
| | | AX41-S1 | RX71C4 | | |
| Input type | | DC input (positive common type) | DC input (positive common/ negative common shared type) | 0 | |
| Number of in | put points | 32 | | 0 | |
| Isolation meth | nod | Photocoupler | | 0 | |
| Rated input v | oltage | 12/24VDC (+10/-15%, ripple ratio within 5%) | 5/12VDC (+20/-15%, ripple ratio within 5%) | 0 | |
| Rated input c | urrent | Approx. 4mA (12VDC) Approx. 10mA (24VDC) | 1.7mA TYP. (at 5VDC) 4.8mA TYP. (at 12VDC) | 0 | |
| Maximum nui | | 60% (5 points/common) | 100% (32 points) | 0 | |
| ON voltage/ON current OFF voltage/OFF current | | 9.5VDC or higher/3mA or higher | 3.5V or higher/1mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1 |
| | | 6VDC or lower/1.5mA or lower | 1V or lower/0.1mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1 |
| Input resistance | | Approx. 2.4kΩ | 2.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| Response | OFF to ON | 0.1ms or less | Configured in the parameter.*2 | 0 | Set the input response time of |
| time | ON to OFF | 0.2ms or less | Configured in the parameter.*2 | 0 | parameters to 0.1ms. |
| Common terr arrangement | ninal | 8 points/common (common terminal: TB9, TB18, TB27, TB36) | 32 points/common (common terminal: B01, B02) | Δ | As the common changes from four commons to a common, wiring with a different voltage for each common is not possible. |
| Operation ind | lication | ON indication (LED) | | 0 | |
| External inter | face | 38-point terminal block (M3 × 6 screws) | 40-pin connector (A6CON1/2/3/4) | × | Wiring needs to be changed after replacement. |
| Applicable wi | re size | 0.75 to 2mm | 0.088 to 0.3mm² | × | By using the upgrade tool |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | 22-3, RAV1.25-3, RAV2-3 — | | conversion adapter (ERNT- 1AR41X), the existing external wiring and terminal blocks in the existing system can be used.*3 |
| Number of oc | ccupied I/O | 32 (I/O assignment: Input 32 points) | | 0 | |
| Internal curre | | 110mA (TYP. all points ON) | 140mA (TYP. all points ON) | _ | |
| External dime | ensions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×110(D)mm | _ | |
| Weight | | 0.44kg | 0.12kg | _ | |

^{*1} Check the specifications of sensors and switches connected to the RX71C4.

^{*2} The following table shows the input response times.


| Timing | Set value | | | | | | | | |
|------------------|-----------|-------|-------|-------|-----|-----|------|------|------|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| OFF to ON (MAX.) | 0.2ms | 0.3ms | 0.5ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| ON to OFF (MAX.) | 0.21ms | 0.3ms | 0.5ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX41-UL (when 24VDC is used) and RX41C4

| Item | | Specifications | | Compatibility | Precautions | | |
|--------------------------------|-------------|--|--|---------------|---|--|--|
| | | AX41-UL | RX41C4 | | | | |
| Input type | | DC input (positive common type) | DC input (positive common/ negative common shared type) | 0 | | | |
| Number of in | put points | 32 | | 0 | | | |
| Isolation met | nod | Photocoupler | | 0 | | | |
| Rated input v | oltage | 12/24VDC (+10/-15%, ripple ratio within 5%) | 24VDC (+20/-15%, ripple ratio within 5%) | 0 | | | |
| Rated input o | urrent | Approx. 4mA (12VDC) Approx. 10mA (24VDC) | 4mA TYP. (at 24VDC) | Δ | The rated input current is decreased after replacement.*1 | | |
| Maximum nu simultaneous | | 60% (5 points/common) | Refer to the derating chart.*2 | Δ | Use the module within the range shown in the derating chart. | | |
| ON voltage/C | N current | 9.5VDC or higher/3mA or higher | 19V or higher/3mA or higher | Δ | The ON voltage is changed after replacement.*1 | | |
| OFF voltage/ | OFF current | 6VDC or lower/1.5mA or lower | 6V or lower/1mA or lower | Δ | The OFF current is changed after replacement.*1 | | |
| Input resistance | | Approx. 2.4kΩ | 5.3kΩ | Δ | The input resistance is changed after replacement.*1 | | |
| Response | OFF to ON | 10ms or less | Configured in the parameter.*3 | 0 | Set the input response time | | |
| time | ON to OFF | 10ms or less | Configured in the parameter.*3 | 0 | parameters to 10ms. | | |
| Withstand voltage | | For 1 min at 500VAC rms between DC external connecting terminals and general grounding | 510VAC rms for 1 minute | 0 | | | |
| Isolation resis | stance | 5 M Ω or more by insulation resistance tester | 10M Ω or more by insulation resistance tester | 0 | | | |
| Noise immun | ity | By noise simulator of 500Vp-p noise and 25 to 60Hz noise frequency | voltage, 1μs noise width | 0 | | | |
| Common terr arrangement | ninal | 8 points/common (common terminal: TB9, TB18, TB27, TB36) | 32 points/common (common terminal: B01, B02) | Δ | As the common changes from four commons to a common, wiring with a different voltage for each common is not possible. | | |
| Operation inc | lication | ON indication (LED) | | 0 | | | |
| External inter | face | 38-point terminal block (M3.5 \times 7 screws) | 40-pin connector (A6CON1/2/3/4) | × | Wiring needs to be changed after replacement. | | |
| Applicable wi | re size | 0.75 to 2mm (14 to 18 AWG) | 0.088 to 0.3mm² | × | By using the upgrade tool | | |
| Applicable solderless terminal | | RAV1.25-3.5, RAV2-3.5 | _ | _ | conversion adapter (ERNT- 1AR41X), the existing external wiring and terminal blocks in the existing system can be used.*4 | | |
| Number of oc | ccupied I/O | 32 (I/O assignment: Input 32 points) | • | 0 | | | |
| Internal curre | | 110mA (TYP. all points ON) | 150mA (TYP. all points ON) | _ | | | |
| External dime | ensions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×110(D)mm | _ | | | |
| Weight | | 0.44kg | 0.11kg | _ | | | |

- *1 Check the specifications of sensors and switches connected to the RX41C4.
- *2 The following figure shows a derating chart.

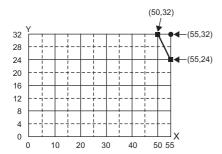

- ●: Input voltage 26.4VDC
- ■: Input voltage 28.8VDC
- X: Ambient temperature (°C)
- Y: Number of simultaneous on points (point)
- *3 The following table shows the input response times.

| Timing | Set value | | | | | | | | |
|------------------|-----------|-------|-------|-------|-----|-----|------|------|------|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| OFF to ON (MAX.) | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| ON to OFF (MAX.) | 0.2ms | 0.3ms | 0.5ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms |

^{*4} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX41-UL (when 12VDC is used) and RX71C4

 $\bigcirc : \textbf{Compatible}, \ \triangle : \textbf{Partly changed}, \ \times : \textbf{Incompatible}, \ - : \textbf{Not applicable}$

| Item | | Specifications | | Compatibility | Precautions |
|--|------------|--|--|---------------|---|
| | | AX41-UL | RX71C4 | | |
| Input type | | DC input (positive common type) | DC input (positive common/ negative common shared type) | 0 | |
| Number of in | out points | 32 | • | 0 | |
| Isolation met | nod | Photocoupler | | 0 | |
| Rated input v | oltage | 12/24VDC (+10/-15%, ripple ratio within 5%) | 5/12VDC (+20/-15%, ripple ratio within 5%) | 0 | |
| Rated input o | urrent | Approx. 4mA (12VDC) Approx. 10mA (24VDC) | 1.7mA TYP. (at 5VDC) 4.8mA TYP. (at 12VDC) | 0 | |
| Maximum nu simultaneous | | 60% (5 points/common) | 100% (32 points) | 0 | |
| ON voltage/C | N current | 9.5VDC or higher/3mA or higher | 3.5V or higher/1mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1 |
| OFF voltage/OFF current Input resistance | | 6VDC or lower/1.5mA or lower | 1V or lower/0.1mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1 |
| | | Approx. 2.4kΩ | 2.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| Response | OFF to ON | 10ms or less | Configured in the parameter.*2 | 0 | Set the input response time of |
| time | ON to OFF | 10ms or less | Configured in the parameter.*2 | 0 | parameters to 10ms. |
| Withstand vo | ltage | For 1 min at 500VAC rms between DC external connecting terminals and general grounding | 510VAC rms for 1 minute | 0 | |
| Isolation resis | stance | 5 Μ Ω or more by insulation resistance tester | 10M Ω or more by insulation resistance tester | 0 | |
| Noise immun | ity | By noise simulator of 500Vp-p noise and 25 to 60Hz noise frequency | voltage, 1μs noise width | 0 | |
| Common terr arrangement | ninal | 8 points/common (common terminal: TB9, TB18, TB27, TB36) | 32 points/common (common terminal: B01, B02) | Δ | As the common changes from four commons to a common, wiring with a different voltage for each common is not possible. |
| Operation inc | lication | ON indication (LED) | | 0 | |
| External inter | face | 38-point terminal block (M3.5 \times 7 screws) | 40-pin connector (A6CON1/2/3/4) | × | Wiring needs to be changed after replacement. |
| Applicable wi | re size | 0.75 to 2mm (14 to 18 AWG) | 0.088 to 0.3mm² | × | By using the upgrade tool |
| Applicable solderless terminal | | RAV1.25-3.5, RAV2-3.5 | _ | _ | conversion adapter (ERNT- 1AR41X), the existing external wiring and terminal blocks in the existing system can be used.*3 |
| Number of oc | cupied I/O | 32 (I/O assignment: Input 32 points) | | 0 | |
| Internal curre | | 110mA (TYP. all points ON) | 140mA (TYP. all points ON) | _ | |
| External dime | ensions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×110(D)mm | _ | |
| Weight | | 0.44kg | 0.12kg | _ | |

^{*1} Check the specifications of sensors and switches connected to the RX71C4.

^{*2} The following table shows the input response times.


| Timing | Set value | | | | | | | | Set value | | | | | | | |
|------------------|-----------|-------|-------|-------|-----|-----|------|------|-----------|--|--|--|--|--|--|--|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms | | | | | | | |
| OFF to ON (MAX.) | 0.2ms | 0.3ms | 0.5ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms | | | | | | | |
| ON to OFF (MAX.) | 0.21ms | 0.3ms | 0.5ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms | | | | | | | |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX42 (when 24VDC is used) and RX42C4

| Item | | Specifications | | Compatibility | Precautions |
|---|-------------|--|--|---------------|--|
| | | AX42 | RX42C4 | | |
| Input type | | DC input (positive common type) | DC input (positive common/ negative common shared type) | 0 | |
| Number of in | put points | 64 | | 0 | |
| Isolation met | hod | Photocoupler | | 0 | |
| Rated input v | oltage/ | 12/24VDC (+10/-15%, ripple ratio within 5%) | 24VDC (+20/-15%, ripple ratio within 5%) | 0 | |
| Rated input o | current | Approx. 3mA (12VDC) Approx. 7mA (24VDC) | 4mA TYP. (at 24VDC) | Δ | The rated input current is decreased after replacement.*1 |
| Maximum number of simultaneous input points | | 60% (20 points/common) | Refer to the derating chart.*2 | Δ | Use the module within the range shown in the derating chart. |
| ON voltage/0 | ON current | 9.5VDC or higher/3mA or higher | 19V or higher/3mA or higher | Δ | The ON voltage is changed after replacement.*1 |
| OFF voltage/ | OFF current | 6VDC or lower/1.5mA or lower | 6V or lower/1mA or lower | Δ | The OFF current is changed after replacement.*1 |
| Input resistar | nce | Approx. 3.4kΩ | 5.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| Response | OFF to ON | 10ms or less | Configured in the parameter.*3 | 0 | Set the input response time of |
| time | ON to OFF | 10ms or less | Configured in the parameter.*3 | 0 | parameters to 10ms. |
| Common terr arrangement | | 32 points/common (common terminal: 1B1, 1B2, 2B1, 2B2) | 32 points/common (common terminal: 1B01, 1B02, 2B01, 2B02) | 0 | |
| Operation inc | dication | ON indication (LED), 32 point switch | n-over using switch | 0 | |
| External inter | rface | 40-pin connector × 2 (A6CON1/2/3/4 | 4) | 0 | Existing external wiring can be |
| Applicable w | ire size | 0.088 to 0.3mm² | | 0 | used. |
| Number of occupied I/O points | | 64 (I/O assignment: Input 64 points) | | 0 | |
| Internal curre | | 120mA (TYP. all points ON) | 180mA (TYP. all points ON) | _ | |
| External dime | ensions | 250(H)×37.5(W)×106(D)mm | 106(H)×27.8(W)×110(D)mm | _ | |
| Weight | | 0.51kg | 0.13kg | _ | |

- *1 Check the specifications of sensors and switches connected to the RX42C4.
- *2 The following figure shows a derating chart.

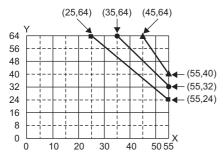

- ▲: Input voltage 24VDC
- ●: Input voltage 26.4VDC
- ■: Input voltage 28.8V
- X: Ambient temperature (°C)
- Y: Number of simultaneous on points (point)
- *3 The following table shows the input response times.

| Timing | Set value | et value | | | | | | | | |
|------------------|-----------|----------|-------|-------|-----|-----|------|------|------|--|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms | |
| OFF to ON (MAX.) | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms | |
| ON to OFF (MAX.) | 0.2ms | 0.3ms | 0.5ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms | |

AX42 (when 12VDC is used) and RX72C4

| Item | | Specifications | | Compatibility | Precautions |
|-------------------------------|-------------|--|--|---------------|--|
| | | AX42 | RX72C4 | 1 | |
| Input type | | DC input (positive common type) | DC input (positive common/ negative common shared type) | 0 | |
| Number of in | put points | 64 | | 0 | |
| Isolation meth | hod | Photocoupler | 0 | | |
| Rated input v | roltage | 12/24VDC (+10/-15%, ripple ratio within 5%) | 5/12VDC (+20/-15%, ripple ratio within 5%) | 0 | |
| Rated input c | urrent | Approx. 3mA (12VDC) Approx. 7mA (24VDC) | 1.7mA TYP. (at 5VDC) 4.8mA TYP. (at 12VDC) | 0 | |
| Maximum nui | | 60% (20 points/common) | 100% (64 points) | 0 | |
| ON voltage/ON current | | 9.5VDC or higher/3mA or higher | 3.5V or higher/1mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1 |
| OFF voltage/ | OFF current | 6VDC or lower/1.5mA or lower | lower/1.5mA or lower 1V or lower/0.1mA or lower | | The OFF voltage and OFF current are changed after replacement.*1 |
| Input resistan | nce | Approx. 3.4kΩ | 2.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| Response | OFF to ON | 10ms or less | Configured in the parameter.*2 | 0 | Set the input response time of |
| time | ON to OFF | 10ms or less | Configured in the parameter.*2 | 0 | parameters to 10ms. |
| Common terri arrangement | | 32 points/common (common terminal: 1B1, 1B2, 2B1, 2B2) | 32 points/common (common terminal: 1B01, 1B02, 2B01, 2B02) | 0 | |
| Operation ind | lication | ON indication (LED), 32 point switch | -over using switch | 0 | |
| External inter | face | 40-pin connector × 2 (A6CON1/2/3/4 |)) | 0 | Existing external wiring can be |
| Applicable wi | re size | 0.088 to 0.3mm ² | | 0 | used. |
| Number of occupied I/O points | | 64 (I/O assignment: Input 64 points) | | 0 | |
| Internal curre consumption | | 120mA (TYP. all points ON) | 150mA (TYP. all points ON) | _ | |
| External dime | ensions | 250(H)×37.5(W)×106(D)mm | 106(H)×27.8(W)×110(D)mm | _ | |
| Weight | | 0.51kg | 0.14kg | | |

^{*1} Check the specifications of sensors and switches connected to the RX72C4.


^{*2} The following table shows the input response times.

| Timing | Set value | | | | | | | | |
|------------------|-----------|-------|-------|-------|-----|-----|------|------|------|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| OFF to ON (MAX.) | 0.2ms | 0.3ms | 0.5ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| ON to OFF (MAX.) | 0.21ms | 0.3ms | 0.5ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |

AX42-S1 (when 24VDC is used) and RX42C4

| Item | | Specifications | | Compatibility | Precautions |
|--|--------------|--|--|---------------|--|
| Input type Number of inple input or in | | AX42-S1 | RX42C4 | 1 | |
| Input type | | DC input (positive common type) | DC input (positive common/ negative common shared type) | 0 | |
| Number of in | nput points | 64 | | 0 | |
| Isolation met | thod | Photocoupler | | 0 | |
| Rated input | voltage | 12/24VDC (+10/-15%, ripple ratio within 5%) | 24VDC (+20/-15%, ripple ratio within 5%) | 0 | |
| Rated input | current | Approx. 3mA (12VDC) Approx. 7mA (24VDC) | 4mA TYP. (at 24VDC) | Δ | The rated input current is decreased after replacement.*1 |
| | | 60% (20 points/common) | Refer to the derating chart.*2 | Δ | Use the module within the range shown in the derating chart. |
| ON voltage/0 | ON current | 9.5VDC or higher/3mA or higher | 19V or higher/3mA or higher | Δ | The ON voltage is changed after replacement.*1 |
| OFF voltage | /OFF current | 6VDC or lower/1.5mA or lower | 6V or lower/1mA or lower | Δ | The OFF current is changed after replacement.*1 |
| Input resista | nce | Approx. 3.4kΩ | 5.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| Response | OFF to ON | 0.5ms or less | Configured in the parameter.*3 | 0 | Set the input response time of |
| time | ON to OFF | 0.5ms or less | Configured in the parameter.*3 | 0 | parameters to 0.4ms. |
| Common ter | | 32 points/common (common terminal: 1B1, 1B2, 2B1, 2B2) | 32 points/common (common terminal: 1B01, 1B02, 2B01, 2B02) | 0 | |
| Operation in | dication | ON indication (LED), 32 point switch | n-over using switch | 0 | |
| External inte | rface | 40-pin connector × 2 (A6CON1/2/3/4 | 4) | 0 | Existing external wiring can be |
| Applicable w | rire size | 0.088 to 0.3mm² | | 0 | used. |
| Number of o points | ccupied I/O | 64 (I/O assignment: Input 64 points) | | 0 | |
| Internal curre | | 120mA (TYP. all points ON) | 180mA (TYP. all points ON) | _ | |
| External dim | ensions | 250(H)×37.5(W)×106(D)mm | 106(H)×27.8(W)×110(D)mm | _ | |
| Weight | | 0.51kg | 0.13kg | _ | |

- *1 Check the specifications of sensors and switches connected to the RX42C4.
- *2 The following figure shows a derating chart.

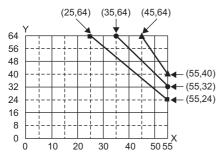

- ▲: Input voltage 24VDC
- ●: Input voltage 26.4VDC
- ■: Input voltage 28.8V
- X: Ambient temperature (°C)
- Y: Number of simultaneous on points (point)
- *3 The following table shows the input response times.

| Timing | Set value | et value | | | | | | | | |
|------------------|-----------|----------|-------|-------|-----|-----|------|------|------|--|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms | |
| OFF to ON (MAX.) | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms | |
| ON to OFF (MAX.) | 0.2ms | 0.3ms | 0.5ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms | |

AX42-S1 (when 12VDC is used) and RX72C4

| Item | | Specifications | | Compatibility | Precautions |
|-------------------------------|-------------|--|--|---------------|--|
| | | AX42-S1 | RX72C4 | | |
| Input type | | DC input (positive common type) | DC input (positive common/ negative common shared type) | 0 | |
| Number of in | put points | 64 | | 0 | |
| Isolation meth | hod | Photocoupler | 0 | | |
| Rated input v | oltage | 12/24VDC (+10/-15%, ripple ratio within 5%) | 5/12VDC (+20/-15%, ripple ratio within 5%) | 0 | |
| Rated input c | current | Approx. 3mA (12VDC) Approx. 7mA (24VDC) | 1.7mA TYP. (at 5VDC) 4.8mA TYP. (at 12VDC) | 0 | |
| Maximum nui | | 60% (20 points/common) | 100% (64 points) | 0 | |
| ON voltage/C | ON current | 9.5VDC or higher/3mA or higher | 3.5V or higher/1mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1 |
| OFF voltage/ | OFF current | 6VDC or lower/1.5mA or lower | 1V or lower/0.1mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1 |
| Input resistan | nce | Approx. 3.4kΩ | 2.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| Response | OFF to ON | 0.5ms or less | Configured in the parameter.*2 | 0 | Set the input response time of |
| time | ON to OFF | 0.5ms or less | Configured in the parameter.*2 | 0 | parameters to 0.4ms. |
| Common terri arrangement | | 32 points/common (common terminal: 1B1, 1B2, 2B1, 2B2) | 32 points/common (common terminal: 1B01, 1B02, 2B01, 2B02) | 0 | |
| Operation ind | dication | ON indication (LED), 32 point switch | -over using switch | 0 | |
| External inter | face | 40-pin connector × 2 (A6CON1/2/3/4 |)) | 0 | Existing external wiring can be |
| Applicable wi | ire size | 0.088 to 0.3mm² | | 0 | used. |
| Number of occupied I/O points | | 64 (I/O assignment: Input 64 points) | | 0 | |
| Internal curre consumption | | 120mA (TYP. all points ON) | 150mA (TYP. all points ON) | _ | |
| External dime | ensions | 250(H)×37.5(W)×106(D)mm | 106(H)×27.8(W)×110(D)mm | - | |
| Weight | | 0.51kg | 0.14kg | - | |

^{*1} Check the specifications of sensors and switches connected to the RX72C4.

^{*2} The following table shows the input response times.

| Timing | Set value | | | | | | | | |
|------------------|-----------|-------|-------|-------|-----|-----|------|------|------|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| OFF to ON (MAX.) | 0.2ms | 0.3ms | 0.5ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| ON to OFF (MAX.) | 0.21ms | 0.3ms | 0.5ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |

AX70 (when 24VDC is used) and RX40C7

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|-------------|---|---|---------------|--|
| | | AX70 | RX40C7 | _ | |
| Input type | | DC input (positive common/negative | common shared type) | 0 | |
| Number of in | put points | 16 | | 0 | |
| Isolation met | nod | Photocoupler | | 0 | |
| Rated input v | oltage | 5VDC (+10/-10%, ripple ratio within 5%) (SW ON) 12/24VDC (+10/-15%, ripple ratio within 5%) (SW OFF) | 24VDC (+20/-15%, ripple ratio within 5%) | 0 | |
| Rated input o | urrent | 3.5mA TYP./5.5mA MAX. (5VDC) 2mA TYP./3mA MAX. (12VDC) 4.5mA TYP./6mA MAX. (24VDC) | 7mA TYP. (at 24VDC) | 0 | |
| Maximum nu | | 100% (8 points/common) | 100% (16 points) | 0 | |
| ON voltage/C | N current | 3.5VDC or higher/1.0mA or higher (SW ON) 5VDC or higher/1.0mA or higher (SW OFF) | 15V or higher/4mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1 |
| OFF voltage/ | OFF current | 1.1VDC or lower/0.2mA or lower (SW ON) 2VDC or lower/0.2mA or lower (SW OFF) | 8V or lower/2mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1 |
| Input resistance | | Approx. 1.4kΩ (SW ON) Approx. 5.5kΩ (SW OFF) | 3.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| Response | OFF to ON | 1.5ms or less | Configured in the parameter.*2 | 0 | Set the input response time of |
| time | ON to OFF | 3ms or less | Configured in the parameter.*2 | 0 | parameters to 1ms. |
| Common terr arrangement | ninal | 8 points/common (common terminal: TB9, TB18) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation inc | lication | ON indication (LED) | | 0 | |
| External inter | face | 20-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after replacement. |
| Applicable wi | re size | 0.75 to 2mm | 0.3 to 0.75mm³ (Outside diameter: 2.8mm or less) | × | By using the upgrade tool conversion adapter (ERNT- |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | - 1AR10XY), the existing external wiring and terminal blocks in the existing system can be used.*3 |
| Number of oc | ccupied I/O | 16 (I/O assignment: Input 16 points) | | 0 | |
| Internal curre | | 55mA (TYP. all points ON) | 110mA (TYP. all points ON) | _ | |
| External dime | ensions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.36kg | 0.16kg | _ | |

^{*1} Check the specifications of sensors and switches connected to the RX40C7.

^{*2} The following table shows the input response times.

| Timing | Set value | | | | | | | | |
|------------------|-----------|-------|-------|-------|-----|-----|------|------|------|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| OFF to ON (MAX.) | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| ON to OFF (MAX.) | 0.35ms | 0.4ms | 0.5ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX70 (when 5/12VDC is used) and RX70C4

 $\bigcirc : \textbf{Compatible}, \ \triangle : \textbf{Partly changed}, \ \times : \textbf{Incompatible}, \ - : \textbf{Not applicable}$

| Item | | Specifications | | Compatibility | Precautions |
|----------------------------|---|---|--|---|--|
| | | AX70 | RX70C4 | | |
| Input type | | DC input (positive common/negative | common shared type) | 0 | |
| Number of in | put points | 16 | | 0 | |
| Isolation met | nod | Photocoupler | | 0 | |
| Rated input v | oltage | 5VDC (+10/-10%, ripple ratio within 5%) (SW ON) 12/24VDC (+10/-15%, ripple ratio within 5%) (SW OFF) | 5/12VDC (+20/-15%, ripple ratio within 5%) | 0 | |
| Rated input o | urrent | 3.5mA TYP./5.5mA MAX. (5VDC) 2mA TYP./3mA MAX. (12VDC) 4.5mA TYP./6mA MAX. (24VDC) | 1.7mA TYP. (at 5VDC) 4.8mA TYP. (at 12VDC) | Δ | The rated input current is decreased when 5VDC is used.*1 |
| Maximum nu | | 100% (8 points/common) | 100% (16 points) | 0 | |
| ON voltage/C | N current | 3.5VDC or higher/1.0mA or higher (SW ON) 5VDC or higher/1.0mA or higher (SW OFF) | 3.5V or higher/1mA or higher | Δ | The ON voltage is changed when 12VDC is used.*1 |
| OFF voltage/ | OFF current | 1.1VDC or lower/0.2mA or lower (SW ON) 2VDC or lower/0.2mA or lower (SW OFF) | 1V or lower/0.1mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1 |
| Input resistance | | Approx. 1.4k Ω (SW ON) Approx. 5.5k Ω (SW OFF) | 2.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| Response | OFF to ON | 1.5ms or less | Configured in the parameter.*2 | 0 | Set the input response time of |
| time | ON to OFF | 3ms or less | Configured in the parameter.*2 | 0 | parameters to 1ms. |
| Common terr arrangement | ninal | 8 points/common (common terminal: TB9, TB18) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation inc | lication | ON indication (LED) | | 0 | |
| External inter | face | 20-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after replacement. |
| Applicable wi | re size | 0.75 to 2mm | 0.3 to 0.75mm³ (Outside diameter: 2.8mm or less) | × | By using the upgrade tool conversion adapter (ERNT- |
| Applicable so terminal | e solderless R1.25-3, R2-3, RAV1.25-3, RAV2-3 R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | | × | 1AR10XY), the existing external wiring and terminal blocks in the existing system can be used.*3 | |
| Number of oc | ccupied I/O | 16 (I/O assignment: Input 16 points) | | 0 | |
| Internal curre | | 55mA (TYP. all points ON) | 100mA (TYP. all points ON) | _ | |
| External dime | ensions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.36kg | 0.16kg | _ | |

^{*1} Check the specifications of sensors and switches connected to the RX70C4.

^{*2} The following table shows the input response times.

| Timing | Set value | et value | | | | | | | | |
|------------------|-----------|----------|-------|-------|-----|-----|------|------|------|--|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms | |
| OFF to ON (MAX.) | 0.2ms | 0.3ms | 0.4ms | 0.5ms | 1ms | 5ms | 10ms | 20ms | 70ms | |
| ON to OFF (MAX.) | 0.41ms | 0.5ms | 0.6ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms | |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX70-UL (when 24VDC is used) and RX40C7

| Item | | Specifications | | Compatibility | Precautions |
|----------------------------|--|---|---|---------------|--|
| | | AX70-UL | RX40C7 | _ | |
| Input type | | DC input (positive common/negative | common shared type) | 0 | |
| Number of in | put points | 16 | , | 0 | |
| Isolation met | | Photocoupler | | 0 | |
| Rated input v | | 5VDC (ripple ratio within 5%) (SW ON) 12/24VDC (ripple ratio within 5%) (SW OFF) | 24VDC (+20/-15%, ripple ratio within 5%) | 0 | |
| Rated input o | current | 3.5mA TYP./5.5mA MAX. (5VDC) 2mA TYP./3mA MAX. (12VDC) 4.5mA TYP./6mA MAX. (24VDC) | 7mA TYP. (at 24VDC) | 0 | |
| Maximum nu simultaneous | | 100% (8 points/common) | 100% (16 points) | 0 | |
| ON voltage/0 | ON current | 3.5VDC or higher/1.0mA or higher (SW ON) 5VDC or higher/1.0mA or higher (SW OFF) | 15V or higher/4mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1 |
| OFF voltage/ | OFF current | 1.1VDC or lower/0.2mA or lower (SW ON) 2VDC or lower/0.2mA or lower (SW OFF) | 8V or lower/2mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1 |
| Input resistar | | | 3.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| Response | OFF to ON | 1.5ms or less | Configured in the parameter.*2 | 0 | Set the input response time o |
| time | ON to OFF | 3ms or less | Configured in the parameter.*2 | 0 | parameters to 1ms. |
| Withstand vo | ltage | Between DC external connecting terminals and general grounding 500VAC rms for 1 minute | 510VAC rms for 1 minute | 0 | |
| Isolation resi | stance | 5M $Ω$ or more by insulation resistance tester | 10MΩ or more by insulation resistance tester | 0 | |
| Noise immun | ity | By noise simulator of 500Vp-p noise and 25 to 60Hz noise frequency | voltage, 1μs noise width | 0 | |
| Common terr arrangement | | 8 points/common (common terminal: TB9, TB18) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation inc | dication | ON indication (LED) | • | 0 | |
| External inter | face | 20-point terminal block (M3.5 \times 7 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after replacement. |
| Applicable w | ire size | 0.75 to 2mm² (14 to 18 AWG) | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | By using the upgrade tool conversion adapter (ERNT- |
| Applicable so terminal | esponse ne OFF to ON ON to OFF ithstand voltage Dilation resistance Dise immunity Dommon terminal rangement Decration indication Atternal interface Diplicable wire size Diplicable solderless rminal Decration of occupied I/O on the property occupied I/O occup | RAV1.25-3.5, RAV2-3.5 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | 1AR10XY), the existing external wiring and terminal blocks in the existing system can be used.*3 |
| Number of or points | ccupied I/O | 16 (I/O assignment: Input 16 points) | | 0 | |
| Internal curre | | 55mA (TYP. all points ON) | 110mA (TYP. all points ON) | _ | |
| External dime | ensions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.36kg | 0.16kg | _ | |

- *1 Check the specifications of sensors and switches connected to the RX40C7.
- *2 The following table shows the input response times.

| Timing | Set value | | | | | | | | |
|------------------|-----------|-------|-------|-------|-----|-----|------|------|------|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| OFF to ON (MAX.) | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| ON to OFF (MAX.) | 0.35ms | 0.4ms | 0.5ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX70-UL (when 5/12VDC is used) and RX70C4

| Item | | Specifications | | Compatibility | Precautions |
|----------------------------|--|--|---|---------------|--|
| | | AX70-UL | RX70C4 | | |
| Input type | | DC input (positive common/negative | common shared type) | 0 | |
| Number of in | put points | 16 | , , | 0 | |
| Isolation met | | Photocoupler | | 0 | |
| Rated input v | | 5VDC (+10/-10%, ripple ratio within 5%) (SW ON) 12/24VDC (+10/-15%, ripple ratio within 5%) (SW OFF) | 5/12VDC (+20/-15%, ripple ratio within 5%) | 0 | |
| Rated input o | current | 3.5mA TYP./5.5mA MAX. (5VDC) 2mA TYP./3mA MAX. (12VDC) 4.5mA TYP./6mA MAX. (24VDC) | 1.7mA TYP. (at 5VDC) 4.8mA TYP. (at 12VDC) | Δ | The rated input current is decreased when 5VDC is used.*1 |
| Maximum nu simultaneous | | 100% (8 points/common) | 100% (16 points) | 0 | |
| ON voltage/0 | ON current | 3.5VDC or higher/1.0mA or higher (SW ON) 5VDC or higher/1.0mA or higher (SW OFF) | 3.5V or higher/1mA or higher | Δ | The ON voltage is changed when 12VDC is used.*1 |
| OFF voltage/ | OFF current | 1.1VDC or lower/0.2mA or lower (SW ON) 2VDC or lower/0.2mA or lower (SW OFF) | 1V or lower/0.1mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1 |
| Input resistar | nce | Approx. 1.4k Ω (SW ON) Approx. 5.5k Ω (SW OFF) | 2.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| Response | OFF to ON | 1.5ms or less | Configured in the parameter.*2 | 0 | Set the input response time of |
| time | ON to OFF | 3ms or less | Configured in the parameter.*2 | 0 | parameters to 1ms. |
| Withstand vo | ltage | Between DC external connecting terminals and general grounding 500VAC rms for 1 minute | 510VAC rms for 1 minute | 0 | |
| Isolation resi | stance | $5 \text{M}\Omega$ or more by insulation resistance tester | 10M Ω or more by insulation resistance tester | 0 | |
| Noise immun | iity | By noise simulator of 500Vp-p noise and 25 to 60Hz noise frequency | voltage, 1μs noise width | 0 | |
| Common terr arrangement | | 8 points/common (common terminal: TB9, TB18) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation inc | dication | ON indication (LED) | | 0 | |
| External inter | face | 20-point terminal block (M3.5 × 7 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after replacement. |
| Applicable w | peration indication xternal interface pplicable wire size pplicable solderless | 0.75 to 2mm² (14 to 18 AWG) | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | By using the upgrade tool conversion adapter (ERNT- |
| Applicable so terminal | olderless | RAV1.25-3.5, RAV2-3.5 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | 1AR10XY), the existing external wiring and terminal blocks in the existing system can be used.*3 |
| Number of or points | ccupied I/O | 16 (I/O assignment: Input 16 points) | 1 | 0 | |
| Internal curre | | 55mA (TYP. all points ON) | 100mA (TYP. all points ON) | _ | |
| External dime | ensions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.36kg | 0.16kg | _ | |
| | | 1 | I | 1 | I |

- *1 Check the specifications of sensors and switches connected to the RX70C4.
- *2 The following table shows the input response times.


| Timing | Set value | | | | | | | | |
|------------------|-----------|-------|-------|-------|-----|-----|------|------|------|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| OFF to ON (MAX.) | 0.2ms | 0.3ms | 0.4ms | 0.5ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| ON to OFF (MAX.) | 0.41ms | 0.5ms | 0.6ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX71 (when 24VDC is used) and RX41C4

| Item | | Specifications | | Compatibility | Precautions | | |
|---|-------------|--|--|---------------|---|--|--|
| | | AX71 | RX41C4 | | | | |
| Input type | | DC input (positive common/negative | common shared type) | 0 | | | |
| Number of in | put points | 32 | | 0 | | | |
| Isolation met | hod | Photocoupler | | 0 | | | |
| Rated input v | voltage | 5VDC (+10/-10%, ripple ratio within 5%) (SW ON) 12/24VDC (+10/-15%, ripple ratio within 5%) (SW OFF) | 24VDC (+20/-15%, ripple ratio within 5%) | 0 | | | |
| Rated input o | current | 3.5mA TYP./5.5mA MAX. (5VDC) 2mA TYP./3mA MAX. (12VDC) 4.5mA TYP./6mA MAX. (24VDC) | 4mA TYP. (at 24VDC) | Δ | The rated input current is decreased after replacement.*1 | | |
| Maximum number of simultaneous input points | | 100% (8 points/common) | Refer to the derating chart.*2 | Δ | Use the module within the range shown in the derating chart. | | |
| ON voltage/ON current | | 3.5VDC or higher/1.0mA or higher (SW ON) 5VDC or higher/1.0mA or higher (SW OFF) | 19V or higher/3mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1 | | |
| OFF voltage/ | OFF current | 1.1VDC or lower/0.2mA or lower (SW ON) 2VDC or lower/0.2mA or lower (SW OFF) | 6V or lower/1mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1 | | |
| Input resistar | nce | Approx. 1.4k Ω (SW ON) Approx. 5.5k Ω (SW OFF) | 5.3kΩ | Δ | The input resistance is changed after replacement.*1 | | |
| Response | OFF to ON | 1.5ms or less | Configured in the parameter.*3 | 0 | Set the input response time of | | |
| time | ON to OFF | 3ms or less | Configured in the parameter.*3 | 0 | parameters to 1ms. | | |
| Common terrarrangement | | 8 points/common (common terminal: TB9, TB18, TB27, TB36) | 32 points/common (common terminal: B01, B02) | Δ | As the common changes from four commons to a common, wiring with a different voltage for each common is not possible. | | |
| Operation in | dication | ON indication (LED) | | 0 | | | |
| External inte | rface | 38-point terminal block (M3 × 6 screws) | 40-pin connector (A6CON1/2/3/4) | × | Wiring needs to be changed after replacement. | | |
| Applicable w | ire size | 0.75 to 2mm | 0.088 to 0.3mm² | × | By using the upgrade tool | | |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | _ | _ | conversion adapter (ERNT- 1AR41X), the existing external wiring and terminal blocks in the existing system can be used.*4 | | |
| Number of o | ccupied I/O | 32 (I/O assignment: Input 32 points) | | 0 | | | |
| Internal curre | | 110mA (TYP. all points ON) | 150mA (TYP. all points ON) | _ | | | |
| External dime | ensions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×110(D)mm | - | | | |
| Weight | | 0.45kg | 0.11kg | - | | | |
| | | | | | | | |

- *1 Check the specifications of sensors and switches connected to the RX41C4.
- *2 The following figure shows a derating chart.

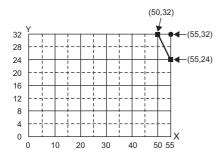

- ●: Input voltage 26.4VDC
- ■: Input voltage 28.8VDC
- X: Ambient temperature (°C)
- Y: Number of simultaneous on points (point)
- *3 The following table shows the input response times.

| Timing | Set value | | | | | | | | | |
|------------------|-----------|---|-------|-------|-----|-----|------|------|------|--|
| | 0.1ms | .1ms 0.2ms 0.4ms 0.6ms 1ms 5ms 10ms 20ms 70ms | | | | | | | | |
| OFF to ON (MAX.) | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms | |
| ON to OFF (MAX.) | 0.2ms | 0.3ms | 0.5ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms | |

^{*4} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX71 (when 5/12VDC is used) and RX71C4

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|------------|---|---|---------------|---|
| | | AX71 | RX71C4 | | |
| Input type | | DC input (positive common/negative | common shared type) | 0 | |
| Number of in | put points | 32 | | 0 | |
| Isolation met | hod | Photocoupler | | 0 | |
| Rated input v | roltage | 5VDC (+10/-10%, ripple ratio within 5%) (SW ON) 12/24VDC (+10/-15%, ripple ratio within 5%) (SW OFF) | 5/12VDC (+20/-15%, ripple ratio within 5%) | 0 | |
| Rated input o | urrent | 3.5mA TYP./5.5mA MAX. (5VDC) 2mA TYP./3mA MAX. (12VDC) 4.5mA TYP./6mA MAX. (24VDC) | 1.7mA TYP. (at 5VDC) 4.8mA TYP. (at 12VDC) | Δ | The rated input current is decreased when 5VDC is used.*1 |
| Maximum nu simultaneous | | 100% (8 points/common) | 100% (32 points) | 0 | |
| ON voltage/ON current | | 3.5VDC or higher/1.0mA or higher (SW ON) 5VDC or higher/1.0mA or higher (SW OFF) | 3.5V or higher/1mA or higher | Δ | The ON voltage is changed when 12VDC is used.*1 |
| OFF voltage/OFF current | | 1.1VDC or lower/0.2mA or lower (SW ON) 2VDC or lower/0.2mA or lower (SW OFF) | 1V or lower/0.1mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1 |
| Input resistance | | Approx. 1.4k Ω (SW ON) Approx. 5.5k Ω (SW OFF) | 2.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| Response | OFF to ON | 1.5ms or less | Configured in the parameter.*2 | 0 | Set the input response time of |
| time | ON to OFF | 3ms or less | Configured in the parameter.*2 | 0 | parameters to 1ms. |
| Common terr arrangement | minal | 8 points/common (common terminal: TB9, TB18, TB27, TB36) | 32 points/common (common terminal: B01, B02) | Δ | As the common changes from four commons to a common, wiring with a different voltage for each common is not possible. |
| Operation inc | dication | ON indication (LED) | | 0 | |
| External inter | face | 38-point terminal block (M3 × 6 screws) | 40-pin connector (A6CON1/2/3/4) | × | Wiring needs to be changed after replacement. |
| Applicable w | re size | 0.75 to 2mm | 0.088 to 0.3mm | × | By using the upgrade tool |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | _ | _ | conversion adapter (ERNT- 1AR41X), the existing external wiring and terminal blocks in the existing system can be used.*3 |
| Number of occupied I/O points | | 32 (I/O assignment: Input 32 points) | , | 0 | |
| Internal curre | | 110mA (TYP. all points ON) | 140mA (TYP. all points ON) | _ | |
| External dime | ensions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×110(D)mm | _ | |
| Weight | | 0.45kg | 0.12kg | _ | |

^{*1} Check the specifications of sensors and switches connected to the RX71C4.

^{*2} The following table shows the input response times.

| Timing | Set value | | | | | | | | | |
|------------------|-----------|-------|-------|-------|-----|-----|------|------|------|--|
| | 0.1ms | 0.1ms | | | | | | | | |
| OFF to ON (MAX.) | 0.2ms | 0.3ms | 0.5ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms | |
| ON to OFF (MAX.) | 0.21ms | 0.3ms | 0.5ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms | |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX80 (when 24VDC is used) and RX40C7

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|---------------|--|---|---------------|--|
| | | AX80 | RX40C7 | | |
| Input type | | DC input (negative common type) | DC input (positive common/negative common shared type) | 0 | |
| Number of inp | ut points | 16 | | 0 | |
| Isolation method | od | Photocoupler | | 0 | |
| Rated input vo | ltage | 12/24VDC (+10/-15%, ripple ratio within 5%) | ripple ratio 24VDC (+20/-15%, ripple ratio within 5%) | | |
| Rated input cu | rrent | 4mA (12VDC) 10mA (24VDC) | 7mA TYP. (at 24VDC) | Δ | The rated input current is decreased after replacement.*1 |
| Maximum num simultaneous i | | 100% (8 points/common) | 100% (16 points) | 0 | |
| ON voltage/ON current | | 9.5VDC or higher/3mA or higher | 15V or higher/4mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1 |
| OFF voltage/OFF current | | 6VDC or lower/1.5mA or lower | 8V or lower/2mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1 |
| Input resistance | | Approx. 2.4kΩ | 3.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| Response | OFF to ON | 10ms or less | Configured in the parameter.*2 | 0 | Set the input response |
| time | ON to OFF | 10ms or less | Configured in the parameter.*2 | 0 | time of parameters to 10ms. |
| Common term arrangement | inal | 8 points/common (common terminal: TB9, TB18) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indi | cation | ON indication (LED) | | 0 | |
| External interfa | ace | 20-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire | e size | 0.75 to 2mm | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool conversion adapter |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | (ERNT-1AR10XY), the existing external wiring and terminal blocks in the existing system can be used.*3 |
| Number of occupied I/O points | | 16 (I/O assignment: Input 16 points) | | 0 | |
| Internal curren (5VDC) | t consumption | 55mA (TYP. all points ON) | 110mA (TYP. all points ON) | _ | |
| External dimer | sions | 250(H)×37.5(W)×121(D)mm 106(H)×27.8(W)×131(D)m | | _ | |
| Weight | | 0.36kg | 0.16kg | _ | |

^{*1} Check the specifications of sensors and switches connected to the RX40C7.

^{*2} The following table shows the input response times.

| Timing | Set value | | | | | | | | |
|------------------|-----------|--|-------|-------|-----|-----|------|------|------|
| | 0.1ms | 1.1ms 0.2ms 0.4ms 0.6ms 1ms 5ms 10ms 20ms 70ms | | | | | | | |
| OFF to ON (MAX.) | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| ON to OFF (MAX.) | 0.35ms | 0.4ms | 0.5ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX80 (when 12VDC is used) and RX70C4

 $\bigcirc : \textbf{Compatible}, \ \triangle : \textbf{Partly changed}, \ \times : \textbf{Incompatible}, \ - : \textbf{Not applicable}$

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|----------------|--|---|---------------|--|
| | | AX80 | RX70C4 | 1 | |
| Input type | | DC input (negative common type) | DC input (positive common/negative common shared type) | 0 | |
| Number of inp | ut points | 16 | | 0 | |
| Isolation meth | od | Photocoupler | | 0 | |
| Rated input vo | oltage | 12/24VDC (+10/-15%, ripple ratio within 5%) | 5/12VDC (+20/-15%, ripple ratio within 5%) | 0 | |
| Rated input cu | ırrent | 4mA (12VDC) 10mA (24VDC) | 1.7mA TYP. (at 5VDC) 4.8mA TYP. (at 12VDC) | 0 | |
| Maximum nun simultaneous | | 100% (8 points/common) | 100% (16 points) | 0 | |
| ON voltage/ON current | | 9.5VDC or higher/3mA or higher | 3.5V or higher/1mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1 |
| OFF voltage/OFF current | | 6VDC or lower/1.5mA or lower | 1V or lower/0.1mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1 |
| Input resistance | | Approx. 2.4kΩ | 2.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| Response | OFF to ON | 10ms or less | Configured in the parameter.*2 | 0 | Set the input response |
| time | ON to OFF | 10ms or less | Configured in the parameter.*2 | 0 | time of parameters to 10ms. |
| Common term arrangement | inal | 8 points/common (common terminal: TB9, TB18) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indi | cation | ON indication (LED) | | 0 | |
| External interf | ace | 20-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire | e size | 0.75 to 2mm | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool conversion adapter |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | (ERNT-1AR10XY), the existing external wiring and terminal blocks in the existing system can be used.*3 |
| Number of occupied I/O points | | 16 (I/O assignment: Input 16 points) | | 0 | |
| Internal currer (5VDC) | nt consumption | 55mA (TYP. all points ON) | 100mA (TYP. all points ON) | _ | |
| External dime | nsions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.36kg | 0.16kg | _ | |

^{*1} Check the specifications of sensors and switches connected to the RX70C4.

^{*2} The following table shows the input response times.

| Timing | Set value | | | | | | | | | |
|------------------|-----------|---|-------|-------|-----|-----|------|------|------|--|
| | 0.1ms | .1ms 0.2ms 0.4ms 0.6ms 1ms 5ms 10ms 20ms 70ms | | | | | | | | |
| OFF to ON (MAX.) | 0.2ms | 0.3ms | 0.4ms | 0.5ms | 1ms | 5ms | 10ms | 20ms | 70ms | |
| ON to OFF (MAX.) | 0.41ms | 0.5ms | 0.6ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms | |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX80-UL (when 24VDC is used) and RX40C7

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------------|------------------|--|---|---------------|--|
| | | AX80-UL | RX40C7 | | |
| Input type | | DC input (negative common type) | DC input (positive common/negative common shared type) | 0 | |
| Number of inp | ut points | 16 | ı | 0 | |
| Isolation metho | bc | Photocoupler | | 0 | |
| Rated input vo | ltage | 12/24VDC (+10/-15%, ripple ratio within 5%) | 24VDC (+20/-15%, ripple ratio within 5%) | 0 | |
| Rated input cu | rrent | 4mA (12VDC) 10mA (24VDC) | 7mA TYP. (at 24VDC) | Δ | The rated input current is decreased after replacement.*1 |
| Maximum num simultaneous i | | 100% (8 points/common) | 100% (16 points) | 0 | |
| ON voltage/ON current | | 9.5VDC or higher/3mA or higher | 15V or higher/4mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1 |
| OFF voltage/OFF current | | 6VDC or lower/1.5mA or lower | 8V or lower/2mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1 |
| Input resistance Response OFF to ON | | Approx. 2.4kΩ | 3.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| | | 10ms or less | Configured in the parameter.*2 | 0 | Set the input response |
| ON to OFF | | 10ms or less | Configured in the parameter.*2 | 0 | time of parameters to 10ms. |
| Withstand volta | age | Between DC external connecting terminals and general grounding 500VAC rms for 1 minute | 510VAC rms for 1 minute | 0 | |
| Isolation resist | ance | 5MΩ or more by insulation resistance tester | 10MΩ or more by insulation resistance tester | 0 | |
| Noise immunit | у | By noise simulator of 500Vp-p noise vand 25 to 60Hz noise frequency | /oltage, 1μs noise width | 0 | |
| Common term arrangement | inal | 8 points/common (common terminal: TB9, TB18) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | cation | ON indication (LED) | | 0 | |
| External interfa | ace | 20-point terminal block (M3.5 × 7 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire size | | 0.75 to 2mm ² (14 to 18 AWG) | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool |
| Applicable solderless terminal | | RAV1.25-3.5, RAV2-3.5 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | conversion adapter (ERNT-1AR10XY), the existing external wiring and terminal blocks in the existing system can be used. *3 |
| Number of occ | upied I/O points | 16 (I/O assignment: Input 16 points) | | 0 | |
| Internal curren (5VDC) | t consumption | 55mA (TYP. all points ON) | 110mA (TYP. all points ON) | _ | |
| External dimer | nsions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.36kg | 0.16kg | _ | |

- *1 Check the specifications of sensors and switches connected to the RX40C7.
- *2 The following table shows the input response times.

| Timing | Set value | | | | | | | | | |
|------------------|-----------|---|-------|-------|-----|-----|------|------|------|--|
| | 0.1ms | .1ms 0.2ms 0.4ms 0.6ms 1ms 5ms 10ms 20ms 70ms | | | | | | | | |
| OFF to ON (MAX.) | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms | |
| ON to OFF (MAX.) | 0.35ms | 0.4ms | 0.5ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms | |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX80-UL (when 12VDC is used) and RX70C4

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|-------------------|--|---|---------------|---|
| | | AX80-UL | RX70C4 | | |
| Input type | | DC input (negative common type) | DC input (positive common/negative common shared type) | 0 | |
| Number of inp | ut points | 16 | • | 0 | |
| Isolation method | od | Photocoupler | | 0 | |
| Rated input vo | oltage | 12/24VDC (+10/-15%, ripple ratio within 5%) | 5/12VDC (+20/-15%, ripple ratio within 5%) | 0 | |
| Rated input cu | ırrent | 4mA (12VDC) 10mA (24VDC) | 1.7mA TYP. (at 5VDC) 4.8mA TYP. (at 12VDC) | 0 | |
| Maximum num simultaneous i | | 100% (8 points/common) | 00% (8 points/common) 100% (16 points) | | |
| ON voltage/ON current | | 9.5VDC or higher/3mA or higher | 3.5V or higher/1mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1 |
| OFF voltage/OFF current | | 6VDC or lower/1.5mA or lower | 1V or lower/0.1mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1 |
| Input resistance | | Approx. 2.4kΩ | 2.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| Response OFF to ON | | 10ms or less | less Configured in the parameter.*2 | | Set the input response |
| ON to OFF | | 10ms or less | Configured in the parameter.*2 | 0 | time of parameters to 10ms. |
| Withstand volt | age | Between DC external connecting terminals and general grounding 500VAC rms for 1 minute | 510VAC rms for 1 minute | 0 | |
| Isolation resist | tance | 5MΩ or more by insulation resistance tester | 10MΩ or more by insulation resistance tester | 0 | |
| Noise immunit | ty | By noise simulator of 500Vp-p noise vand 25 to 60Hz noise frequency | 0 | | |
| Common term arrangement | inal | 8 points/common (common terminal: TB9, TB18) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indi | cation | ON indication (LED) | | 0 | |
| External interfa | ace | 20-point terminal block (M3.5 × 7 screws) | 18-point terminal block (M3 \times 6 screws) | × | Wiring needs to be changed after |
| Applicable wire size | | 0.75 to 2mm ² (14 to 18 AWG) | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool |
| Applicable solderless terminal | | RAV1.25-3.5, RAV2-3.5 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | conversion adapter (ERNT-1AR10XY), the existing external wiring and terminal blocks in the existing system can be used.*3 |
| Number of occ | cupied I/O points | 16 (I/O assignment: Input 16 points) | | 0 | |
| Internal curren (5VDC) | nt consumption | 55mA (TYP. all points ON) | 100mA (TYP. all points ON) | _ | |
| External dimer | nsions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | | |
| Weight | | 0.36kg | 0.16kg | _ | |

- *1 Check the specifications of sensors and switches connected to the RX70C4.
- *2 The following table shows the input response times.

| Timing | Set value | | | | | | | | |
|------------------|-----------|---|-------|-------|-----|-----|------|------|------|
| | 0.1ms | .1ms 0.2ms 0.4ms 0.6ms 1ms 5ms 10ms 20ms 70ms | | | | | | | |
| OFF to ON (MAX.) | 0.2ms | 0.3ms | 0.4ms | 0.5ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| ON to OFF (MAX.) | 0.41ms | 0.5ms | 0.6ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX80E (when 24VDC is used) and RX40C7

| Item | | Specifications | | Compatibility | Precautions | |
|--|------------------|---|---|--|---|--|
| | | AX80E | RX40C7 | | | |
| Input type | | DC input (negative common type) | DC input (positive common/negative common shared type) | 0 | | |
| Number of inpu | ut points | 16 | | 0 | | |
| Isolation metho | od | Photocoupler | 0 | | | |
| Rated input voltage | | 12/24VDC (+10/-15%, ripple ratio within 5%) | 24VDC (+20/-15%, ripple ratio within 5%) | 0 | | |
| Rated input current | | 4mA (12VDC) 10mA (24VDC) | 7mA TYP. (at 24VDC) | Δ | The rated input current is decreased after replacement.*1 | |
| Maximum number of simultaneous input points | | 100% (8 points/common) | 100% (16 points) | 0 | | |
| ON voltage/ON | l current | 9.5VDC or higher/3mA or higher | 15V or higher/4mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1 | |
| OFF voltage/O | FF current | 6VDC or lower/1.5mA or lower | 8V or lower/2mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1 | |
| Input resistance | | Approx. 2.4kΩ | Δ | The input resistance is changed after replacement.*1 | | |
| Response time | OFF to ON | 5.5ms (TYP.) 0.5ms or less (high-speed mode, upper 8 points only) | Configured in the parameter.*2 | 0 | Set the input response time of parameters to 5ms or 0.4ms/1ms. | |
| | ON to OFF | 6.0ms (TYP.) 1.0ms or less (high-speed mode, upper 8 points only) | Configured in the parameter.*2 | 0 | | |
| Common termi arrangement | nal | 8 points/common (common terminal: TB9, TB18) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. | |
| Operation indic | cation | ON indication (LED) | • | 0 | | |
| External interfa | ace | 20-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after | |
| Applicable wire size Applicable solderless terminal | | 0.75 to 2mm | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool | |
| | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | conversion adapter (ERNT-1AR10XY), the existing external wiring and terminal blocks in the existing system can be used.*3 | |
| Number of occ | upied I/O points | 16 (I/O assignment: Input 16 points) | • | 0 | | |
| Internal current (5VDC) | t consumption | 55mA (TYP. all points ON) | 110mA (TYP. all points ON) | _ | | |
| External dimen | sions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | | |
| Weight | | 0.36kg | 0.16kg | _ | | |

^{*1} Check the specifications of sensors and switches connected to the RX40C7.

^{*2} The following table shows the input response times.

| Timing | Set value | Set value | | | | | | | | |
|------------------|-----------|-----------|-------|-------|-----|-----|------|------|------|--|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms | |
| OFF to ON (MAX.) | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms | |
| ON to OFF (MAX.) | 0.35ms | 0.4ms | 0.5ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms | |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX80E (when 12VDC is used) and RX70C4

 $\bigcirc : \textbf{Compatible}, \ \triangle : \textbf{Partly changed}, \ \times : \textbf{Incompatible}, \ - : \textbf{Not applicable}$

| Item | | Specifications | | Compatibility | Precautions |
|-------------------------------------|------------|---|---|---------------|--|
| | | AX80E | RX70C4 | | |
| Input type | | DC input (negative common type) | DC input (positive common/negative common shared type) | 0 | |
| Number of inpu | ut points | 16 | | 0 | |
| Isolation metho | od | Photocoupler | | 0 | |
| Rated input voltage | | 12/24VDC (+10/-15%, ripple ratio within 5%) | 5/12VDC (+20/-15%, ripple ratio within 5%) | 0 | |
| Rated input current | | 4mA (12VDC) 10mA (24VDC) | 1.7mA TYP. (at 5VDC) 4.8mA TYP. (at 12VDC) | 0 | |
| Maximum num simultaneous ii | | 100% (8 points/common) | 100% (16 points) | 0 | |
| ON voltage/ON | I current | 9.5VDC or higher/3mA or higher | 3.5V or higher/1mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1 |
| OFF voltage/O | FF current | 6VDC or lower/1.5mA or lower | 1V or lower/0.1mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1 |
| Input resistance | | Approx. 2.4kΩ | 2.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| Response time | OFF to ON | 5.5ms (TYP.) 0.5ms or less (high-speed mode, upper 8 points only) | Configured in the parameter.*2 | 0 | Set the input response time of parameters to 5ms or 0.4ms/1ms. |
| | ON to OFF | 6.0ms (TYP.) 1.0ms or less (high-speed mode, upper 8 points only) | Configured in the parameter.*2 | 0 | |
| Common termi arrangement | nal | 8 points/common (common terminal: TB9, TB18) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | cation | ON indication (LED) | | 0 | |
| External interfa | ace | 20-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire | e size | 0.75 to 2mm | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool conversion adapter |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | (ERNT-1AR10XY), the existing external wiring and terminal blocks in the existing system can be used.*3 |
| Number of occupied I/O points | | 16 (I/O assignment: Input 16 points) | | 0 | |
| Internal current consumption (5VDC) | | 55mA (TYP. all points ON) | 100mA (TYP. all points ON) | _ | |
| External dimensions | | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.36kg | 0.16kg | _ | |

^{*1} Check the specifications of sensors and switches connected to the RX70C4.

^{*2} The following table shows the input response times.


| Timing | Set value | Set value | | | | | | | | |
|------------------|-----------|-----------|-------|-------|-----|-----|------|------|------|--|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms | |
| OFF to ON (MAX.) | 0.2ms | 0.3ms | 0.4ms | 0.5ms | 1ms | 5ms | 10ms | 20ms | 70ms | |
| ON to OFF (MAX.) | 0.41ms | 0.5ms | 0.6ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms | |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX81 (when 24VDC is used) and RX41C4

| Item | | Specifications | | Compatibility | Precautions |
|---|-------------------|---|--|---------------|---|
| | | AX81 | RX41C4 | | |
| Input type | | DC input (negative common type) | DC input (positive common/negative common shared type) | 0 | |
| Number of inp | out points | 32 | 0 | | |
| Isolation method | | Photocoupler | | 0 | |
| Rated input voltage | | 12/24VDC (+10/-15%, ripple ratio within 5%) | 24VDC (+20/-15%, ripple ratio within 5%) | 0 | |
| Rated input current | | Approx. 4mA (12VDC) Approx. 10mA (24VDC) | 4mA TYP. (at 24VDC) | Δ | The rated input current is decreased after replacement.*1 |
| Maximum number of simultaneous input points | | 60% (5 points/common) | Refer to the derating chart.*2 | Δ | Use the module within the range shown in the derating chart. |
| ON voltage/O | N current | 9.5VDC or higher/3mA or higher | 19V or higher/3mA or higher | Δ | The ON voltage is changed after replacement.*1 |
| OFF voltage/OFF current | | 6VDC or lower/1.5mA or lower | 6V or lower/1mA or lower | Δ | The OFF current is changed after replacement.*1 |
| Input resistance | | Approx. 2.4kΩ | 5.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| Response | OFF to ON | 10ms or less | Configured in the parameter.*3 | 0 | Set the input response |
| time | ON to OFF | 10ms or less | Configured in the parameter.*3 | 0 | time of parameters to 10ms. |
| Common term arrangement | ninal | 8 points/common (common terminal: TB9, TB18, TB27, TB36) | 32 points/common (common terminal: B01, B02) | Δ | As the common changes from four commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indi | ication | ON indication (LED) | | 0 | |
| External interf | face | 38-point terminal block (M3 × 6 screws) | 40-pin connector (A6CON1/2/3/4) | × | Wiring needs to be changed after |
| Applicable wir | e size | 0.75 to 2mm | 0.088 to 0.3mm² | × | replacement. |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | _ | _ | By using the upgrade tool conversion adapter (ERNT-1AR41X), the existing external wiring and terminal blocks in the existing system can be used. *4 |
| Number of occ | cupied I/O points | 32 (I/O assignment: Input 32 points) | | 0 | |
| Internal currer (5VDC) | nt consumption | 110mA (TYP. all points ON) | 150mA (TYP. all points ON) | _ | |
| External dime | nsions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×110(D)mm | _ | |
| Weight | | 0.45kg | 0.11kg | _ | |

- *1 Check the specifications of sensors and switches connected to the RX41C4.
- *2 The following figure shows a derating chart.

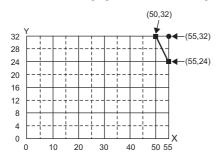

- ●: Input voltage 26.4VDC
- ■: Input voltage 28.8VDC
- X: Ambient temperature (°C)
- Y: Number of simultaneous on points (point)
- *3 The following table shows the input response times.

| Timing | Set value | Set value | | | | | | | |
|------------------|-----------|-----------|-------|-------|-----|-----|------|------|------|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| OFF to ON (MAX.) | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| ON to OFF (MAX.) | 0.2ms | 0.3ms | 0.5ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms |

^{*4} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX81 (when 12VDC is used) and RX71C4

 $\bigcirc : \textbf{Compatible,} \ \triangle : \textbf{Partly changed,} \ \times : \textbf{Incompatible,} \ - : \textbf{Not applicable}$

| Item | | Specifications | | Compatibility | Precautions | |
|-------------------------------------|-----------|---|--|---------------|--|--|
| | | AX81 | RX71C4 | _ | | |
| Input type | | DC input (negative common type) | DC input (positive common/negative common shared type) | 0 | | |
| Number of inpo | ut points | 32 | | 0 | | |
| Isolation method | od | Photocoupler | | 0 | | |
| Rated input vo | Itage | 12/24VDC (+10/-15%, ripple ratio within 5%) | 5/12VDC (+20/-15%, ripple ratio within 5%) | 0 | | |
| Rated input cu | rrent | Approx. 4mA (12VDC) Approx. 10mA (24VDC) | 1.7mA TYP. (at 5VDC) 4.8mA TYP. (at 12VDC) | 0 | | |
| Maximum num simultaneous i | | 60% (5 points/common) | 100% (32 points) | 0 | | |
| ON voltage/ON | l current | 9.5VDC or higher/3mA or higher | 3.5V or higher/1mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1 | |
| OFF voltage/OFF current | | 6VDC or lower/1.5mA or lower | 1V or lower/0.1mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1 | |
| Input resistance | | Approx. 2.4kΩ | 2.3kΩ | Δ | The input resistance is changed after replacement.*1 | |
| Response | OFF to ON | 10ms or less | Configured in the parameter.*2 | 0 | Set the input response | |
| time | ON to OFF | 10ms or less | Configured in the parameter.*2 | 0 | time of parameters to 10ms. | |
| Common term arrangement | nal | 8 points/common (common terminal: TB9, TB18, TB27, TB36) | 32 points/common (common terminal: B01, B02) | Δ | As the common changes from four commons to a common, wiring with a different voltage for each common is not possible. | |
| Operation indic | cation | ON indication (LED) | • | 0 | | |
| External interfa | ace | 38-point terminal block (M3 × 6 screws) | 40-pin connector (A6CON1/2/3/4) | × | Wiring needs to be changed after | |
| Applicable wire | e size | 0.75 to 2mm² | 0.088 to 0.3mm ² | × | replacement. | |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | _ | _ | By using the upgrade tool conversion adapter (ERNT-1AR41X), the existing external wiring and terminal blocks in the existing system can be used.*3 | |
| Number of occupied I/O points | | 32 (I/O assignment: Input 32 points) | | 0 | | |
| Internal current consumption (5VDC) | | 110mA (TYP. all points ON) | 140mA (TYP. all points ON) | _ | | |
| External dimer | nsions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×110(D)mm | _ | | |
| Weight | | 0.45kg | 0.12kg | _ | | |

^{*1} Check the specifications of sensors and switches connected to the RX71C4.

^{*2} The following table shows the input response times.


| Timing | Set value | Set value | | | | | | | |
|------------------|-----------|-----------|-------|-------|-----|-----|------|------|------|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| OFF to ON (MAX.) | 0.2ms | 0.3ms | 0.5ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| ON to OFF (MAX.) | 0.21ms | 0.3ms | 0.5ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX81B and RX41C4

| Item | | Specifications | | Compatibility | Precautions |
|-----------------------------------|-------------|--|--|---------------|---|
| | | AX81B | RX41C4 | | |
| Input type | | DC input (positive common/negative of | common shared type) | 0 | |
| Number of inpu | ıt points | 32 | | 0 | |
| Isolation metho | d | Photocoupler | | 0 | |
| Rated input vol | tage | 24VDC (21.6 to 30VDC, ripple ratio within 5%) | 24VDC (+20/-15%, ripple ratio within 5%) | Δ | The rated input voltage is lowered after replacement.*1 |
| Rated input cur | rent | 7mA (normal input) 1.5mA (disconnection detection) | 4mA TYP. (at 24VDC) | Δ | The rated input current is decreased when the normal input is used.*1 |
| Maximum numl simultaneous ir | | 60% (5 points/common) | Refer to the derating chart.*2 | Δ | Use the module within the range shown in the derating chart. |
| ON voltage/ON current | | 21.0VDC or higher/5.4mA or higher (normal input) 1.0VDC or lower/0.2mA or lower (disconnection detection) | 19V or higher/3mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1 |
| OFF voltage/Ol | FF current | 7.0VDC or lower/1.9mA or lower (normal input) 6.0VDC or higher/1.3mA or higher (disconnection detection) | 6V or lower/1mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1 |
| Input resistance | | Approx. 3.6 kΩ (normal input) Approx. 4.3 kΩ (disconnection detection) | 5.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| External resistance | | 0.1k Ω or less (at turning on) 11.4 to 12.7k Ω or less (at turning off) 150k Ω or more (at disconnection) | _ | _ | |
| Parallel resistar external switch | nce with | 12k Ω (tolerance: $\pm 5\%$, 1/4W or more) | _ | _ | |
| Disconnection of function | detection | Available | Not available | × | The disconnection detection function is not supported after replacement. |
| Response | OFF to ON | 10ms or less | Configured in the parameter.*3 | 0 | Set the input response |
| time | ON to OFF | 10ms or less | Configured in the parameter.*3 | 0 | time of parameters to 10ms. |
| Common terminal arrangement | | 8 points/common (common terminal: TB9, TB18, TB27, TB36) | 32 points/common (common terminal: B01, B02) | Δ | As the common changes from four commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | ation | ON indication (LED), 32 point switch-over using switch | ON indication (LED) | 0 | |
| External interfa | ce | 38-point terminal block (M3 × 6 screws) | 40-pin connector (A6CON1/2/3/4) | × | Wiring needs to be changed after |
| Applicable wire size | | 0.75 to 2mm² | 0.088 to 0.3mm² | × | replacement. |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | _ | _ | |
| Number of occupied I/O points | | 64 (I/O assignment: Input 64 points) | 32 (I/O assignment: Input 32 points) | Δ | The number of occupied input points is changed after replacement. |
| Internal current (5VDC) | consumption | 125mA (TYP. all points ON) | 150mA (TYP. all points ON) | _ | |
| | | 250(LI): 27 5(M): 424(D):::::::::::::::::::::::::::::::::::: | 106(H)×27.8(W)×110(D)mm | | |
| External dimen | sions | 250(H)×37.5(W)×131(D)mm | 100(11)×21.0(W)×110(D)IIIII | | |

- *1 Check the specifications of sensors and switches connected to the RX41C4.
- *2 The following figure shows a derating chart.

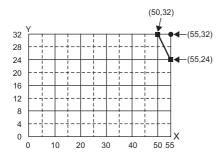

- ●: Input voltage 26.4VDC
- ■: Input voltage 28.8VDC
- X: Ambient temperature (°C)
- Y: Number of simultaneous on points (point)
- *3 The following table shows the input response times.

| Timing | Set value | Set value | | | | | | | |
|------------------|-----------|-----------|-------|-------|-----|-----|------|------|------|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| OFF to ON (MAX.) | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| ON to OFF (MAX.) | 0.2ms | 0.3ms | 0.5ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms |

AX81B and RX40NC6B

| Item | | Specifications | | Compatibility | Precautions |
|---|------------------|--|---|---------------|--|
| | | AX81B | RX40NC6B | | |
| Input type | | DC input (positive common/negative common shared type) | DC input (negative common type) | Δ | The positive common cannot be used. |
| Number of input points | | 32 | 16 | Δ | When 17 or more points are required, use two modules of the RX40NC6B. |
| Isolation method | od | Photocoupler | | 0 | |
| Rated input voltage | | 24VDC (21.6 to 30VDC, ripple ratio within 5%) | 24VDC (+20/-15%, ripple ratio within 5%) | Δ | The rated input voltage is lowered after replacement.*1 |
| Rated input current | | 7mA (normal input) 1.5mA (disconnection detection) | 6mA TYP. (at 24VDC) | Δ | The rated input current is decreased when the normal input is used.*1 |
| Maximum num simultaneous i | | 60% (5 points/common) | 100% (16 points) | 0 | |
| ON voltage/ON | l current | 21.0VDC or higher/5.4mA or higher (normal input) 1.0VDC or lower/0.2mA or lower (disconnection detection) | 14V or higher/3.5mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1*2 |
| OFF voltage/OFF current | | 7.0VDC or lower/1.9mA or lower (normal input) 6.0VDC or higher/1.3mA or higher (disconnection detection) | 6V or lower/1mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1*2 |
| Input resistance | | Approx. 3.6 kΩ (normal input) Approx. 4.3 kΩ (disconnection detection) | Approx. 4.0kΩ | Δ | The input resistance is changed after replacement.*1 |
| External resistance Parallel resistance with | | 0.1kΩ or less (at turning on) 11.4 to 12.7kΩ or less (at turning off) 150kΩ or more (at disconnection) 12kΩ (tolerance: $\pm 5\%$, 1/4W or | *2 | Δ | The external resistance is changed after replacement.*1 |
| external switch | 1 | more) Available | Available | 0 | |
| function | dottodion | Available | / Wallasio | | |
| Response | OFF to ON | 10ms or less | Configured in the parameter.*3 | 0 | Set the input response |
| time | ON to OFF | 10ms or less | Configured in the parameter.*3 | 0 | time of parameters to 10ms. |
| External power supply | Voltage | _ | 24VDC (ripple ratio within 5%) (allowable voltage range: 20.4 to 28.8VDC) | × | An external power supply is required. |
| | Current | _ | 130mA (at 24VDC) | × | |
| Common terminal arrangement | | 8 points/common (common terminal: TB9, TB18, TB27, TB36) | 16 points/common (common terminal: TB18) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | cation | ON indication (LED) 32 point switch-over using switch | ON indication (LED) | 0 | |
| External interface Applicable wire size | | 38-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| | | 0.75 to 2mm | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | replacement. |
| Applicable solo | derless terminal | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | |
| Number of occ points | upied I/O | 64 (I/O assignment: Input 64 points) | 32 (I/O assignment: Input 32 points) | Δ | The number of occupied input points is changed after replacement. |

| Item | Specifications | Compatibility | Precautions | |
|-------------------------------------|----------------------------|----------------------------|-------------|--|
| | AX81B RX40NC6B | | | |
| Internal current consumption (5VDC) | 125mA (TYP. all points ON) | 450mA (TYP. all points ON) | _ | |
| External dimensions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×110(D)mm | _ | |
| Weight | 0.45kg | 0.25kg | _ | |

^{*1} Check the specifications of sensors and switches connected to the RX40NC6B.

^{*3} The following table shows the input response times.


| Timing | Set value | | | | | |
|------------------|-----------|-----|------|--|--|--|
| | 1ms | 5ms | 10ms | | | |
| OFF to ON (MAX.) | 1ms | 5ms | 10ms | | | |
| ON to OFF (MAX.) | 1ms | 5ms | 10ms | | | |

^{*2} The RX40NC6B detects disconnection when the input current is 0.3mA or lower. When the leakage current of an input device is 0.3mA or lower, connect a bleeder resistor (approx. $56k\Omega$ as a guide for the resistance value) in parallel to and close to the connected device.

AX81-S1 (when 24VDC is used) and RX41C4

| Item | | Specifications | Compatibility | Precautions | | | |
|---|-----------|--|---------------------------------|-------------|--|--|--|
| | | AX81-S1 RX41C4 | | | | | |
| Input type | | DC input (positive common/negative of | 0 | | | | |
| Number of input points | | 32 | 0 | | | | |
| Isolation method | | Photocoupler | 0 | | | | |
| Rated input voltage | | 12/24VDC (+10/-15%, ripple ratio within 5%) 24VDC (+20/-15%, ripple ratio within 5%) | | 0 | | | |
| Rated input current | | 2.5mA (12VDC) 5mA (24VDC) | 4mA TYP. (at 24VDC) | Δ | The rated input current is decreased after replacement.*1 | | |
| Maximum number of simultaneous input points | | 60% (5 points/common) | Refer to the derating chart.*2 | Δ | Use the module within the range shown in the derating chart. | | |
| ON voltage/ON current | | 5.6VDC or higher/1.1mA or higher | 19V or higher/3mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1 | | |
| OFF voltage/OFF current | | 2.4VDC or lower/0.39mA or lower | 6V or lower/1mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1 | | |
| Input resistance | | Approx. 4.8kΩ | 5.3kΩ | Δ | The input resistance is changed after replacement.*1 | | |
| Response | OFF to ON | 10ms or less | Configured in the parameter.*3 | 0 | Set the input response | | |
| time | ON to OFF | 10ms or less | Configured in the parameter.*3 | 0 | time of parameters to 10ms. | | |
| Common terminal arrangement | | 8 points/common (common terminal: 32 points/common (common terminal: B01, B02) | | Δ | As the common changes from four commons to a common, wiring with a different voltage for each common is not possible. | | |
| Operation indication | | ON indication (LED) | 0 | | | | |
| External interface | | 38-point terminal block (M3 × 6 screws) | 40-pin connector (A6CON1/2/3/4) | × | Wiring needs to be changed after | | |
| Applicable wire size | | 0.75 to 2mm | 0.088 to 0.3mm | × | replacement. By using the upgrade tool | | |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | _ | _ | conversion adapter (ERNT-1AR41X), the existing external wiring and terminal blocks in the existing system can be used.*4 | | |
| Number of occupied I/O points | | 32 (I/O assignment: Input 32 points) | | 0 | | | |
| Internal current consumption (5VDC) | | 105mA (TYP. all points ON) | 150mA (TYP. all points ON) | _ | | | |
| External dimensions | | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×110(D)mm | _ | | | |
| Weight | | 0.45kg 0.11kg | | _ | | | |

- *1 Check the specifications of sensors and switches connected to the RX41C4.
- *2 The following figure shows a derating chart.

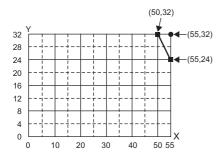

- ●: Input voltage 26.4VDC
- ■: Input voltage 28.8VDC
- X: Ambient temperature (°C)
- Y: Number of simultaneous on points (point)
- *3 The following table shows the input response times.

| Timing | Set value | | | | | | | | |
|------------------|-----------|-------|-------|-------|-----|-----|------|------|------|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| OFF to ON (MAX.) | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| ON to OFF (MAX.) | 0.2ms | 0.3ms | 0.5ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms |

^{*4} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX81-S1 (when 12VDC is used) and RX71C4

O: Compatible, △: Partly changed, ×: Incompatible, —: Not applicable

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|------------------|---|---|---------------|--|
| | | AX81-S1 | RX71C4 | | |
| Input type | | DC input (positive common/negative of | common shared type) | 0 | |
| Number of inpu | ut points | 32 | | 0 | |
| Isolation metho | od | Photocoupler | | 0 | |
| Rated input vo | Itage | 12/24VDC (+10/-15%, ripple ratio within 5%) | 5/12VDC (+20/-15%, ripple ratio within 5%) | 0 | |
| Rated input cu | rrent | 2.5mA (12VDC) 5mA (24VDC) | 1.7mA TYP. (at 5VDC) 4.8mA TYP. (at 12VDC) | 0 | |
| Maximum num simultaneous i | | 60% (5 points/common) | 100% (32 points) | 0 | |
| ON voltage/ON current | | 5.6VDC or higher/1.1mA or higher | 3.5V or higher/1mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1 |
| OFF voltage/OFF current | | 2.4VDC or lower/0.39mA or lower | 1V or lower/0.1mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1 |
| Input resistance | | Approx. 4.8kΩ | 2.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| Response | OFF to ON | 10ms or less | Configured in the parameter.*2 | 0 | Set the input response |
| time | ON to OFF | 10ms or less | Configured in the parameter.*2 | 0 | time of parameters to 10ms. |
| Common termi arrangement | inal | 8 points/common (common terminal: TB9, TB18, TB27, TB36) | 32 points/common (common terminal: B01, B02) | Δ | As the common changes from four commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | cation | ON indication (LED) | | 0 | |
| External interfa | ace | 38-point terminal block (M3 × 6 screws) | 40-pin connector (A6CON1/2/3/4) | × | Wiring needs to be changed after |
| Applicable wire | e size | 0.75 to 2mm | 0.088 to 0.3mm | × | replacement. |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | _ | _ | By using the upgrade tool conversion adapter (ERNT-1AR41X), the existing external wiring and terminal blocks in the existing system can be used.*3 |
| Number of occ | upied I/O points | 32 (I/O assignment: Input 32 points) | | 0 | |
| Internal curren (5VDC) | t consumption | 105mA (TYP. all points ON) | 140mA (TYP. all points ON) | _ | |
| External dimer | sions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×110(D)mm | _ | |
| Weight | | 0.45kg | 0.12kg | _ | |

^{*1} Check the specifications of sensors and switches connected to the RX71C4.

^{*2} The following table shows the input response times.


| Timing | Set value | | | | | | | | | |
|------------------|-----------|--|-------|-------|-----|-----|------|------|------|--|
| | 0.1ms | 1ms 0.2ms 0.4ms 0.6ms 1ms 5ms 10ms 20ms 70ms | | | | | | | | |
| OFF to ON (MAX.) | 0.2ms | 0.3ms | 0.5ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms | |
| ON to OFF (MAX.) | 0.21ms | 0.3ms | 0.5ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms | |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX81-S3 (when 24VDC is used) and RX41C4

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|------------------|---|--|---------------|--|
| | | AX81-S3 | RX41C4 | | |
| Input type | | DC input (negative common type) | DC input (positive common/negative common shared type) | 0 | |
| Number of inp | ut points | 32 | | 0 | |
| Isolation method | bc | Photocoupler | | 0 | |
| Rated input vo | ltage | 12/24VDC (+10/-15%, ripple ratio 24VDC (+20/-15%, ripple ratio within 5%) 5%) | | 0 | |
| Rated input cu | rrent | 4mA (12VDC) 10mA (24VDC) | 4mA TYP. (at 24VDC) | Δ | The rated input current is decreased after replacement.*1 |
| Maximum num simultaneous i | | 60% (5 points/common) | Refer to the derating chart.*2 | Δ | Use the module within the range shown in the derating chart. |
| ON voltage/ON current | | 9.5VDC or higher/3mA or higher | 19V or higher/3mA or higher | Δ | The ON voltage is changed after replacement.*1 |
| OFF voltage/OFF current | | 6VDC or lower/1.5mA or lower | 6V or lower/1mA or lower | Δ | The OFF current is changed after replacement.*1 |
| Input resistance | | Approx. 2.4kΩ | 5.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| Response | OFF to ON | 0.1ms or less | Configured in the parameter.*3 | 0 | Set the input response |
| time | ON to OFF | 0.2ms or less | Configured in the parameter.*3 | 0 | time of parameters to 0.1ms. |
| Common term arrangement | inal | 8 points/common (common terminal: TB9, TB18, TB27, TB36) 32 points/common (common terminal: B01, B02) | | Δ | As the common changes from four commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indi | cation | ON indication (LED) | | 0 | |
| External interfa | ace | 38-point terminal block (M3 × 6 screws) | 40-pin connector (A6CON1/2/3/4) | × | Wiring needs to be changed after |
| Applicable wire | e size | 0.75 to 2mm | 0.088 to 0.3mm ² | × | replacement. |
| Applicable solderless terminal | | solderless terminal R1.25-3, R2-3, RAV1.25-3, RAV2-3 — | | _ | By using the upgrade tool conversion adapter (ERNT-1AR41X), the existing external wiring and terminal blocks in the existing system can be used.*4 |
| Number of occ | upied I/O points | 32 (I/O assignment: Input 32 points) | | 0 | |
| Internal curren (5VDC) | t consumption | 110mA (TYP. all points ON) | 150mA (TYP. all points ON) | _ | |
| External dimer | nsions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×110(D)mm | _ | |
| Weight | | 0.45kg | 0.11kg | _ | |

- *1 Check the specifications of sensors and switches connected to the RX41C4.
- *2 The following figure shows a derating chart.

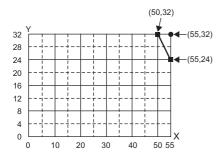

- ●: Input voltage 26.4VDC
- ■: Input voltage 28.8VDC
- X: Ambient temperature (°C)
- Y: Number of simultaneous on points (point)
- *3 The following table shows the input response times.

| Timing | Set value | | | | | | | | | |
|------------------|-----------|---|-------|-------|-----|-----|------|------|------|--|
| | 0.1ms | .1ms 0.2ms 0.4ms 0.6ms 1ms 5ms 10ms 20ms 70ms | | | | | | | | |
| OFF to ON (MAX.) | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms | |
| ON to OFF (MAX.) | 0.2ms | 0.3ms | 0.5ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms | |

^{*4} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX81-S3 (when 12VDC is used) and RX71C4

| Item | | Specifications | | Compatibility | Precautions |
|--|-------------------|---|--|--|--|
| | | AX81-S3 | RX71C4 | 1 | |
| Input type | | DC input (negative common type) | DC input (positive common/negative common shared type) | 0 | |
| Number of inp | out points | 32 | | 0 | |
| Isolation meth | od | Photocoupler | | 0 | |
| Rated input vo | oltage | 12/24VDC (+10/-15%, ripple ratio within 5%) | 5/12VDC (+20/-15%, ripple ratio within 5%) | 0 | |
| Rated input cu | urrent | 4mA (12VDC) 10mA (24VDC) | 1.7mA TYP. (at 5VDC) 4.8mA TYP. (at 12VDC) | 0 | |
| Maximum nun simultaneous | | 60% (5 points/common) | 100% (32 points) | 0 | |
| ON voltage/ON current OFF voltage/OFF current | | 9.5VDC or higher/3mA or higher | 3.5V or higher/1mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1 |
| | | 6VDC or lower/1.5mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1 | |
| Input resistance | | Αρρτοχ. 2.4kΩ | 2.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| Response | OFF to ON | 0.1ms or less | Configured in the parameter.*2 | 0 | Set the input response |
| time | ON to OFF | 0.2ms or less | Configured in the parameter.*2 | 0 | time of parameters to 0.1ms. |
| Common term arrangement | ninal | 8 points/common (common terminal: TB9, TB18, TB27, TB36) | 32 points/common (common terminal: B01, B02) | Δ | As the common changes from four commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indi | ication | ON indication (LED) | | 0 | |
| External interf | ace | 38-point terminal block (M3 × 6 screws) | 40-pin connector (A6CON1/2/3/4) | × | Wiring needs to be changed after |
| Applicable wire | e size | 0.75 to 2mm² | 0.088 to 0.3mm | × | replacement. |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | _ | _ | By using the upgrade tool conversion adapter (ERNT-1AR41X), the existing external wiring and terminal blocks in the existing system can be used.*3 |
| Number of occ | cupied I/O points | 32 (I/O assignment: Input 32 points) | | 0 | |
| Internal currer (5VDC) | nt consumption | 110mA (TYP. all points ON) | 140mA (TYP. all points ON) | _ | |
| External dime | nsions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×110(D)mm | _ | |
| Weight | | 0.45kg | 0.12kg | _ | |

^{*1} Check the specifications of sensors and switches connected to the RX71C4.

^{*2} The following table shows the input response times.


| Timing | Set value | t value | | | | | | | |
|------------------|-----------|---------|-------|-------|-----|-----|------|------|------|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| OFF to ON (MAX.) | 0.2ms | 0.3ms | 0.5ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| ON to OFF (MAX.) | 0.21ms | 0.3ms | 0.5ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX82 (when 24VDC is used) and RX42C4

| Item | | Specifications | | Compatibility | Precautions |
|---|------------------|--|--|---------------|--|
| | | AX82 | RX42C4 | 1 | |
| Input type | | DC input (negative common type) | DC input (positive common/negative common shared type) | 0 | |
| Number of inp | ut points | 64 | | 0 | |
| Isolation metho | od | Photocoupler | 0 | | |
| Rated input vo | ltage | 12/24VDC (+10/-15%, ripple ratio within 5%) | 24VDC (+20/-15%, ripple ratio within 5%) | 0 | |
| Rated input current | | Approx. 3mA (12VDC) Approx. 7mA (24VDC) | 4mA TYP. (at 24VDC) | Δ | The rated input current is decreased after replacement.*1 |
| Maximum number of simultaneous input points | | 40 points (when next to the power supply module is located: 26 points) | Refer to the derating chart.*2 | Δ | Use the module within the range shown in the derating chart. |
| ON voltage/ON current | | 9.5VDC or higher/2.6mA or higher | 19V or higher/3mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1 |
| OFF voltage/C | FF current | 6VDC or lower/1.0mA or lower | 6V or lower/1mA or lower | 0 | |
| Input resistanc | e | Approx. 3.4kΩ | 5.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| Response | OFF to ON | 10ms or less | Configured in the parameter.*3 | 0 | Set the input response |
| time | ON to OFF | 10ms or less | Configured in the parameter.*3 | 0 | time of parameters to 10ms. |
| Common term | inal | 32 points/common (common terminal: 1-17, 1-18, 1-36, 2-17, 2-18, 2-36) | 32 points/common (common terminal: 1B01, 1B02, 2B01, 2B02) | 0 | |
| Operation indic | cation | ON indication (LED), 32 point switch- | over using switch | 0 | |
| External interface | | 37-pin D-sub connector × 2 (A6CON1E/2E/3E) | 40-pin connector × 2 (A6CON1/2/3/ 4) | × | Wiring needs to be changed after |
| Applicable wire size | | 0.088 to 0.3mm | | 0 | replacement. |
| Number of occ | upied I/O points | 64 (I/O assignment: Input 64 points) | | 0 | |
| Internal curren (5VDC) | t consumption | 120mA (TYP. all points ON) | 180mA (TYP. all points ON) | _ | |
| External dimer | nsions | 250(H)×37.5(W)×106(D)mm | 106(H)×27.8(W)×110(D)mm | _ | |
| Weight | | 0.60kg | 0.13kg | - | |
| | | | | | |

- *1 Check the specifications of sensors and switches connected to the RX42C4.
- *2 The following figure shows a derating chart.

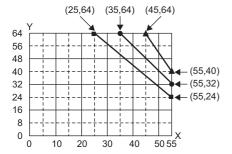

- ▲: Input voltage 24VDC
- ●: Input voltage 26.4VDC
- ■: Input voltage 28.8V
- X: Ambient temperature (°C)
- Y: Number of simultaneous on points (point)
- *3 The following table shows the input response times.


| Timing | Set value | | | | | | | | | |
|------------------|-----------|-------|-------|-------|-----|-----|------|------|------|--|
| | 0.1ms | .1ms | | | | | | | | |
| OFF to ON (MAX.) | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms | |
| ON to OFF (MAX.) | 0.2ms | 0.3ms | 0.5ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms | |

AX82 (when 24VDC is used) and RX41C4

O: Compatible, △: Partly changed, ×: Incompatible, —: Not applicable

| Item | | Specifications | | Compatibility | Precautions | | |
|---|-------------------|--|--|---------------|---|--|--|
| | | AX82 | RX41C4 | | | | |
| Input type | | DC input (negative common type) | DC input (positive common/negative common shared type) | 0 | | | |
| Number of inp | ut points | 64 | 32 | Δ | When 33 or more points are required, use two modules of the RX41C4. | | |
| Isolation meth | od | Photocoupler | | 0 | | | |
| Rated input vo | oltage | 12/24VDC (+10/-15%, ripple ratio within 5%) | 24VDC (+20/-15%, ripple ratio within 5%) | 0 | | | |
| Rated input current | | Approx. 3mA (12VDC) Approx. 7mA (24VDC) | 4mA TYP. (at 24VDC) | Δ | The rated input current is decreased after replacement.*1 | | |
| Maximum number of simultaneous input points | | 40 points (when next to the power supply module is located: 26 points) | Refer to the derating chart.*2 | Δ | Use the module within the range shown in the derating chart. | | |
| ON voltage/Of | N current | 9.5VDC or higher/2.6mA or higher | 19V or higher/3mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1 | | |
| OFF voltage/OFF current | | 6VDC or lower/1.0mA or lower | 6V or lower/1mA or lower | 0 | | | |
| Input resistand | ce | Approx. 3.4kΩ | 5.3kΩ | Δ | The input resistance is changed after replacement.*1 | | |
| Response | OFF to ON | 10ms or less | Configured in the parameter.*3 | 0 | Set the input response | | |
| time | ON to OFF | 10ms or less | Configured in the parameter.*3 | 0 | time of parameters to 10ms. | | |
| Common term arrangement | inal | 32 points/common (common terminal: 1-17, 1-18, 1-36, 2-17, 2-18, 2-36) | 32 points/common (common terminal: B01, B02) | 0 | | | |
| Operation indi | cation | ON indication (LED), 32 point switch- over using switch | ON indication (LED) | 0 | | | |
| External interfa | ace | 37-pin D-sub connector × 2 (A6CON1E/2E/3E) | 40-pin connector (A6CON1/2/3/4) | × | Wiring needs to be changed after | | |
| Applicable wire size | | 0.088 to 0.3mm | | 0 | replacement. By using the upgrade tool conversion adapter (ERNT-ASLCXY81), the existing external wiring and terminal blocks in the existing system can be used.*4 | | |
| Number of occ | cupied I/O points | 64 (I/O assignment: Input 64 points) | 32 (I/O assignment: Input 32 points) | Δ | | | |
| Internal curren | nt consumption | 120mA (TYP. all points ON) | 150mA (TYP. all points ON) | _ | | | |
| External dimer | nsions | 250(H)×37.5(W)×106(D)mm | 106(H)×27.8(W)×110(D)mm | _ | | | |
| Weight | | 0.60kg | 0.11kg | _ | | | |
| | | | | | | | |

- *1 Check the specifications of sensors and switches connected to the RX41C4.
- *2 The following figure shows a derating chart.

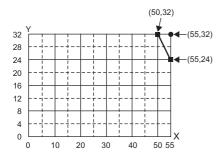

- ●: Input voltage 26.4VDC
- ■: Input voltage 28.8VDC
- X: Ambient temperature (°C)
- Y: Number of simultaneous on points (point)
- *3 The following table shows the input response times.

| Timing | Set value | | | | | | | | | |
|------------------|-----------|---|-------|-------|-----|-----|------|------|------|--|
| | 0.1ms | .1ms 0.2ms 0.4ms 0.6ms 1ms 5ms 10ms 20ms 70ms | | | | | | | | |
| OFF to ON (MAX.) | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms | |
| ON to OFF (MAX.) | 0.2ms | 0.3ms | 0.5ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms | |

^{*4} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AX82 (when 12VDC is used) and RX72C4

| Item | | Specifications | | Compatibility | Precautions | |
|---|---------------|--|--|---------------|--|--|
| | | AX82 | RX72C4 | | | |
| Input type | | DC input (negative common type) | DC input (positive common/negative common shared type) | 0 | | |
| Number of inp | ut points | 64 | | 0 | | |
| Isolation method | od | Photocoupler | 0 | | | |
| Rated input vo | ltage | 12/24VDC (+10/-15%, ripple ratio within 5%) | 5/12VDC (+20/-15%, ripple ratio within 5%) | 0 | | |
| Rated input cu | rrent | Approx. 3mA (12VDC) Approx. 7mA (24VDC) | 1.7mA TYP. (at 5VDC) 4.8mA TYP. (at 12VDC) | 0 | | |
| Maximum number of simultaneous input points | | 40 points (when next to the power supply module is located: 26 points) | 100% (64 points) | 0 | | |
| ON voltage/ON current | | 9.5VDC or higher/2.6mA or higher | 3.5V or higher/1mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1 | |
| OFF voltage/OFF current | | 6VDC or lower/1.0mA or lower | 1V or lower/0.1mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1 | |
| Input resistanc | ce | Approx. 3.4kΩ | 2.3kΩ | Δ | The input resistance is changed after replacement.*1 | |
| Response | OFF to ON | 10ms or less | Configured in the parameter.*2 | 0 | Set the input response | |
| time | ON to OFF | 10ms or less | Configured in the parameter.*2 | 0 | time of parameters to 10ms. | |
| Common term arrangement | inal | 32 points/common (common terminal: 1-17, 1-18, 1-36, 2-17, 2-18, 2-36) | 32 points/common (common terminal: 1B01, 1B02, 2B01, 2B02) | 0 | | |
| Operation indi | cation | ON indication (LED), 32 point switch- | over using switch | 0 | | |
| External interface | | 37-pin D-sub connector × 2 (A6CON1E/2E/3E) | 40-pin connector × 2 (A6CON1/2/3/ 4) | × | Wiring needs to be changed after | |
| Applicable wire size | | 0.088 to 0.3mm | | 0 | replacement. | |
| Number of occupied I/O points | | 64 (I/O assignment: Input 64 points) | | 0 | | |
| Internal curren (5VDC) | t consumption | 120mA (TYP. all points ON) | 150mA (TYP. all points ON) | _ | | |
| External dimer | nsions | 250(H)×37.5(W)×106(D)mm | 106(H)×27.8(W)×110(D)mm | _ | | |
| Weight | | 0.60kg | 0.14kg | _ | | |

^{*1} Check the specifications of sensors and switches connected to the RX72C4.

^{*2} The following table shows the input response times.

| Timing | Set value | | | | | | | | |
|------------------|-----------|-------|-------|-------|-----|-----|------|------|------|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| OFF to ON (MAX.) | 0.2ms | 0.3ms | 0.5ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| ON to OFF (MAX.) | 0.21ms | 0.3ms | 0.5ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |

AX82 (when 12VDC is used) and RX71C4

| Item | | Specifications | | Compatibility | Precautions |
|-------------------------------|----------------|--|--|---------------|---|
| | | AX82 | RX71C4 | | |
| Input type | | DC input (negative common type) | DC input (positive common/negative common shared type) | 0 | |
| Number of inp | out points | 64 | 32 | Δ | When 33 or more points are required, use two modules of the RX71C4. |
| Isolation meth | od | Photocoupler | | 0 | |
| Rated input vo | oltage | 12/24VDC (+10/-15%, ripple ratio within 5%) | 5/12VDC (+20/-15%, ripple ratio within 5%) | 0 | |
| Rated input cu | urrent | Approx. 3mA (12VDC) Approx. 7mA (24VDC) | 1.7mA TYP. (at 5VDC) 4.8mA TYP. (at 12VDC) | 0 | |
| Maximum nun simultaneous | | 40 points (when next to the power supply module is located: 26 points) | 100% (32 points) | 0 | |
| ON voltage/OI | N current | 9.5VDC or higher/2.6mA or higher | 3.5V or higher/1mA or higher | Δ | The ON voltage and ON current are changed after replacement.*1 |
| OFF voltage/0 | OFF current | 6VDC or lower/1.0mA or lower | 1V or lower/0.1mA or lower | Δ | The OFF voltage and OFF current are changed after replacement.*1 |
| Input resistand | ce | Αρριοχ. 3.4kΩ | 2.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| Response | OFF to ON | 10ms or less | Configured in the parameter.*2 | 0 | Set the input response |
| time | ON to OFF | 10ms or less | Configured in the parameter.*2 | 0 | time of parameters to 10ms. |
| Common term arrangement | ninal | 32 points/common (common terminal: 1-17, 1-18, 1-36, 2-17, 2-18, 2-36) | 32 points/common (common terminal: B01, B02) | 0 | |
| Operation indi | cation | ON indication (LED), 32 point switch- over using switch | ON indication (LED) | 0 | |
| External interf | ace | 37-pin D-sub connector × 2 (A6CON1E/2E/3E) | 40-pin connector (A6CON1/2/3/4) | × | Wiring needs to be changed after |
| Applicable wire size | | 0.088 to 0.3mm | | 0 | replacement. By using the upgrade tool conversion adapter (ERNT-ASLCXY81), the existing external wiring and terminal blocks in the existing system can be used.*3 |
| Number of occupied I/O points | | 64 (I/O assignment: Input 64 points) | 32 (I/O assignment: Input 32 points) | Δ | |
| Internal currer (5VDC) | nt consumption | 120mA (TYP. all points ON) | 140mA (TYP. all points ON) | _ | |
| External dime | nsions | 250(H)×37.5(W)×106(D)mm | 106(H)×27.8(W)×110(D)mm | _ | |
| Weight | | 0.60kg | 0.12kg | _ | |
| | | | | | |

^{*1} Check the specifications of sensors and switches connected to the RX71C4.

^{*2} The following table shows the input response times.

| Timing | Set value | | | | | | | | |
|------------------|-----------|-------|-------|-------|-----|-----|------|------|------|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| OFF to ON (MAX.) | 0.2ms | 0.3ms | 0.5ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| ON to OFF (MAX.) | 0.21ms | 0.3ms | 0.5ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

Output modules

AY10 and RY10R2

 $\bigcirc : \textbf{Compatible}, \ \triangle : \textbf{Partly changed}, \ \times : \textbf{Incompatible}, \ -\!\!\!-\!\!\!: \textbf{Not applicable}$

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|-----------------|---|---|---------------|---|
| | | AY10 | RY10R2 | | |
| Output type | | Contact output | | 0 | |
| Number of output points | | 16 | | 0 | |
| Isolation method | | Photocoupler | Relay | Δ | Each isolation method has the same isolation performance although the method is changed after replacement. |
| Rated switching current | g voltage, | 2A at 24VDC (resistive load)/point, 2A common | a at 240VAC (COSθ = 1)/point, 8A/ | 0 | |
| Minimum switc | hing load | 1mA at 5VDC | | 0 | |
| Maximum swite | ching load | 264VAC, 125VDC | | 0 | |
| Response | OFF to ON | 10ms or less | | 0 | |
| time | ON to OFF | 12ms or less | | 0 | |
| Life | | Refer to the life table.*1 | | Δ | The electrical life is half after replacement. |
| Maximum swite | ching frequency | 3600 times/hour | | 0 | |
| Surge suppress | sor | None | | 0 | |
| Fuse | | None | | 0 | |
| Relay socket | | None | | 0 | |
| External power supply | Voltage | 24VDC±10% (ripple voltage 4Vp-p or lower) | _ | 0 | No external power supply is required. |
| | Current | 150mA (TYP. 24VDC, all points ON) | _ | 0 | |
| Common terminal arrangement | | 8 points/common (common terminal: TB9, TB18) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | ation | ON indication (LED) | | 0 | |
| External interfa | ce | 20-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire | size | 0.75 to 2mm | 0.3 to 0.75mm ² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade too |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | conversion adapter (ERNT-1AR10XY), the existing external wiring and terminal blocks in the existing system can be used.*2 |
| Number of occupied I/O points | | 16 points (I/O assignment: Output 16 | points) | 0 | |
| Internal current (5VDC) | consumption | 115mA (TYP. all points ON) | 450mA (TYP. all points ON) | _ | |
| External dimen | sions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.44kg | 0.22kg | | |

AY10

| Mechanical | 20 million times or more | | | |
|------------|---|--|--|--|
| Electrical | Rated switching voltage/current load: 200 thousand times or more | | | |
| | 1.5A at 200VAC, 1A at 240VAC (COS ϕ = 0.7) 200 thousand times or more 0.7A at 200VAC, 0.5A at 240VAC (COS ϕ = 0.35) 200 thousand times or more 1A at 24VDC, 0.1A at 100VDC (L/R = 7ms) 200 thousand times or more | | | |
| RY10R2 | | | | |
| Mechanical | 20 million times or more | | | |
| Electrical | Rated switching voltage/current load: 100 thousand times or more | | | |
| | 1.5A at 200VAC, 1A at 240VAC (COS ϕ = 0.7) 100 thousand times or more 0.4A at 200VAC, 0.3A at 240VAC (COS ϕ = 0.7) 300 thousand times or more | | | |
| | 1A at 200VAC, 0.5A at 240VAC (COS ϕ = 0.35) 100 thousand times or more 0.3A at 200VAC, 0.15A at 240VAC (COS ϕ = 0.35) 300 thousand times or more | | | |

^{*2} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY10A and RY18R2A

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|-----------------|---|--|---------------|---|
| | | AY10A | RY18R2A | | |
| Output type | | Contact output | | 0 | |
| Number of output points | | 16 | 8 | Δ | When 9 or more points are required, use two modules of the RY18R2A. |
| Isolation method | | Photocoupler | Relay | Δ | Each isolation method has the same isolation performance although the method is changed after replacement. |
| Rated switching current | g voltage, | 2A at 24VDC (resistive load)/point 2A at 240VAC (COSθ = 1)/point 16A/all points | 2A at 24VDC (resistive load)/point 2A at 240VAC (COSθ = 1)/point 8A/module | 0 | |
| Minimum switch | hing load | 1mA at 5VDC | | 0 | |
| Maximum switch | ching load | 264VAC, 125VDC | | 0 | |
| Response | OFF to ON | 10ms or less | | 0 | |
| time | ON to OFF | 12ms or less | | 0 | |
| Life | | Refer to the life table.*1 | | Δ | The electrical life is half after replacement. |
| Maximum switch | ching frequency | 3600 times/hour | | 0 | |
| Surge suppress | sor | None | | 0 | |
| Fuse | | None | | 0 | |
| Relay socket | | None | | 0 | |
| External power supply | Voltage | 24VDC±10% (ripple voltage 4Vp-p or lower) | _ | 0 | No external power supply is required. |
| | Current | 150mA (TYP. 24VDC, all points ON) | _ | 0 | |
| Common terminarrangement | nal | No common (all points independent) | | 0 | |
| Operation indic | ation | ON indication (LED) | | 0 | |
| External interfa | ice | 38-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire | size | 0.75 to 2mm | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | conversion adapter (ERNT-1AR10AY), the existing external wiring and terminal blocks in the existing system can be used.*2 |
| Number of occupied I/O points | | 16 points (I/O assignment: Output 16 points) | 16 points (I/O assignment: Output 16 points) | Δ | The number of output points is 8, but 16 points are occupied. |
| Internal current (5VDC) | t consumption | 115mA (TYP. all points ON) | 260mA (TYP. all points ON) | _ | |
| (5VDC) | | | † | | |
| External dimen | sions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |

AY10A

| Mechanical | 20 million times or more | | | | |
|------------|---|--|--|--|--|
| Electrical | Rated switching voltage/current load: 200 thousand times or more | | | | |
| | 1.5A at 200VAC, 1A at 240VAC (COSφ = 0.7) 200 thousand times or more 0.7A at 200VAC, 0.5A at 240VAC (COSφ = 0.35) 200 thousand times or more 1A at 24VDC, 0.1A at 100VDC (L/R = 7ms) 200 thousand times or more | | | | |
| RY18R2A | | | | | |
| Mechanical | 20 million times or more | | | | |
| Electrical | Rated switching voltage/current load: 100 thousand times or more | | | | |
| | 1.5A at 200VAC, 1A at 240VAC (COS ϕ = 0.7) 100 thousand times or more 0.4A at 200VAC, 0.3A at 240VAC (COS ϕ = 0.7) 300 thousand times or more | | | | |
| | 1A at 200VAC, 0.5A at 240VAC (COS ϕ = 0.35) 100 thousand times or more 0.3A at 200VAC, 0.15A at 240VAC (COS ϕ = 0.35) 300 thousand times or more | | | | |

^{*2} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY10A-UL and RY18R2A

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|-----------------|---|--|---------------|---|
| | | AY10A-UL | RY18R2A | | |
| Output type | | Contact output | | 0 | |
| Number of output points | | 16 | 8 | Δ | When 9 or more points are required, use two modules of the RY18R2A. |
| Isolation method | | Photocoupler | Relay | Δ | Each isolation method has the same isolation performance although the method is changed after replacement. |
| Rated switchin current | g voltage, | 2A at 24VDC (resistive load)/point 2A at 240VAC (COSθ = 1)/point 16A/all points | 2A at 24VDC (resistive load)/point 2A at 240VAC (COSθ = 1)/point 8A/module | 0 | |
| Minimum switc | hing load | 1mA at 5VDC | | 0 | |
| Maximum swite | ching load | 264VAC, 125VDC | | 0 | |
| Response | OFF to ON | 10ms or less | | 0 | |
| time | ON to OFF | 12ms or less | | 0 | |
| Life | | Refer to the life table.*1 | | Δ | The electrical life is half after replacement. |
| Maximum swite | ching frequency | 3600 times/hour | | 0 | |
| Surge suppres | sor | None | | 0 | |
| Fuse | | None | | 0 | |
| Relay socket | | None | | 0 | |
| External power supply | Voltage | 24VDC±10% (ripple voltage 4Vp-p or lower) | _ | 0 | No external power supply is required. |
| | Current | 150mA (TYP. 24VDC, all points ON) | _ | 0 | |
| Withstand volta | age | Between AC external connecting terminals and general grounding 1500VAC rms for 1 minute | 2300VAC rms for 1 minute | 0 | |
| Isolation resista | ance | 5MΩ or more by insulation resistance tester | 10MΩ or more by insulation resistance tester | 0 | |
| Noise immunity | / | By noise simulator of 1500Vp-p noise voltage, $1\mu s$ noise width and 25 to 60Hz noise frequency | | 0 | |
| Common termi arrangement | nal | No common (all points independent) | | 0 | |
| Operation indic | cation | ON indication (LED) | | 0 | |
| External interfa | ace | 38-point terminal block (M3.5 × 7 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire | e size | 0.75 to 2mm² (14 to 18 AWG) | 0.3 to 0.75mm (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool |
| Applicable solderless terminal | | RAV1.25-3.5, RAV2-3.5 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | conversion adapter (ERNT-1AR10AY), the existing external wiring and terminal blocks in the existing system can be used.*2 |
| Number of occupied I/O points | | 16 points (I/O assignment: Output 16 points) | 16 points (I/O assignment: Output 16 points) | Δ | The number of output points is 8, but 16 points are occupied. |
| Internal curren (5VDC) | t consumption | 115mA (TYP. all points ON) | 260mA (TYP. all points ON) | _ | |
| External dimen | sions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.50kg | 0.19kg | _ | |

AY10A-UL

| Mechanical | 20 million times or more |
|------------|--|
| Electrical | Rated switching voltage/current load: 200 thousand times or more |
| | 1.5A at 200VAC, 1A at 240VAC |
| | $(COS\phi = 0.7)$ 200 thousand times or more |
| | 0.7A at 200VAC, 0.5A at 240VAC |
| | (COSφ = 0.35) 200 thousand times or more |
| | 1A at 24VDC, 0.1A at 100VDC |
| | (L/R = 7ms) 200 thousand times or more |
| RY18R2A | |
| Mechanical | 20 million times or more |
| Electrical | Rated switching voltage/current load: 100 thousand times or more |
| | |

| Mechanical | 20 million times or more | | | | | |
|------------|--|--|--|--|--|--|
| Electrical | Rated switching voltage/current load: 100 thousand times or more | | | | | |
| | 1.5A at 200VAC, 1A at 240VAC (COS ϕ = 0.7) 100 thousand times or more 0.4A at 200VAC, 0.3A at 240VAC (COS ϕ = 0.7) 300 thousand times or more | | | | | |
| | 1A at 200VAC, 0.5A at 240VAC (COS ϕ = 0.35) 100 thousand times or more 0.3A at 200VAC, 0.15A at 240VAC (COS ϕ = 0.35) 300 thousand times or more | | | | | |
| | 1A at 24VDC, 0.1A at 100VDC (L/R = 7ms) 100 thousand times or more 0.3A at 24VDC, 0.03A at 100VDC (L/R = 7ms) 300 thousand times or more | | | | | |

^{*2} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY11 and RY10R2

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|-----------------|---|---|---------------|--|
| | | AY11 | RY10R2 | | |
| Output type | | Contact output | 0 | | |
| Number of out | put points | 16 | | 0 | |
| Isolation method | | Photocoupler | Relay | Δ | Each isolation method has the same isolation performance although the method is changed after replacement. |
| Rated switchin current | g voltage, | 2A at 24VDC (resistive load)/point, 2A common | A at 240VAC (COSθ = 1)/point, 8A/ | 0 | |
| Minimum switc | hing load | 1mA at 5VDC | | 0 | |
| Maximum swite | ching load | 264VAC, 125VDC | | 0 | |
| Leakage curre | nt at OFF | 0.1mA (200VAC, 60Hz) | _ | 0 | |
| Response | OFF to ON | 10ms or less | 1 | 0 | |
| time | ON to OFF | 12ms or less | | 0 | |
| Life | • | Refer to the life table.*1 | | Δ | The electrical life is half after replacement. |
| Maximum swite | ching frequency | 3600 times/hour | | 0 | |
| Surge suppres | sor | Varistor (387 to 473V) | None | × | No varistor is built in this model. |
| Fuse | | None | | 0 | |
| Relay socket | | Available | None | × | The relay cannot be replaced. |
| External power supply | Voltage | 24VDC±10% (ripple voltage 4Vp-p or lower) | _ | 0 | No external power supply is required. |
| | Current | 150mA (TYP. 24VDC, all points ON) | _ | 0 | |
| Common termi arrangement | nal | 8 points/common (common terminal: TB9, TB18) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | cation | ON indication (LED) | | 0 | |
| External interfa | ace | 20-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire size | | 0.75 to 2mm | 0.3 to 0.75mm ² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | conversion adapter (ERNT-1AR10XY), the existing external wiring and terminal blocks in the existing system can be used.*2 |
| Number of occupied I/O points | | 16 points (I/O assignment: Output 16 | points) | 0 | |
| Internal current (5VDC) | t consumption | 115mA (TYP. all points ON) | 450mA (TYP. all points ON) | _ | |
| External dimen | sions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.50kg | 0.22kg | _ | |
| | | | | | |

AY11

| Mechanical | 20 million times or more | | | | |
|------------|---|--|--|--|--|
| Electrical | Rated switching voltage/current load: 200 thousand times or more | | | | |
| | 1.5A at 200VAC, 1A at 240VAC (COSφ = 0.7) 200 thousand times or more 0.7A at 200VAC, 0.5A at 240VAC (COSφ = 0.35) 200 thousand times or more 1A at 24VDC, 0.1A at 100VDC (L/R = 7ms) 200 thousand times or more | | | | |
| RY10R2 | | | | | |
| Mechanical | 20 million times or more | | | | |
| Electrical | Rated switching voltage/current load: 100 thousand times or more | | | | |
| | 1.5A at 200VAC, 1A at 240VAC (COS ϕ = 0.7) 100 thousand times or more 0.4A at 200VAC, 0.3A at 240VAC (COS ϕ = 0.7) 300 thousand times or more | | | | |
| | 1A at 200VAC, 0.5A at 240VAC (COS ϕ = 0.35) 100 thousand times or more 0.3A at 200VAC, 0.15A at 240VAC (COS ϕ = 0.35) 300 thousand times or more | | | | |

^{*2} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY11A and RY18R2A

| Item | | Specifications | | Compatibility | Precautions | |
|--------------------------------|-----------------|---|--|---------------|---|--|
| | | AY11A | RY18R2A | | | |
| Output type | | Contact output | | 0 | | |
| Number of outp | out points | 16 | 8 | Δ | When 9 or more points are required, use two modules of the RY18R2A. | |
| Isolation metho | od | Photocoupler | Relay | Δ | Each isolation method has the same isolation performance although the method is changed after replacement. | |
| Rated switching current | g voltage, | 2A at 24VDC (resistive load)/point 2A at 240VAC (COSθ = 1)/point 16A/all points | 2A at 24VDC (resistive load)/point 2A at 240VAC (COSθ = 1)/point 8A/module | 0 | | |
| Minimum switc | hing load | 1mA at 5VDC | | 0 | | |
| Maximum swite | ching load | 264VAC, 125VDC | | 0 | | |
| Leakage curre | nt at OFF | 0.1mA (200VAC, 60Hz) | _ | 0 | | |
| Response | OFF to ON | 10ms or less | | 0 | | |
| time | ON to OFF | 12ms or less | | 0 | | |
| Life | | Refer to the life table.*1 | | Δ | The electrical life is half after replacement. | |
| Maximum swite | ching frequency | 3600 times/hour | | 0 | | |
| Surge suppres | sor | Varistor (387 to 473V) | None | × | No varistor is built in this model. | |
| Fuse | | None | | 0 | | |
| Relay socket | | None | | 0 | | |
| External power supply | Voltage | 24VDC±10% (ripple voltage 4Vp-p or lower) | _ | 0 | No external power supply is required. | |
| | Current | 150mA (TYP. 24VDC, all points ON) | _ | 0 | | |
| Common termi arrangement | nal | No common (all points independent) | | 0 | | |
| Operation indic | cation | ON indication (LED) | | 0 | | |
| External interfa | ace | 38-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after | |
| Applicable wire | e size | 0.75 to 2mm | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool | |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | conversion adapter (ERNT-1AR10AY), the existing external wiring and terminal blocks in the existing system can be used.*2 | |
| Number of occupied I/O points | | 16 points (I/O assignment: Output 16 points) | 16 points (I/O assignment: Output 16 points) | Δ | The number of output points is 8, but 16 points are occupied. | |
| Internal current (5VDC) | t consumption | 115mA (TYP. all points ON) | 260mA (TYP. all points ON) | _ | | |
| External dimen | sions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | | |
| Weight | | 0.47kg | 0.19kg | _ | | |

AY11A

| Mechanical | 20 million times or more | | |
|------------|--|--|--|
| Electrical | Rated switching voltage/current load: 200 thousand times or more | | |
| | 1.5A at 200VAC, 1A at 240VAC (COSφ = 0.7) 200 thousand times or more | | |
| | 0.7A at 200VAC, 0.5A at 240VAC | | |
| | $(COS\phi = 0.35)$ 200 thousand times or more | | |
| | 1A at 24VDC, 0.1A at 100VDC | | |
| | (L/R = 7ms) 200 thousand times or more | | |
| RY18R2A | | | |
| Mechanical | 20 million times or more | | |
| Electrical | Rated switching voltage/current load: 100 thousand times or more | | |
| | 1.5A at 200VAC, 1A at 240VAC (COS♦ = 0.7) 100 thousand times or more | | |
| | 0.4A at 200VAC, 0.3A at 240VAC (COS ϕ = 0.7) 300 thousand times or more | | |
| | 1A at 200VAC, 0.5A at 240VAC (COSφ = 0.35) 100 thousand times or more | | |
| | 0.3A at 200VAC, 0.15A at 240VAC (COSφ = 0.35) 300 thousand times or more | | |

^{*2} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY11AEU and RY18R2A

O: Compatible, △: Partly changed, ×: Incompatible, —: Not applicable

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|------------------|--|--|---------------|--|
| | | AY11AEU | RY18R2A | | |
| Output type | | Contact output | | 0 | |
| Number of output points | | 16 | 8 | Δ | When 9 or more points are required, use two modules of the RY18R2A. |
| Isolation method | | Photocoupler | Relay | Δ | Each isolation method has the same isolation performance although the method is changed after replacement. |
| Rated switchin current | g voltage, | 2A at 24VDC (resistive load)/point 2A at 24VAC (COSθ = 1)/point 16A/all points | 2A at 24VDC (resistive load)/point 2A at 240VAC (COSθ = 1)/point 8A/module | 0 | |
| Minimum switc | hing load | 1mA at 5VDC | | 0 | |
| Maximum swite | ching load | 49.9VAC, 74.9VDC | 264VAC, 125VDC | 0 | |
| Leakage curre | nt at OFF | 0.1mA (49.9VAC, 60Hz) | _ | 0 | |
| Response | OFF to ON | 10ms or less | | 0 | |
| time | ON to OFF | 12ms or less | | 0 | |
| Life | | Refer to the life table.*1 | | Δ | The electrical life is half after replacement. |
| Maximum swite | ching frequency | 3600 times/hour | | 0 | |
| Surge suppres | sor | Varistor (387 to 473V) | None | × | No varistor is built in this model. |
| Fuse | | None | | 0 | |
| Relay socket | | None | | 0 | |
| External power supply | Voltage | 24VDC±10% (ripple voltage 4Vp-p or lower) | _ | 0 | No external power supply is required. |
| | Current | 150mA (TYP. 24VDC, all points ON) | _ | 0 | |
| Withstand voltage | | Between AC external connecting terminals and general grounding 1500VAC rms for 1 minute Between DC external connecting terminals and general grounding 500VAC rms for 1 minute | 2300VAC rms for 1 minute | 0 | |
| Isolation resistance | | 500VDC between AC/DC external connecting terminals and general grounding 10MΩ or more by insulation resistance tester | $10M\Omega$ or more by insulation resistance tester | 0 | |
| Noise immunity | y | By noise simulator of 1500Vp-p AC type noise voltage, 500Vp-p DC type noise voltage, 1µs noise width and 25 to 60Hz noise frequency | By noise simulator of 1500Vp-p noise voltage, 1μs noise width and 25 to 60Hz noise frequency | 0 | |
| Common termi arrangement | nal | No common (all points independent) | | 0 | |
| Operation indic | cation | ON indication (LED) | | 0 | |
| External interfa | ace | 38-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire size | | 0.75 to 2mm | 0.3 to 0.75mm ² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool conversion adapter |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | (ERNT-1AR10AY), the existing external wiring and terminal blocks in the existing system can be used.*2 |
| Number of occ | upied I/O points | 16 points (I/O assignment: Output 16 points) | 16 points (I/O assignment: Output 16 points) | Δ | The number of output points is 8, but 16 points are occupied. |

| Item | Specifications | | Compatibility | Precautions |
|-------------------------------------|----------------------------|----------------------------|---------------|-------------|
| | AY11AEU | RY18R2A | | |
| Internal current consumption (5VDC) | 115mA (TYP. all points ON) | 260mA (TYP. all points ON) | _ | |
| External dimensions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | 0.47kg | 0.19kg | _ | |

^{*1} The following tables show the life data.

AY11AEU

| Mechanical | 20 million times or more |
|------------|---|
| Electrical | Rated switching voltage/current load: 200 thousand times or more |
| | $1.5A \ at \ 24VAC$ (COS ϕ = 0.7) 200 thousand times or more 0.75A at 24VAC (COS ϕ = 0.35) 200 thousand times or more 1A at 24VDC, 0.1A at 48VDC (L/R = 7ms) 200 thousand times or more |

RY18R2A

| Mechanical | 20 million times or more |
|------------|--|
| Electrical | Rated switching voltage/current load: 100 thousand times or more |
| | 1.5A at 200VAC, 1A at 240VAC (COS ϕ = 0.7) 100 thousand times or more 0.4A at 200VAC, 0.3A at 240VAC (COS ϕ = 0.7) 300 thousand times or more |
| | 1A at 200VAC, 0.5A at 240VAC (COS ϕ = 0.35) 100 thousand times or more 0.3A at 200VAC, 0.15A at 240VAC (COS ϕ = 0.35) 300 thousand times or more |
| | 1A at 24VDC, 0.1A at 100VDC (L/R = 7ms) 100 thousand times or more 0.3A at 24VDC, 0.03A at 100VDC (L/R = 7ms) 300 thousand times or more |

^{*2} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY11E and RY10R2

| Item | | Specifications | | Compatibility | Precautions |
|-------------------------------------|-----------------|---|---|---------------|--|
| | | AY11E | RY10R2 | | |
| Output type | | Contact output | | 0 | |
| Number of out | put points | 16 | | 0 | |
| Isolation method | | Photocoupler | Relay | Δ | Each isolation method has the same isolation performance although the method is changed after replacement. |
| Rated switchin current | g voltage, | 2A at 24VDC (resistive load)/point, 2A common | A at 240VAC (COSθ = 1)/point, 8A/ | 0 | |
| Minimum switc | hing load | 1mA at 5VDC | | 0 | |
| Maximum swite | ching load | 250VAC, 125VDC | 264VAC, 125VDC | 0 | |
| Leakage curre | nt at OFF | 0.1mA (200VAC, 60Hz) | _ | 0 | |
| Response | OFF to ON | 10ms or less | | 0 | |
| time | ON to OFF | 12ms or less | | 0 | |
| Life | | Refer to the life table.*1 | | | The electrical life is half after replacement. |
| Maximum swite | ching frequency | 3600 times/hour | | 0 | |
| Surge suppressor | | Varistor (387 to 473V) | None | × | No varistor is built in this model. |
| Fuse | | 8A MF51NM8 or FGMA250V8A | None | × | No fuse is built in this model. |
| External power supply | Voltage | 24VDC±10% (ripple voltage 4Vp-p or lower) | _ | 0 | No external power supply is required. |
| | Current | 150mA (TYP. 24VDC, all points ON) | _ | 0 | |
| Common terminal arrangement | | 8 points/common (common terminal: TB9, TB18) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | cation | ON indication (LED) | | 0 | |
| External interfa | ace | 20-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire | e size | 0.75 to 2mm | 0.3 to 0.75mm ² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | conversion adapter (ERNT-1AR10XY), the existing external wiring and terminal blocks in the existing system can be used.*2 |
| Number of occupied I/O points | | 16 points (I/O assignment: Output 16 | points) | 0 | |
| Internal current consumption (5VDC) | | 115mA (TYP. all points ON) | 450mA (TYP. all points ON) | _ | |
| External dimensions | | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.47kg | 0.22kg | _ | |
| | | t- | · | | |

AY11E

| Mechanical | 20 million times or more |
|------------|--|
| Electrical | Rated switching voltage/current load: 200 thousand times or more |
| | 1.5A at 200VAC, 1A at 240VAC (COS ϕ = 0.7) 200 thousand times or more 0.75A at 200VAC, 0.5A at 240VAC (COS ϕ = 0.35) 200 thousand times or more 1A at 24VDC, 0.1A at 100VDC (L/R = 7ms) 200 thousand times or more |
| RY10R2 | |
| Mechanical | 20 million times or more |
| Electrical | Rated switching voltage/current load: 100 thousand times or more |
| | 1.5A at 200VAC, 1A at 240VAC (COS ϕ = 0.7) 100 thousand times or more 0.4A at 200VAC, 0.3A at 240VAC (COS ϕ = 0.7) 300 thousand times or more |
| | 1A at 200VAC, 0.5A at 240VAC (COS ϕ = 0.35) 100 thousand times or more 0.3A at 200VAC, 0.15A at 240VAC (COS ϕ = 0.35) 300 thousand times or more |

^{*2} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY11EEU and RY10R2

| Output type | | Specifications | | Compatibility | Precautions |
|--------------------------------|-----------------|--|--|---------------|--|
| | | AY11EEU | RY10R2 | | |
| | | Contact output | | 0 | |
| Number of output points | | 16 | | 0 | |
| Isolation method | | Photocoupler | Relay | Δ | Each isolation method ha the same isolation performance although the method is changed after replacement. |
| Rated switchin current | g voltage, | 2A at 24VDC (resistive load)/point, 2A at 24VAC (COSθ = 1)/point, 8A/ common | 2A at 24VDC (resistive load)/point, 2A at 240VAC (COSθ = 1)/point, 8A/ common | 0 | |
| Minimum switc | hing load | 1mA at 5VDC | | 0 | |
| Maximum swite | ching load | 49.9VAC, 74.9VDC | 264VAC, 125VDC | 0 | |
| Leakage curre | nt at OFF | 0.1mA (49.9VAC, 60Hz) | _ | 0 | |
| Response | OFF to ON | 10ms or less | | 0 | |
| time | ON to OFF | 12ms or less | | 0 | |
| Life | | Refer to the life table.*1 | | Δ | The electrical life is half after replacement. |
| Maximum swite | ching frequency | 3600 times/hour | | 0 | |
| Surge suppres | sor | Varistor (387 to 473V) | None | × | No varistor is built in this model. |
| Fuse | | 8A MF51NM8 or FGMA250V8A | None | × | No fuse is built in this model. |
| External power supply | Voltage | 24VDC±10% (ripple voltage 4Vp-p or lower) | _ | 0 | No external power supply is required. |
| | Current | 150mA (TYP. 24VDC, all points ON) | _ | 0 | |
| Withstand voltage | | Between AC external connecting terminals and general grounding 1500VAC rms for 1 minute Between DC external connecting terminals and general grounding 500VAC rms for 1 minute | 2300VAC rms for 1 minute | 0 | |
| Isolation resistance | | 500VDC between AC/DC external connecting terminals and general grounding 10MΩ or more by insulation resistance tester | 10M Ω or more by insulation resistance tester | 0 | |
| Noise immunity | | By noise simulator of 1500Vp-p AC type noise voltage, 500Vp-p DC type noise voltage, 1µs noise width and 25 to 60Hz noise frequency | By noise simulator of 1500Vp-p noise voltage, 1μs noise width and 25 to 60Hz noise frequency | 0 | |
| Common terminal arrangement | | 8 points/common (common terminal: TB9, TB18) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indication | | ON indication (LED) | • | 0 | |
| External interface | | 20-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire size | | 0.75 to 2mm | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade to conversion adapter (ERNT-1AR10XY), the existing external wiring and terminal blocks in the existing system can be used.*2 |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | |

| Item | Specifications | | Compatibility | Precautions |
|-------------------------------------|----------------------------|----------------------------|---------------|-------------|
| | AY11EEU | RY10R2 | | |
| Internal current consumption (5VDC) | 115mA (TYP. all points ON) | 450mA (TYP. all points ON) | _ | |
| External dimensions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | 0.47kg | 0.22kg | _ | |

^{*1} The following tables show the life data.

AY11EEU

| Mechanical | 20 million times or more |
|------------|---|
| Electrical | Rated switching voltage/current load: 200 thousand times or more |
| | 1.5A at 24VAC (COSφ = 0.7) 200 thousand times or more 0.75A at 24VAC (COSφ = 0.35) 200 thousand times or more 1A at 24VDC, 0.1A at 48VDC (L/R = 7ms) 200 thousand times or more |

RY10R2

| Mechanical | 20 million times or more |
|------------|--|
| Electrical | Rated switching voltage/current load: 100 thousand times or more |
| | 1.5A at 200VAC, 1A at 240VAC (COS ϕ = 0.7) 100 thousand times or more 0.4A at 200VAC, 0.3A at 240VAC (COS ϕ = 0.7) 300 thousand times or more |
| | 1A at 200VAC, 0.5A at 240VAC (COS ϕ = 0.35) 100 thousand times or more 0.3A at 200VAC, 0.15A at 240VAC (COS ϕ = 0.35) 300 thousand times or more |
| | 1A at 24VDC, 0.1A at 100VDC (L/R = 7ms) 100 thousand times or more 0.3A at 24VDC, 0.03A at 100VDC (L/R = 7ms) 300 thousand times or more |

^{*2} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY11-UL and RY10R2

| Item | | Specifications | | Compatibility | Precautions |
|-------------------------------------|-----------------|---|---|---------------|--|
| | | AY11-UL | RY10R2 | | |
| Output type | | Contact output | | 0 | |
| Number of output points | | 16 | | 0 | |
| Isolation method | | Photocoupler | Relay | Δ | Each isolation method has the same isolation performance although the method is changed after replacement. |
| Rated switching current | g voltage, | 2A at 24VDC (resistive load)/point, 2A common | A at 240VAC (COSθ = 1)/point, 8A/ | 0 | |
| Minimum switc | hing load | 1mA at 5VDC | | 0 | |
| Maximum swite | hing load | 264VAC, 125VDC | | 0 | |
| Leakage currer | nt at OFF | 0.1mA (200VAC, 60Hz) | _ | 0 | |
| Response | OFF to ON | 10ms or less | | 0 | |
| time | ON to OFF | 12ms or less | | 0 | |
| Life | | Refer to the life table.*1 | | Δ | The electrical life is half after replacement. |
| Maximum swite | ching frequency | 3600 times/hour | | 0 | |
| Surge suppress | sor | Varistor (387 to 473V) | None | × | No varistor is built in this model. |
| Relay socket | | Available | None | × | The relay cannot be replaced. |
| External power supply | Voltage | 24VDC±10% (ripple voltage 4Vp-p or lower) | _ | 0 | No external power suppis required. |
| | Current | 150mA (TYP. 24VDC, all points ON) | _ | 0 | |
| Withstand volta | ige | Between AC external connecting terminals and general grounding 1500VAC rms for 1 minute | 2300VAC rms for 1 minute | 0 | |
| Isolation resista | ance | 5MΩ or more by insulation resistance tester | 10MΩ or more by insulation resistance tester | 0 | |
| Noise immunity | , | By noise simulator of 1500Vp-p noise and 25 to 60Hz noise frequency | voltage, 1μs noise width | 0 | |
| Common terminal arrangement | | 8 points/common (common terminal: TB9, TB18) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | ation | ON indication (LED) | | 0 | |
| External interfa | ce | 20-point terminal block (M3.5 × 7 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire | size | 0.75 to 2mm² (14 to 18 AWG) | 0.3 to 0.75mm ² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool conversion adapter |
| Applicable solderless terminal | | RAV1.25-3.5, RAV2-3.5 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | (ERNT-1AR10XY), the existing external wiring and terminal blocks in the existing system can be used.*2 |
| Number of occupied I/O points | | 16 points (I/O assignment: Output 16 | points) | 0 | |
| Internal current consumption (5VDC) | | 115mA (TYP. all points ON) | 450mA (TYP. all points ON) | _ | |
| External dimensions | | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | | | | |

AY11-UL

| Mechanical | 20 million times or more | | |
|------------|--|--|--|
| Electrical | Rated switching voltage/current load: 200 thousand times or more | | |
| | 1.5A at 200VAC, 1A at 240VAC (COS ϕ = 0.7) 200 thousand times or more 0.75A at 200VAC, 0.5A at 240VAC (COS ϕ = 0.35) 200 thousand times or more 1A at 24VDC, 0.1A at 100VDC (L/R = 7ms) 200 thousand times or more | | |
| RY10R2 | | | |
| Mechanical | 20 million times or more | | |
| Electrical | Rated switching voltage/current load: 100 thousand times or more | | |
| | 1.5A at 200VAC, 1A at 240VAC (COS ϕ = 0.7) 100 thousand times or more 0.4A at 200VAC, 0.3A at 240VAC (COS ϕ = 0.7) 300 thousand times or more | | |
| | 1A at 200VAC, 0.5A at 240VAC (COS ϕ = 0.35) 100 thousand times or more 0.3A at 200VAC, 0.15A at 240VAC (COS ϕ = 0.35) 300 thousand times or more | | |

^{*2} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY13 and RY10R2

| Item | | Specifications | | Compatibility | Precautions |
|-------------------------------------|------------|---|---|---------------|--|
| | | AY13 | RY10R2 | | |
| Output type | | Contact output | | 0 | |
| Number of outp | out points | 32 | 16 | Δ | When 17 or more points are required, use two modules of the RY10R2. |
| Isolation method | | Photocoupler | Relay | Δ | Each isolation method has the same isolation performance although the method is changed after replacement. |
| Rated switching current | g voltage, | 2A at 24VDC (resistive load)/point, 2A at 240VAC (COSθ = 1)/point, 5A/ common | 2A at 24VDC (resistive load)/point, 2A at 240VAC (COSθ = 1)/point, 8A/ common | 0 | |
| Minimum switc | hing load | 1mA at 5VDC | | 0 | |
| Maximum switch | ching load | 264VAC, 125VDC | | 0 | |
| Response | OFF to ON | 10ms or less | | 0 | |
| time | ON to OFF | 12ms or less | | 0 | |
| Life | | Refer to the life table.*1 | | Δ | The electrical life is half after replacement. |
| Maximum switching frequency | | 3600 times/hour | | 0 | |
| External power supply | Voltage | 24VDC±10% (ripple voltage 4Vp-p or lower) | _ | 0 | No external power supply is required. |
| | Current | 290mA (TYP. 24VDC, all points ON) | _ | 0 | |
| Common terminal arrangement | | 8 points/common (common terminal: TB9, TB18, TB27, TB36) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | ation | ON indication (LED) | | 0 | |
| External interfa | ice | 38-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire | size | 0.75 to 2mm | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | conversion adapter (ERNT-1AR11X13Y), the existing external wiring and terminal blocks in the existing system can be used.*2 |
| Number of occupied I/O points | | 32 points (I/O assignment: Output 32 points) | 16 points (I/O assignment: Output 16 points) | Δ | |
| Internal current consumption (5VDC) | | 230mA (TYP. all points ON) | 450mA (TYP. all points ON) | _ | |
| External dimensions | | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.59kg | 0.22kg | _ | |

AY13

| Mechanical | 20 million times or more | | |
|------------|--|--|--|
| Electrical | Rated switching voltage/current load: 200 thousand times or more | | |
| | 1.5A at 200VAC, 1A at 240VAC | | |
| | (COSφ = 0.7) 200 thousand times or more | | |
| | 0.75A at 200VAC, 0.5A at 240VAC | | |
| | (COS¢ = 0.35) 200 thousand times or more | | |
| | 1A at 24VDC, 0.1A at 100VDC | | |
| | (L/R = 7ms) 200 thousand times or more | | |
| RY10R2 | | | |
| Mechanical | 20 million times or more | | |
| Electrical | Rated switching voltage/current load: 100 thousand times or more | | |
| | 1.5A at 200VAC, 1A at 240VAC (COSφ = 0.7) 100 thousand times or more | | |
| | 0.4A at 200VAC, 0.3A at 240VAC (COS ϕ = 0.7) 300 thousand times or more | | |
| | 1A at 200VAC, 0.5A at 240VAC (COSφ = 0.35) 100 thousand times or more | | |
| | 0.3A at 200VAC, 0.15A at 240VAC (COS₀ = 0.35) 300 thousand times or more | | |

^{*2} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY13E and RY10R2

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|-----------------|---|---|---------------|--|
| | | AY13E | RY10R2 | | |
| Output type | | Contact output | | 0 | |
| Number of outp | put points | 32 | 16 | Δ | When 17 or more points are required, use two modules of the RY10R2. |
| Isolation method | | Photocoupler | Relay | Δ | Each isolation method has the same isolation performance although the method is changed after replacement. |
| Rated switchin current | g voltage, | 2A at 24VDC (resistive load)/point, 2A at 240VAC (COSθ = 1)/point, 5A/ common | 2A at 24VDC (resistive load)/point, 2A at 240VAC (COSθ = 1)/point, 8A/ common | 0 | |
| Minimum switc | hing load | 1mA at 5VDC | | 0 | |
| Maximum swite | ching load | 250VAC, 125VDC | 264VAC, 125VDC | 0 | |
| Response | OFF to ON | 10ms or less | | 0 | |
| time | ON to OFF | 12ms or less | | 0 | |
| Life | | Refer to the life table.*1 | | Δ | The electrical life is half after replacement. |
| Maximum swite | ching frequency | 3600 times/hour | | 0 | |
| Fuse | | 8A MF51NM8 or FGMA250V8A | None | × | No fuse is built in this model. |
| External power supply | Voltage | 24VDC±10% (ripple voltage 4Vp-p or lower) | _ | 0 | No external power supply is required. |
| | Current | 290mA (TYP. 24VDC, all points ON) | _ | 0 | |
| Common terminal arrangement | | 8 points/common (common terminal: TB9, TB18, TB27, TB36) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | cation | ON indication (LED) | | 0 | |
| External interfa | ace | 38-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire | e size | 0.75 to 2mm | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | conversion adapter (ERNT-1AR11X13Y), the existing external wiring and terminal blocks in the existing system can be used.*2 |
| Number of occupied I/O points | | 32 points (I/O assignment: Output 32 points) | 16 points (I/O assignment: Output 16 points) | Δ | |
| Internal current (5VDC) | t consumption | 230mA (TYP. all points ON) | 450mA (TYP. all points ON) | _ | |
| External dimen | nsions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.60kg | 0.22kg | _ | |
| | | I . | | | |

AY13E

| Mechanical | 20 million times or more | | |
|------------|--|--|--|
| Electrical | Rated switching voltage/current load: 200 thousand times or more | | |
| | 1.5A at 200VAC, 1A at 240VAC (COS ϕ = 0.7) 200 thousand times or more 0.75A at 200VAC, 0.5A at 240VAC (COS ϕ = 0.35) 200 thousand times or more 1A at 24VDC, 0.1A at 100VDC (L/R = 7ms) 200 thousand times or more | | |
| RY10R2 | | | |
| Mechanical | 20 million times or more | | |
| Electrical | Rated switching voltage/current load: 100 thousand times or more | | |
| | 1.5A at 200VAC, 1A at 240VAC (COS ϕ = 0.7) 100 thousand times or more 0.4A at 200VAC, 0.3A at 240VAC (COS ϕ = 0.7) 300 thousand times or more | | |
| | 1A at 200VAC, 0.5A at 240VAC (COS ϕ = 0.35) 100 thousand times or more 0.3A at 200VAC, 0.15A at 240VAC (COS ϕ = 0.35) 300 thousand times or more | | |

^{*2} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY13EU and RY10R2

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|-----------------|--|--|---------------|---|
| | | AY13EU RY10R2 | | | |
| Output type | | Contact output | RTIONZ | 0 | |
| Number of output points | | 32 | 16 | Δ | When 17 or more points are required, use two modules of the RY10R2. |
| Isolation method | | Photocoupler | Relay | Δ | Each isolation method has the same isolation performance although the method is changed after replacement. |
| Rated switching current | g voltage, | 2A at 24VDC (resistive load)/point, 2A at 24VAC (COSθ = 1)/point, 5A/ common | 2A at 24VDC (resistive load)/point, 2A at 240VAC (COSθ = 1)/point, 8A/ common | 0 | |
| Minimum switc | hing load | 1mA at 5VDC | | 0 | |
| Maximum switch | ching load | 49.9VAC, 74.9VDC | 264VAC, 125VDC | 0 | |
| Response | OFF to ON | 10ms or less | 1 | 0 | |
| time | ON to OFF | 12ms or less | | 0 | |
| Life | | Refer to the life table.*1 | | Δ | The electrical life is half after replacement. |
| Maximum swite | ching frequency | 3600 times/hour | | 0 | |
| External power supply | Voltage | 24VDC±10% (ripple voltage 4Vp-p or lower) | _ | 0 | No external power supply is required. |
| | Current | 290mA (TYP. 24VDC, all points ON) | _ | 0 | |
| Withstand voltage | | Between AC external connecting terminals and general grounding 1500VAC rms for 1 minute Between DC external connecting terminals and general grounding 500VAC rms for 1 minute | 2300VAC rms for 1 minute | 0 | |
| Isolation resistance | | 500VDC between AC/DC external connecting terminals and general grounding 10MΩ or more by insulation resistance tester | 10M Ω or more by insulation resistance tester | 0 | |
| Noise immunity | , | By noise simulator of 1500Vp-p AC type noise voltage, 500Vp-p DC type noise voltage, 1μs noise width and 25 to 60Hz noise frequency | By noise simulator of 1500Vp-p noise voltage, 1µs noise width and 25 to 60Hz noise frequency | 0 | |
| Common terminal arrangement | | 8 points/common (common terminal: TB9, TB18, TB27, TB36) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | ation | ON indication (LED) | | 0 | |
| External interfa | ce | 38-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire size | | 0.75 to 2mm | 0.3 to 0.75mm (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | conversion adapter (ERNT-1AR11X13Y), the existing external wiring and terminal blocks in the existing system can be used. 2 |
| Number of occupied I/O points | | 32 points (I/O assignment: Output 32 points) | 16 points (I/O assignment: Output 16 points) | Δ | |
| Internal current (5VDC) | consumption | 230mA (TYP. all points ON) | 450mA (TYP. all points ON) | _ | |
| External dimen | sions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |

| Item | Specifications | Compatibility | Precautions | |
|--------|----------------|---------------|-------------|--|
| | AY13EU | RY10R2 | | |
| Weight | 0.59kg | 0.22kg | _ | |

^{*1} The following tables show the life data.

AY13EU

| Mechanical | 20 million times or more | |
|------------|---|--|
| Electrical | Rated switching voltage/current load: 200 thousand times or more | |
| | 1.5A at 24VAC (COSφ = 0.7) 200 thousand times or more 0.75A at 24VAC (COSφ = 0.35) 200 thousand times or more 1A at 24VDC, 0.1A at 48VDC (L/R = 7ms) 200 thousand times or more | |

RY10R2

| Mechanical | 20 million times or more | |
|------------|--|--|
| Electrical | Rated switching voltage/current load: 100 thousand times or more | |
| | 1.5A at 200VAC, 1A at 240VAC (COS ϕ = 0.7) 100 thousand times or more 0.4A at 200VAC, 0.3A at 240VAC (COS ϕ = 0.7) 300 thousand times or more | |
| | 1A at 200VAC, 0.5A at 240VAC (COS ϕ = 0.35) 100 thousand times or more 0.3A at 200VAC, 0.15A at 240VAC (COS ϕ = 0.35) 300 thousand times or more | |
| | 1A at 24VDC, 0.1A at 100VDC (L/R = 7ms) 100 thousand times or more 0.3A at 24VDC, 0.03A at 100VDC (L/R = 7ms) 300 thousand times or more | |

^{*2} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY15EU and RY10R2

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|------------------|---|--|---------------|--|
| | | AY15EU | RY10R2 | | |
| Output type | | Contact output | | 0 | |
| Number of output points | | 24 | 16 | Δ | When 17 or more points are required, use two modules of the RY10R2. |
| Isolation method | | Photocoupler | Relay | Δ | Each isolation method has the same isolation performance although the method is changed after replacement. |
| Rated switching current | g voltage, | 2A at 24VDC (resistive load)/point, 2A common | a at 240VAC (COSθ = 1)/point, 8A/ | 0 | |
| Minimum switch | ning load | 10mA at 5VDC | 1mA at 5VDC | 0 | |
| Maximum switch | hing load | 264VAC, 125VDC | | 0 | |
| Response | OFF to ON | 10ms or less | | 0 | |
| time | ON to OFF | 12ms or less | | 0 | |
| Life | | Refer to the life table.*1 | | Δ | The electrical life is half after replacement. |
| Maximum switch | hing frequency | 3600 times/hour | | 0 | |
| External power supply | Voltage | 24VDC±10% (ripple voltage 4Vp-p or lower), SELV power supply | _ | 0 | No external power supply is required. |
| | Current | 220mA (TYP. 24VDC, all points ON), SELV power supply | _ | 0 | |
| Withstand voltage | | (AC batch relay-drive power supply, 5V internal circuit) 2830VAC rms/3 cycles (altitude 2000m) (Relay-drive power supply, 5V internal circuit) 500VAC rms/3 cycles (altitude 2000m) | 2300VAC rms for 1 minute | 0 | |
| Isolation resista | ince | 10M Ω or more by insulation resistance | e tester | 0 | |
| Noise immunity | | IEC801-4: 1kV | By noise simulator of 1500Vp-p noise voltage, 1µs noise width and 25 to 60Hz noise frequency | 0 | |
| Common terminal arrangement | | 8 points/common (common terminal: TB9, TB20, TB31) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | ation | ON indication (LED) | | 0 | |
| External interfa | ce | 38-point terminal block (M3.5 \times 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire size | | 0.75 to 2mm² (15 to 19 AWG) | 0.3 to 0.75mm (Outside diameter: 2.8mm or less) | × | replacement. |
| Applicable solderless terminal | | R1.25-3.5, R2-3.5 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | |
| Number of occu | upied I/O points | 32 points (I/O assignment: Output 32 points) | 16 points (I/O assignment: Output 16 points) | Δ | |
| Internal current (5VDC) | consumption | 150mA (TYP. all points ON) | 450mA (TYP. all points ON) | _ | |
| External dimensions | | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.50kg | 0.22kg | i | i |

AY15EU

| Mechanical | 20 million times or more | |
|------------|--|--|
| Electrical | Rated switching voltage/current load: 100 thousand times or more | |
| | 2A at 200VAC, 1.8A at 240VAC | |
| | $(COS\phi = 0.7)$ 200 thousand times or more | |
| | 1.1A at 200VAC, 0.9A at 240VAC | |
| | (COSφ = 0.35) 200 thousand times or more | |
| | 1.1A at 24VDC, 0.1A at 100VDC | |
| | (L/R = 7ms) 200 thousand times or more | |
| RY10R2 | | |
| Mechanical | 20 million times or more | |
| Electrical | Rated switching voltage/current load: 100 thousand times or more | |
| | 1.5A at 200VAC, 1A at 240VAC (COSφ = 0.7) 100 thousand times or more | |

| Mechanical | 20 million times or more |
|------------|--|
| Electrical | Rated switching voltage/current load: 100 thousand times or more |
| | 1.5A at 200VAC, 1A at 240VAC (COS ϕ = 0.7) 100 thousand times or more 0.4A at 200VAC, 0.3A at 240VAC (COS ϕ = 0.7) 300 thousand times or more |
| | 1A at 200VAC, 0.5A at 240VAC (COS ϕ = 0.35) 100 thousand times or more 0.3A at 200VAC, 0.15A at 240VAC (COS ϕ = 0.35) 300 thousand times or more |
| | 1A at 24VDC, 0.1A at 100VDC (L/R = 7ms) 100 thousand times or more 0.3A at 24VDC, 0.03A at 100VDC (L/R = 7ms) 300 thousand times or more |

AY20EU and RY20S6

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|------------------|---|--|---------------|---|
| | | AY20EU | RY20S6 | | |
| Output type | | Triac output | | 0 | |
| Number of out | tput points | 16 | | 0 | |
| Isolation meth | iod | Photocoupler | | 0 | |
| Rated load vo | Itage, frequency | 100 to 240VAC, 40/70Hz | 100 to 240VAC (+10%/-15%) 50/60Hz (±3Hz) | 0 | |
| Maximum load | d voltage | 264VAC | | 0 | |
| Maximum load | d current | 0.6A/point, 1.9A/common | 0.6A/point, 4.8A/common | Δ | The total common current is decreased after replacement.*1 |
| Minimum load | voltage/current | 15mA at 24VAC, 15mA at 100VAC, 15mA at 240VAC | 100mA at 24VAC, 25mA at 100VAC, 25mA at 240VAC | Δ | The minimum load current is increased after replacement.*1 |
| Maximum inru | ish current | 30A 10ms or less, 15A 100ms or less | 20A/cycle or lower | Δ | The maximum inrush current is decreased after replacement.*1 |
| Leakage curre | ent at OFF | 1.5mA or lower (240VAC, 60Hz) | 1.5mA or lower (at 120V, 60Hz), 3mA or lower (at 240V, 60Hz) | Δ | The leakage current at OFF is increased after replacement.*1 |
| Maximum volt | age drop at ON | 1.5VAC or lower (15mA to 0.6A) | 1.5V or lower | 0 | |
| Response | OFF to ON | 1ms or less | Total of 1ms and 0.5 cycles or less | 0 | |
| time | ON to OFF | Total of 1ms and 0.5 cycles or less | Total of 1ms and 0.5 cycles or less (rated load, resistive load) | 0 | |
| Surge suppres | ssor | CR absorber (0.1μF+47Ω) | CR absorber | 0 | |
| Fuse | | 3.2A fuse (1 fuse/common) GP-32 | None | × | No fuse is built in this model. |
| Fuse blown in | dication | Available (An LED turns on when a fuse is blown. A signal is output to a CPU module.) | None | × | |
| Withstand volt | tage | 2830VAC rms/3 cycles (Altitude 2000m) | 2300VAC rms for 1 minute | 0 | |
| Isolation resist | tance | 10M Ω or more by insulation resistanc | e tester | 0 | |
| Noise immunit | ty | IEC 801-4: 1kV | By noise simulator of 1500Vp-p noise voltage, 1μs noise width and 25 to 60Hz noise frequency | 0 | |
| Common term arrangement | ninal | 4 points/common (common terminal: TB8, TB18, TB28, TB38) | 16 points/common (common terminal: TB17) | Δ | As the common changes from four commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indi | ication | ON indication (LED) | | 0 | |
| External interf | ace | 38-point terminal block (M3.5 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire | e size | 0.75 to 2mm ² (15 to 19 AWG) | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | replacement. |
| Applicable solderless terminal | | R1.25-3.5, R2-3.5 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | |
| Number of occupied I/O points | | 16 points (I/O assignment: Output 16 | points) | 0 | |
| Internal currer (5VDC) | nt consumption | 400mA (TYP. all points ON) | 280mA (TYP. all points ON) | _ | |
| External dime | nsions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.65kg | 0.22kg | _ | |

^{*1} Check the specifications of loads connected to the RY20S6.

AY22 and RY20S6

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|------------------|---|---|---------------|---|
| | | AY22 | RY20S6 | 1 | |
| Output type | | Triac output | | 0 | |
| Number of out | put points | 16 | | 0 | |
| Isolation metho | • | Photocoupler | | 0 | |
| | tage, frequency | 100 to 240VAC, 50/60Hz±5% | 100 to 240VAC (+10%/-15%) 50/60Hz (±3Hz) | 0 | |
| Maximum load | voltage | 264VAC | () | 0 | |
| Maximum load | current | 2A/point, 3.3A/common | 0.6A/point, 4.8A/common | Δ | The maximum load current is decreased after replacement.*1 |
| Minimum load | voltage/current | 100mA at 24VAC, 10mA at 100VAC, 20mA at 240VAC | 100mA at 24VAC, 25mA at 100VAC, 25mA at 240VAC | Δ | The minimum load current is increased after replacement.*1 |
| Maximum inrus | sh current | 40A 10ms or less, 15A 100ms or less | 20A/cycle or lower | Δ | The maximum inrush current is decreased after replacement.*1 |
| Leakage curre | nt at OFF | 1.5mA or lower (120VAC, 60Hz), 3mA or lower (240VAC, 60Hz) | 1.5mA or lower (at 120V, 60Hz), 3mA or lower (at 240V, 60Hz) | 0 | |
| Maximum volta | age drop at ON | 1.5VAC or lower (1 to 2A) 1.8VAC or lower (0.2 to 1A) 5VAC or lower (0.2A or lower) | 1.5V or lower | 0 | |
| Response | OFF to ON | 1ms or less | Total of 1ms and 0.5 cycles or less | 0 | |
| time | ON to OFF | Total of 1ms and 0.5 cycles or less | Total of 1ms and 0.5 cycles or less (rated load, resistive load) | 0 | |
| Surge suppres | sor | CR absorber $(0.022\mu\text{F}+47\Omega)$ Varistor (387 to 473V) | CR absorber | Δ | No varistor is built in this model. |
| Fuse | | 7A fast blow fuse (1 fuse/common) HP-70K | None | × | No fuse is built in this model. |
| Fuse blown ind | dication | Available (An LED turns on when a fuse is blown. A signal is output to a CPU module.) | None | × | |
| Common term arrangement | inal | 8 points/common (common terminal: TB9, TB18) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | cation | ON indication (LED) | | 0 | |
| External interfa | ace | 20-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire | e size | 0.75 to 2mm | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | conversion adapter (ERNT-1AR10XY), the existing external wiring and terminal blocks in the existing system can be used.*2 |
| Number of occ | upied I/O points | 16 points (I/O assignment: Output 16 | points) | 0 | |
| Internal curren (5VDC) | t consumption | 305mA (TYP. all points ON) | 280mA (TYP. all points ON) | _ | |
| External dimer | nsions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | | |
| Weight | | 0.71kg | 0.22kg | _ | |

^{*1} Check the specifications of loads connected to the RY20S6.

^{*2} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY23 and RY20S6

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|------------------|---|---|---------------|---|
| | | AY23 | RY20S6 | | |
| Output type | | Triac output | | 0 | |
| Number of out | put points | 32 | 16 | Δ | When 17 or more points are required, use two modules of the RY20S6. |
| Isolation metho | od | Photocoupler | | 0 | |
| Rated load vol | tage, frequency | 100 to 240VAC, 40 to 70Hz | 100 to 240VAC (+10%/-15%) 50/60Hz (±3Hz) | 0 | |
| Maximum load | voltage | 264VAC | | 0 | |
| Maximum load | current | 0.6A/point, 2.4A/common (when next to the power supply module is located: 1.05A/common) | 0.6A/point, 4.8A/common | 0 | |
| Minimum load | voltage/current | 100mA at 24VAC, 10mA at 100VAC, 10mA at 240VAC | 100mA at 24VAC, 25mA at 100VAC, 25mA at 240VAC | Δ | The minimum load current is increased after replacement.*1 |
| Maximum inrus | sh current | 20A 10ms or less, 8A 100ms or less | 20A/cycle or lower | 0 | |
| Leakage curre | nt at OFF | 1.5mA or lower (120VAC, 60Hz), 3mA or lower (240VAC, 60Hz) | 1.5mA or lower (at 120V, 60Hz), 3mA or lower (at 240V, 60Hz) | 0 | |
| Maximum volta | age drop at ON | 1.5VAC or lower (100 to 600mA) 1.8VAC or lower (50 to 100mA) 2VAC or lower (10 to 50mA) | 1.5V or lower | 0 | |
| Response | OFF to ON | 1ms or less | Total of 1ms and 0.5 cycles or less | 0 | |
| time | ON to OFF | Total of 1ms and 0.5 cycles or less | Total of 1ms and 0.5 cycles or less (rated load, resistive load) | 0 | |
| Surge suppres | sor | CR absorber (0.022μF+47Ω) | CR absorber | 0 | |
| Fuse | | 3.2A fast blow fuse (1 fuse/common) HP-32 | None | × | No fuse is built in this model. |
| Fuse blown inc | dication | Available (An LED turns on when a fuse is blown. A signal is output to a CPU module.) | None | × | |
| Common termi arrangement | inal | 8 points/common (common terminal: TB9, TB18, TB27, TB36) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | cation | ON indication (LED) | | 0 | |
| External interfa | ace | 38-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire | e size | 0.75 to 2mm | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | conversion adapter (ERNT-1AR11X13Y), the existing external wiring and terminal blocks in the existing system can be used.*2 |
| Number of occ | upied I/O points | 32 points (I/O assignment: Output 32 points) | 16 points (I/O assignment: Output 16 points) | Δ | |
| Internal curren (5VDC) | t consumption | 590mA (TYP. all points ON) | 280mA (TYP. all points ON) | _ | |
| External dimer | nsions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.55kg | 0.22kg | _ | |

^{*1} Check the specifications of loads connected to the RY20S6.

^{*2} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY40 and RY40NT5P

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|----------------|--|--|---------------|---|
| | | AY40 | RY40NT5P | | |
| Output type | | Transistor output (sink type) | | 0 | |
| Number of out | put points | 16 | | 0 | |
| Isolation metho | od | Photocoupler | | 0 | |
| Rated load vol | tage | 12/24VDC (10.2 to 40VDC) | 12/24VDC (+20%/-15%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| Maximum load | current | 0.1A/point, 0.8A/common | 0.5A/point, 5A/common | 0 | |
| Maximum inrus | sh current | 0.4A | Current is to be limited by the overload protection function. | Δ | The inrush current value is changed after replacement.*1 |
| Leakage curre | nt at OFF | 0.1mA or lower | | 0 | |
| Maximum volta | age drop at ON | 0.1A at 2.5VDC, 5mA at 1.75VDC, 1mA at 1.7VDC | 0.5A at 0.2VDC (TYP.), 0.5A at 0.3VDC (MAX.) | 0 | |
| Response | OFF to ON | 2ms or less | 0.5ms or less | 0 | |
| time | ON to OFF | 2ms or less (resistive load) | 1ms or less (rated load, resistive load) | 0 | |
| Surge suppres | sor | Clamp diode | Zener diode | 0 | |
| External power supply | Voltage | 12/24VDC (10.2 to 40VDC) | 12/24VDC (+20/-15%) (ripple ratio within 5%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| | Current | 8mA (TYP. 24VDC/common) | 4mA (at 24VDC) | 0 | |
| Common termi arrangement | inal | 8 points/common (common terminal: TB10, TB20) | 16 points/common (common terminal: TB18) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | cation | ON indication (LED) | | 0 | |
| Protection fund | ction | None | Overheat protection function (in increments of 1 point), overload protection function (in increments of 1 point) | 0 | |
| External interfa | ace | 20-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire | e size | 0.75 to 2mm | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | conversion adapter (ERNT-1AR40Y), the existing external wiring and terminal blocks in the existing system can be used.*2 |
| Number of occupied I/O points | | 16 points (I/O assignment: Output 16 | points) | 0 | |
| Internal curren (5VDC) | t consumption | 115mA (TYP. all points ON) | 140mA (TYP. all points ON) | _ | |
| External dimer | nsions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.36kg | 0.16kg | _ | |

^{*1} Check the specifications of loads connected to the RY40NT5P.

^{*2} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY40-UL and RY40NT5P

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|------------------|---|--|---------------|--|
| | | AY40-UL | RY40NT5P | | |
| Output type | | Transistor output (sink type) | | 0 | |
| Number of outp | out points | 16 | | 0 | |
| Isolation metho | od | Photocoupler | | 0 | |
| Rated load volt | age | 12/24VDC (10.2 to 40VDC) | 12/24VDC (+20%/-15%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| Maximum load | current | 0.1A/point, 0.8A/common | 0.5A/point, 5A/common | 0 | |
| Maximum inrus | sh current | 0.4A | Current is to be limited by the overload protection function. | Δ | The inrush current value is changed after replacement.*1 |
| Leakage curre | nt at OFF | 0.1mA or lower | • | 0 | |
| Maximum volta | age drop at ON | 0.1A at 2.5VDC, 5mA at 1.75VDC, 1mA at 1.7VDC | 0.5A at 0.2VDC (TYP.), 0.5A at 0.3VDC (MAX.) | 0 | |
| Response | OFF to ON | 2ms or less | 0.5ms or less | 0 | |
| time | ON to OFF | 2ms or less (resistive load) | 1ms or less (rated load, resistive load) | 0 | |
| Surge suppres | sor | Clamp diode | Zener diode | 0 | |
| External power supply | Voltage | 12/24VDC (10.2 to 40VDC) | 12/24VDC (+20/-15%) (ripple ratio within 5%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| | Current | 8mA (TYP. 24VDC/common) | 4mA (at 24VDC) | 0 | |
| Withstand voltage | | Between DC external connecting terminals and general grounding 500VAC rms for 1 minute | 510VAC rms for 1 minute | 0 | |
| Isolation resista | ance | $5M\Omega$ or more by insulation resistance tester | 10M Ω or more by insulation resistance tester | 0 | |
| Noise immunity | / | By noise simulator of 500Vp-p noise voltage, 1μs noise width and 25 to 60Hz noise frequency | | 0 | |
| Common termi arrangement | nal | 8 points/common (common terminal: TB10, TB20) | 16 points/common (common terminal: TB18) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | cation | ON indication (LED) | | 0 | |
| Protection func | tion | None | Overheat protection function (in increments of 1 point), overload protection function (in increments of 1 point) | 0 | |
| External interfa | ice | 20-point terminal block (M3.5 × 7 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire | e size | 0.75 to 2mm² (14 to 18 AWG) | 0.3 to 0.75mm ² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool |
| Applicable solderless terminal | | RAV1.25-3.5, RAV2-3.5 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | conversion adapter (ERNT-1AR40Y), the existing external wiring and terminal blocks in the existing system can be used.*2 |
| Number of occ | upied I/O points | 16 points (I/O assignment: Output 16 | points) | 0 | |
| Internal current (5VDC) | t consumption | 115mA (TYP. all points ON) | 140mA (TYP. all points ON) | _ | |
| External dimen | sions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.36kg | 0.16kg | _ | |

^{*1} Check the specifications of loads connected to the RY40NT5P.

^{*2} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY40P and RY40NT5P

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|----------------|---|--|---------------|--|
| | | AY40P | RY40NT5P | 1 | |
| Output type | | Transistor output (sink type) | | 0 | |
| Number of out | out points | 16 | | 0 | |
| Isolation metho | od | Photocoupler | | 0 | |
| Rated load vol | tage | 12/24VDC (+10%/-15%) | 12/24VDC (+20%/-15%) | 0 | |
| Maximum load | current | 0.1A/point, 0.8A/common | 0.5A/point, 5A/common | 0 | |
| Maximum inrus | sh current | 0.38A, 5ms or less | Current is to be limited by the overload protection function. | Δ | The inrush current value is changed after replacement.*1 |
| Leakage curre | nt at OFF | 0.1mA or lower | | 0 | |
| Maximum volta | age drop at ON | 0.1A at 2.5VDC, 5mA at 1.75VDC, 1mA at 1.7VDC | 0.5A at 0.2VDC (TYP.), 0.5A at 0.3VDC (MAX.) | 0 | |
| Response | OFF to ON | 2ms or less | 0.5ms or less | 0 | |
| time | ON to OFF | 2ms or less (resistive load) | 1ms or less (rated load, resistive load) | 0 | |
| Surge suppres | sor | Clamp diode | Zener diode | 0 | |
| External power supply | Voltage | 12/24VDC (+10%/-15%) | 12/24VDC (+20/-15%) (ripple ratio within 5%) | 0 | |
| | Current | 15mA (TYP. 24VDC/common) | 4mA (at 24VDC) | 0 | |
| Common termi arrangement | nal | 8 points/common (common terminal: TB10, TB20) | 16 points/common (common terminal: TB18) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | cation | ON indication (LED) | | 0 | |
| Protection fund | tion | Overheat protection function (in increments of 1 common), short circuit protection function | Overheat protection function (in increments of 1 point), overload protection function (in increments of 1 point) | 0 | |
| External interfa | ice | 20-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire | size | 0.75 to 2mm | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | conversion adapter (ERNT-1AR40Y), the existing external wiring and terminal blocks in the existing system can be used.*2 |
| Number of occupied I/O points | | 16 points (I/O assignment: Output 16 | points) | 0 | |
| Internal current (5VDC) | t consumption | 115mA (TYP. all points ON) | 140mA (TYP. all points ON) | _ | |
| External dimen | sions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.36kg | 0.16kg | _ | |

^{*1} Check the specifications of loads connected to the RY40NT5P.

^{*2} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY40A and RY18R2A

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|-----------------|---|---|---------------|---|
| | | AY40A | RY18R2A | | |
| Output type | | Transistor output (all points independent, sink type) | Contact output | × | The output type is changed after replacement.*1 |
| Number of out | put points | 16 | 8 | Δ | When 9 or more points are required, use two modules of the RY18R2A. |
| Isolation metho | bd | Photocoupler | Relay | Δ | Each isolation method has the same isolation performance although the method is changed after replacement. |
| Rated load vol | tage | 12/24VDC (10.2 to 30VDC) | 24VDC/240VAC (MAX. 125VDC/264VAC) | 0 | |
| Maximum load | current | 0.3A/point | 2A/point, 8A/module | 0 | |
| Maximum inrus | sh current | 1A, 100ms or less | _ | _ | |
| Leakage curre | nt at OFF | 0.1mA or lower | _ | _ | |
| Maximum volta | age drop at ON | 1.5VDC (50mA to 0.3A) 1.0VDC (50mA or lower) | _ | _ | |
| Response | OFF to ON | 2ms or less | 10ms or less | Δ | The response time is |
| time | ON to OFF | 2ms or less (resistive load) | 12ms or less | Δ | changed after replacement.*1 |
| Life | | Unlimited electrical life | Refer to the life table.*2 | × | The electrical/mechanical |
| Maximum swite | ching frequency | Unlimited mechanical life | 3600 times/hour | | life is limited because contact output is used. |
| Surge suppres | sor | Surge absorbing diode | None | × | The surge suppressor is not built in this model. |
| Common termi | nal | No common (all points independent) | | 0 | |
| Operation indic | cation | ON indication (LED) | | 0 | |
| External interfa | ace | 38-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire | e size | 0.75 to 2mm | 0.3 to 0.75mm (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | conversion adapter (ERNT-1AR10AY), the existing external wiring and terminal blocks in the existing system can be used.*3 |
| Number of occupied I/O points | | 16 points (I/O assignment: Output 16 points) | 16 points (I/O assignment: Output 16 points) | Δ | The number of output points is 8, but 16 points are occupied. |
| Internal curren (5VDC) | t consumption | 190mA (TYP. all points ON) | 260mA (TYP. all points ON) | _ | |
| External dimer | sions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.42kg | 0.19kg | _ | |
| | | | | | |

- *1 Check the specifications of loads connected to the RY18R2A.
- *2 The following tables show the life data.

RY18R2A

| Mechanical | 20 million times or more |
|------------|--|
| Electrical | Rated switching voltage/current load: 100 thousand times or more |
| | 1.5A at 200VAC, 1A at 240VAC (COS ϕ = 0.7) 100 thousand times or more 0.4A at 200VAC, 0.3A at 240VAC (COS ϕ = 0.7) 300 thousand times or more |
| | 1A at 200VAC, 0.5A at 240VAC (COS ϕ = 0.35) 100 thousand times or more 0.3A at 200VAC, 0.15A at 240VAC (COS ϕ = 0.35) 300 thousand times or more |
| | 1A at 24VDC, 0.1A at 100VDC (L/R = 7ms) 100 thousand times or more 0.3A at 24VDC, 0.03A at 100VDC (L/R = 7ms) 300 thousand times or more |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY41 and RY41NT2P

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|----------------|--|--|---------------|--|
| | | AY41 | RY41NT2P | _ | |
| Output type | | Transistor output (sink type) | | 0 | |
| Number of out | put points | 32 | | 0 | |
| Isolation metho | od | Photocoupler | | 0 | |
| Rated load vol | tage | 12/24VDC (10.2 to 40VDC) | 12/24VDC (+20%/-15%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| Maximum load | current | 0.1A/point, 1.6A/common | 0.2A/point, 2A/common | 0 | |
| Maximum inrus | sh current | 0.4A | Current is to be limited by the overload protection function. | Δ | The inrush current value is changed after replacement.*1 |
| Leakage curre | nt at OFF | 0.1mA or lower | | 0 | |
| Maximum volta | age drop at ON | 0.1A at 2.5VDC, 5mA at 1.75VDC, 1mA at 1.7VDC | 0.2A at 0.2VDC (TYP.), 0.2A at 0.3VDC (MAX.) | 0 | |
| Response | OFF to ON | 2ms or less | 0.5ms or less | 0 | |
| time | ON to OFF | 2ms or less (resistive load) | 1ms or less (rated load, resistive load) | 0 | |
| Surge suppres | sor | Clamp diode | Zener diode | 0 | |
| External power supply | Voltage | 12/24VDC (10.2 to 40VDC) | 12/24VDC (+20/-15%) (ripple ratio within 5%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| | Current | 20mA (TYP. 24VDC/common) | 16mA (at 24VDC) | 0 | |
| Common termi arrangement | nal | 16 points/common (common terminal: TB18, TB36) | 32 points/common (common terminal: A01, A02) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | cation | ON indication (LED) | | 0 | |
| Protection fund | ction | None | Overheat protection function (in increments of 1 point), overload protection function (in increments of 1 point) | 0 | |
| External interfa | ace | 38-point terminal block (M3 × 6 screws) | 40-pin connector (A6CON1/2/3/4) | × | Wiring needs to be changed after |
| Applicable wire | e size | 0.75 to 2mm | 0.088 to 0.3mm | × | replacement. |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | _ | - | By using the upgrade tool conversion adapter (ERNT-1AR41Y), the existing external wiring and terminal blocks in the existing system can be used.*2 |
| Number of occupied I/O points | | 32 points (I/O assignment: Output 32 | points) | 0 | |
| Internal curren (5VDC) | t consumption | 230mA (TYP. all points ON) | 180mA (TYP. all points ON) | _ | |
| External dimer | sions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×110(D)mm | _ | |
| Weight | | 0.44kg | 0.11kg | _ | |
| | | • | · · | | |

^{*1} Check the specifications of loads connected to the RY41NT2P.

^{*2} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY41P and RY41NT2P

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|-------------------|---|--|---------------|--|
| | | AY41P | RY41NT2P | 1 | |
| Output type | | Transistor output (sink type) | | 0 | |
| Number of out | put points | 32 | | 0 | |
| Isolation metho | od | Photocoupler | | 0 | |
| Rated load vol | tage | 12/24VDC (+10%/-15%) | 12/24VDC (+20%/-15%) | 0 | |
| Maximum load | l current | 0.1A/point, 1.0A/common | 0.2A/point, 2A/common | 0 | |
| Maximum inrus | sh current | 0.38A, 5ms or less | Current is to be limited by the overload protection function. | Δ | The inrush current value is changed after replacement.*1 |
| Leakage curre | nt at OFF | 0.1mA or lower | | 0 | |
| Maximum volta | age drop at ON | 0.1A at 2.5VDC, 5mA at 1.75VDC, 1mA at 1.7VDC | 0.2A at 0.2VDC (TYP.), 0.2A at 0.3VDC (MAX.) | 0 | |
| Response | OFF to ON | 2ms or less | 0.5ms or less | 0 | |
| time | ON to OFF | 2ms or less (resistive load) | 1ms or less (rated load, resistive load) | 0 | |
| Surge suppres | ssor | Clamp diode | Zener diode | 0 | |
| External power supply | Voltage | 12/24VDC (+10%/-15%) | 12/24VDC (+20/-15%) (ripple ratio within 5%) | 0 | |
| | Current | 30mA (TYP. 24VDC/common) | 16mA (at 24VDC) | 0 | |
| Common term arrangement | inal | 16 points/common (common terminal: TB18, TB36) | 32 points/common (common terminal: A01, A02) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | cation | ON indication (LED) | | 0 | |
| Protection fund | ction | Overheat protection function (in increments of 8 points), short circuit protection function | Overheat protection function (in increments of 1 point), overload protection function (in increments of 1 point) | 0 | |
| External interfa | ace | 38-point terminal block (M3 × 6 screws) | 40-pin connector (A6CON1/2/3/4) | × | Wiring needs to be changed after |
| Applicable wire | e size | 0.75 to 2mm² | 0.088 to 0.3mm² | × | replacement. |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | _ | _ | By using the upgrade tool conversion adapter (ERNT-1AR41Y), the existing external wiring and terminal blocks in the existing system can be used.*2 |
| Number of occ | cupied I/O points | 32 points (I/O assignment: Output 32 | points) | 0 | |
| Internal curren (5VDC) | t consumption | 230mA (TYP. all points ON) | 180mA (TYP. all points ON) | _ | |
| External dimer | nsions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×110(D)mm | _ | |
| Weight | | 0.44kg | 0.11kg | _ | |

^{*1} Check the specifications of loads connected to the RY41NT2P.

^{*2} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY41-UL and RY41NT2P

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|------------------|---|--|---------------|--|
| | | AY41-UL | RY41NT2P | | |
| Output type | | Transistor output (sink type) | | 0 | |
| Number of outp | out points | 32 | | 0 | |
| Isolation metho | od | Photocoupler | | 0 | |
| Rated load volt | tage | 12/24VDC (10.2 to 40VDC) | 12/24VDC (+20%/-15%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| Maximum load | current | 0.1A/point, 1.6A/common | 0.2A/point, 2A/common | 0 | |
| Maximum inrus | sh current | 0.4A | Current is to be limited by the overload protection function. | Δ | The inrush current value is changed after replacement.*1 |
| Leakage curre | nt at OFF | 0.1mA or lower | | 0 | |
| Maximum volta | age drop at ON | 0.1A at 2.5VDC, 5mA at 1.75VDC, 1mA at 1.7VDC | 0.2A at 0.2VDC (TYP.), 0.2A at 0.3VDC (MAX.) | 0 | |
| Response | OFF to ON | 2ms or less | 0.5ms or less | 0 | |
| time | ON to OFF | 2ms or less (resistive load) | 1ms or less (rated load, resistive load) | 0 | |
| Surge suppres | sor | Clamp diode | Zener diode | 0 | |
| External power supply | Voltage | 12/24VDC (10.2 to 40VDC) | 12/24VDC (+20/-15%) (ripple ratio within 5%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| | Current | 20mA (TYP. 24VDC/common) | 16mA (at 24VDC) | 0 | |
| Withstand voltage | | Between DC external connecting terminals and general grounding 500VAC rms for 1 minute | 510VAC rms for 1 minute | 0 | |
| Isolation resista | ance | 5MΩ or more by insulation resistance tester | $10 M\Omega$ or more by insulation resistance tester | 0 | |
| Noise immunity | / | By noise simulator of 500Vp-p noise voltage, 1μs noise width and 25 to 60Hz noise frequency | | 0 | |
| Common termi arrangement | nal | 16 points/common (common terminal: TB18, TB36) | 32 points/common (common terminal: A01, A02) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | cation | ON indication (LED) | | 0 | |
| Protection fund | tion | None | Overheat protection function (in increments of 1 point), overload protection function (in increments of 1 point) | 0 | |
| External interfa | ace | 38-point terminal block (M3.5 \times 7 screws) | 40-pin connector (A6CON1/2/3/4) | × | Wiring needs to be changed after |
| Applicable wire | size | 0.75 to 2mm² (14 to 18 AWG) | 0.088 to 0.3mm | × | replacement. By using the upgrade tool |
| Applicable solderless terminal | | RAV1.25-3.5, RAV2-3.5 | _ | _ | conversion adapter (ERNT-1AR41Y), the existing external wiring and terminal blocks in the existing system can be used.*2 |
| Number of occ | upied I/O points | 32 points (I/O assignment: Output 32 | ? points) | 0 | |
| Internal current (5VDC) | t consumption | 230mA (TYP. all points ON) | 180mA (TYP. all points ON) | _ | |
| External dimen | sions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×110(D)mm | _ | |
| Weight | | 0.44kg | 0.11kg | | |

^{*1} Check the specifications of loads connected to the RY41NT2P.

^{*2} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY42 and RY42NT2P

| Item | | Specifications | | Compatibility | Precautions |
|---------------------------|------------------|--|--|---------------|---|
| | | AY42 | RY42NT2P | 1 | |
| Output type | | Transistor output (sink type) | | 0 | |
| Number of out | put points | 64 | | 0 | |
| Isolation method | bc | Photocoupler | | 0 | |
| Rated load vol | tage | 12/24VDC (10.2 to 40VDC) | 12/24VDC (+20%/-15%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| Maximum load | current | 0.1A/point, 2A/common (when next to the power supply module is located: 1.6A/common) | 0.2A/point, 2A/common | 0 | |
| Maximum inru | sh current | 0.4A | Current is to be limited by the overload protection function. | Δ | The inrush current value is changed after replacement.*1 |
| Leakage curre | nt at OFF | 0.1mA or lower | | 0 | |
| Maximum volta | age drop at ON | 0.1A at 2.5VDC, 5mA at 1.75VDC, 1mA at 1.7VDC | 0.2A at 0.2VDC (TYP.), 0.2A at 0.3VDC (MAX.) | 0 | |
| Response | OFF to ON | 2ms or less | 0.5ms or less | 0 | |
| time | ON to OFF | 2ms or less (resistive load) | 1ms or less (rated load, resistive load) | 0 | |
| Surge suppres | sor | Clamp diode | Zener diode | 0 | |
| External power supply | Voltage | 12/24VDC (10.2 to 40VDC) | 12/24VDC (+20/-15%) (ripple ratio within 5%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| | Current | 40mA (TYP. 24VDC/common) | 16mA (at 24VDC)/common | 0 | |
| Common term arrangement | inal | 32 points/common (common terminal: 1A1, 1A2, 2A1, 2A2) | 32 points/common (common terminal: 1A01, 1A02, 2A01, 2A02) | 0 | |
| Operation indi | cation | ON indication (LED), 32 point switch- | over using switch | 0 | |
| Protection function | | None | Overheat protection function (in increments of 1 point), overload protection function (in increments of 1 point) | 0 | |
| External interfa | ace | 40-pin connector × 2 (A6CON1/2/3/4 | | 0 | Existing external wiring |
| Applicable wire | e size | 0.088 to 0.3mm² | | 0 | can be used. |
| Number of occ | upied I/O points | 64 points (I/O assignment: Output 64 | points) | 0 | |
| Internal curren (5VDC) | t consumption | 340mA (TYP. all points ON) | 250mA (TYP. all points ON) | _ | |
| External dimer | nsions | 250(H)×37.5(W)×106(D)mm | 106(H)×27.8(W)×110(D)mm | | |
| Weight | | 0.50kg | 0.13kg | _ | |

^{*1} Check the specifications of loads connected to the RY42NT2P.

AY42-S1 and RY42NT2P

| Item | | Specifications | | Compatibility | Precautions |
|-------------------------------|---------------|--|--|---------------|---|
| | | AY42-S1 | RY42NT2P | | |
| Output type | | Transistor output (sink type) | | 0 | |
| Number of out | put points | 64 | | 0 | |
| Isolation metho | od | Photocoupler | | 0 | |
| Rated load vol | tage | 12/24VDC (10.2 to 40VDC) | 12/24VDC (+20%/-15%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| Maximum load | current | 0.1A/point, 2A/common (when next to the power supply module is located: 1.6A/common) | 0.2A/point, 2A/common | 0 | |
| Maximum inru | sh current | 0.4A | Current is to be limited by the overload protection function. | Δ | The inrush current value is changed after replacement.*1 |
| Leakage curre | nt at OFF | 0.1mA or lower | | 0 | |
| Maximum voltage drop at ON | | 0.1A at 2.5VDC, 5mA at 1.75VDC, 1mA at 1.7VDC | 0.2A at 0.2VDC (TYP.), 0.2A at 0.3VDC (MAX.) | 0 | |
| Response | OFF to ON | 0.1ms or less | 0.5ms or less | Δ | The response time is |
| time | ON to OFF | 0.3ms or less (resistive load) | 1ms or less (rated load, resistive load) | Δ | changed after replacement. ^{*1} |
| Surge suppres | sor | Clamp diode | Zener diode | 0 | |
| External power supply | Voltage | 12/24VDC (10.2 to 40VDC) | 12/24VDC (+20/-15%) (ripple ratio within 5%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| | Current | 40mA (TYP. 24VDC/common) | 16mA (at 24VDC)/common | 0 | |
| Common term | nal | 32 points/common (common terminal: 1A1, 1A2, 2A1, 2A2) | 32 points/common (common terminal: 1A01, 1A02, 2A01, 2A02) | 0 | |
| Operation indic | cation | ON indication (LED), 32 point switch- | -over using switch | 0 | |
| Protection function | | None | Overheat protection function (in increments of 1 point), overload protection function (in increments of 1 point) | 0 | |
| External interfa | ace | 40-pin connector × 2 (A6CON1/2/3/4 | .) | 0 | Existing external wiring |
| Applicable wire | e size | 0.088 to 0.3mm | | 0 | can be used. |
| Number of occupied I/O points | | 64 points (I/O assignment: Output 64 | points) | 0 | |
| Internal curren (5VDC) | t consumption | 290mA (TYP. all points ON) | 250mA (TYP. all points ON) | _ | |
| External dimer | sions | 250(H)×37.5(W)×106(D)mm | 106(H)×27.8(W)×110(D)mm | _ | |
| Weight | | 0.50kg | 0.13kg | _ | |

^{*1} Check the specifications of loads connected to the RY42NT2P.

AY42-S3 and RY42NT2P

| Item | | Specifications | | Compatibility | Precautions |
|----------------------------|------------------|--|--|---------------|---|
| | | AY42-S3 | RY42NT2P | | |
| Output type | | Transistor output (sink type) | | 0 | |
| Number of out | out points | 64 | | 0 | |
| Isolation metho | od | Photocoupler | | 0 | |
| Rated load vol | tage | 12/24VDC (10.2 to 40VDC) | 12/24VDC (+20%/-15%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| Maximum load | current | 0.1A/point, 2A/common (when next to the power supply module is located: 1.6A/common) | 0.2A/point, 2A/common | 0 | |
| Maximum inrus | sh current | 0.4A/point, 3.5A/fuse | Current is to be limited by the overload protection function. | Δ | The inrush current value is changed after replacement.*1 |
| Leakage curre | nt at OFF | 0.1mA or lower | | 0 | |
| Maximum volta | age drop at ON | 0.1A at 2.5VDC, 5mA at 1.75VDC, 1mA at 1.7VDC | 0.2A at 0.2VDC (TYP.), 0.2A at 0.3VDC (MAX.) | 0 | |
| Response | OFF to ON | 2ms or less | 0.5ms or less | 0 | |
| time | ON to OFF | 2ms or less (resistive load) | 1ms or less (rated load, resistive load) | 0 | |
| Surge suppres | sor | Clamp diode | Zener diode | 0 | |
| Fuse | | 1.6A normal blow fuse (2 fuses/ common) | None | × | No fuse is built in this model. |
| Fuse blown inc | lication | Available (An LED turns on when a fuse is blown. A signal is output to a CPU module.) | None | × | |
| External power supply | Voltage | 12/24VDC (10.2 to 40VDC) | 12/24VDC (+20/-15%) (ripple ratio within 5%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| | Current | 40mA (TYP. 24VDC/common) | 16mA (at 24VDC)/common | 0 | |
| Common termi arrangement | nal | 32 points/common (common terminal: 1A1, 1A2, 2A1, 2A2) | 32 points/common (common terminal: 1A01, 1A02, 2A01, 2A02) | 0 | |
| Operation indic | ation | ON indication (LED), 32 point switch | over using switch | 0 | |
| Protection function | | None | Overheat protection function (in increments of 1 point), overload protection function (in increments of 1 point) | 0 | |
| External interfa | ice | 40-pin connector × 2 (A6CON1/2/3/4 |) | 0 | Existing external wiring |
| Applicable wire size | | 0.088 to 0.3mm² | | 0 | can be used. |
| Number of occ | upied I/O points | 64 points (I/O assignment: Output 64 | points) | 0 | |
| Internal current (5VDC) | t consumption | 290mA (TYP. all points ON) | 250mA (TYP. all points ON) | _ | |
| External dimen | sions | 250(H)×37.5(W)×106(D)mm | 106(H)×27.8(W)×110(D)mm | _ | |
| Weight | | 0.50kg | 0.13kg | _ | |

^{*1} Check the specifications of loads connected to the RY42NT2P.

AY42-S4 and RY42NT2P

| Item | | Specifications | | Compatibility | Precautions |
|-------------------------------|----------------|--|--|---------------|---|
| | | AY42-S4 | RY42NT2P | | |
| Output type | | Transistor output (sink type) | | 0 | |
| Number of out | out points | 64 | | 0 | |
| Isolation metho | od | Photocoupler | | 0 | |
| Rated load voli | tage | 12/24VDC (10.2 to 30VDC) | 12/24VDC (+20%/-15%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| Maximum load | current | 0.1A/point, 1.92A/common | 0.2A/point, 2A/common | 0 | |
| Maximum inrus | sh current | 0.4A, 10ms or less | Current is to be limited by the overload protection function. | Δ | The inrush current value is changed after replacement.*1 |
| Leakage curre | nt at OFF | 0.1mA or lower | | 0 | |
| Maximum volta | age drop at ON | 0.1A at 1.0VDC, 0.1A at 2.5VDC | 0.2A at 0.2VDC (TYP.), 0.2A at 0.3VDC (MAX.) | 0 | |
| Response | OFF to ON | 2ms or less | 0.5ms or less | 0 | |
| time | ON to OFF | 2ms or less (resistive load) | 1ms or less (rated load, resistive load) | 0 | |
| Surge suppres | sor | Zener diode build-in photocoupler | Zener diode | 0 | |
| External power supply | Voltage | _ | 12/24VDC (+20/-15%) (ripple ratio within 5%) | × | An external power supply is required. |
| | Current | _ | 16mA (at 24VDC)/common | × | |
| Common termi arrangement | nal | 32 points/common (common terminal: 1A1, 1A2, 2A1, 2A2) | 32 points/common (common terminal: 1A01, 1A02, 2A01, 2A02) | 0 | |
| Operation indic | cation | ON indication (LED), 32 point switch- | over using switch | 0 | |
| Protection function | | None | Overheat protection function (in increments of 1 point), overload protection function (in increments of 1 point) | 0 | |
| External interfa | ice | 40-pin connector × 2 (A6CON1/2/3/4) |) | Δ | The wiring for external |
| Applicable wire size | | 0.088 to 0.3mm | | Δ | power supply needs to be changed after replacement. |
| Number of occupied I/O points | | 64 points (I/O assignment: Output 64 | points) | 0 | |
| Internal curren | t consumption | 500mA (TYP. 60% or less simultaneous ON) | 250mA (TYP. all points ON) | _ | |
| External dimen | sions | 250(H)×37.5(W)×106(D)mm | 106(H)×27.8(W)×110(D)mm | _ | |
| Weight | | 0.44kg | 0.13kg | _ | |

^{*1} Check the specifications of loads connected to the RY42NT2P.

AY50 and RY40NT5P

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|----------------|---|--|---------------|--|
| | | AY50 RY40NT5P | | | |
| Output type | | Transistor output (sink type) | | 0 | |
| Number of out | put points | 16 | | 0 | |
| Isolation metho | od | Photocoupler | | 0 | |
| Rated load vol | tage | 12/24VDC (10.2 to 30VDC) | 12/24VDC (+20%/-15%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| Maximum load | current | 0.5A/point, 2A/common | 0.5A/point, 5A/common | 0 | |
| Maximum inrus | sh current | 7A 10ms or less, 3.5A 100ms or less | Current is to be limited by the overload protection function. | Δ | The inrush current value is changed after replacement.*1 |
| Leakage curre | nt at OFF | 0.1mA or lower | | 0 | |
| Maximum volta | age drop at ON | 0.5A at 0.9VDC (TYP.), 0.5A at 1.5VDC (MAX.) | 0.5A at 0.2VDC (TYP.), 0.5A at 0.3VDC (MAX.) | 0 | |
| Response | OFF to ON | 2ms or less | 0.5ms or less | 0 | |
| time | ON to OFF | 2ms or less (resistive load) | 1ms or less (rated load, resistive load) | 0 | |
| Surge suppres | sor | Varistor (52 to 62V) | Zener diode | 0 | |
| Fuse | | 2A fast blow fuse (1 fuse/common) | None | × | No fuse is built in this |
| Fuse blown indication | | Available (An LED turns on when a fuse is blown. A signal is output to a CPU module.) | None | × | model. |
| External power supply | Voltage | 12/24VDC (10.2 to 30VDC) | 12/24VDC (+20/-15%) (ripple ratio within 5%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| | Current | 65mA (TYP. 24VDC/common) | 4mA (at 24VDC) | 0 | |
| Common termi arrangement | inal | 8 points/common (common terminal: TB10, TB20) | 16 points/common (common terminal: TB18) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | cation | ON indication (LED) | | 0 | |
| Protection fund | ction | None | Overheat protection function (in increments of 1 point), overload protection function (in increments of 1 point) | 0 | |
| External interfa | ace | 20-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire | e size | 0.75 to 2mm | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | conversion adapter (ERNT-1AR40Y), the existing external wiring and terminal blocks in the existing system can be used.*2 |
| Number of occupied I/O points | | 16 points (I/O assignment: Output 16 | points) | 0 | |
| Internal curren (5VDC) | t consumption | 115mA (TYP. all points ON) | 140mA (TYP. all points ON) | _ | |
| External dimer | nsions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.42kg | 0.16kg | _ | |

^{*1} Check the specifications of loads connected to the RY40NT5P.

^{*2} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY50-UL and RY40NT5P

O: Compatible, △: Partly changed, ×: Incompatible, —: Not applicable

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|------------------|---|--|---------------|--|
| | | AY50-UL | RY40NT5P | 1 | |
| Output type | | Transistor output (sink type) | | 0 | |
| Number of out | out points | 16 | | 0 | |
| Isolation metho | • | Photocoupler | | 0 | |
| Rated load vol | | 12/24VDC (10.2 to 30VDC) | 12/24VDC (+20%/-15%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| Maximum load | current | 0.5A/point, 2A/common | 0.5A/point, 5A/common | 0 | |
| Maximum inrus | sh current | 7A 10ms or less, 3.5A 100ms or less | Current is to be limited by the overload protection function. | Δ | The inrush current value is changed after replacement.*1 |
| Leakage curre | nt at OFF | 0.1mA or lower | | 0 | |
| Maximum volta | age drop at ON | 0.5A at 0.9VDC (TYP.), 0.5A at 1.5VDC (MAX.) | 0.5A at 0.2VDC (TYP.), 0.5A at 0.3VDC (MAX.) | 0 | |
| Response | OFF to ON | 2ms or less | 0.5ms or less | 0 | |
| time | ON to OFF | 2ms or less (resistive load) | 1ms or less (rated load, resistive load) | 0 | |
| Surge suppres | sor | Varistor (52 to 62V) | Zener diode | 0 | |
| Fuse | | 2A fast blow fuse (1 fuse/common) | None | × | No fuse is built in this |
| Fuse blown indication | | Available (An LED turns on when a fuse is blown. A signal is output to a CPU module.) | None | × | model. |
| External power supply | Voltage | 12/24VDC (10.2 to 30VDC) | 12/24VDC (+20/-15%) (ripple ratio within 5%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| | Current | 65mA (TYP. 24VDC/common) | 4mA (at 24VDC) | 0 | |
| Withstand volta | age | Between DC external connecting terminals and general grounding 500VAC rms for 1 minute | 510VAC rms for 1 minute | 0 | |
| Isolation resista | ance | 5MΩ or more by insulation resistance tester | 10MΩ or more by insulation resistance tester | 0 | |
| Noise immunity | у | By noise simulator of 500Vp-p noise voltage, 1µs noise width and 25 to 60Hz noise frequency | | 0 | |
| Common terminal arrangement | | 8 points/common (common terminal: TB10, TB20) | 16 points/common (common terminal: TB18) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | cation | ON indication (LED) | | 0 | |
| Protection function | | None | Overheat protection function (in increments of 1 point), overload protection function (in increments of 1 point) | 0 | |
| External interfa | ace | 20-point terminal block (M3.5 × 7 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire | size | 0.75 to 2mm ² (14 to 18 AWG) | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool |
| Applicable solderless terminal | | RAV1.25-3.5, RAV2-3.5 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | conversion adapter (ERNT-1AR40Y), the existing external wiring and terminal blocks in the existing system can be used. ¹² |
| Number of occ | upied I/O points | 16 points (I/O assignment: Output 16 | points) | 0 | |
| Internal current (5VDC) | t consumption | 115mA (TYP. all points ON) | 140mA (TYP. all points ON) | _ | |
| External dimen | sions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| | | I | I. | 1 | I |

| Item | Specifications | | Compatibility | Precautions |
|--------|----------------|----------|---------------|-------------|
| | AY50-UL | RY40NT5P | | |
| Weight | 0.42kg | 0.16kg | _ | |

^{*1} Check the specifications of loads connected to the RY40NT5P.

^{*2} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY51 and RY40NT5P

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|------------------|--|--|---------------|--|
| | | AY51 RY40NT5P | | | |
| Output type | | Transistor output (sink type) | | 0 | |
| Number of out | put points | 32 | 16 | Δ | When 17 or more points are required, use two modules of the RY40NT5P. |
| Isolation metho | od | Photocoupler | | 0 | |
| Rated load vol | tage | 12/24VDC (10.2 to 30VDC) | 12/24VDC (+20%/-15%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| Maximum load | current | 0.5A/point, 2A/common (when next to the power supply module is located: 3.3A/common) | 0.5A/point, 5A/common | 0 | |
| Maximum inrus | sh current | 4A, 10ms or less | Current is to be limited by the overload protection function. | Δ | The inrush current value is changed after replacement.*1 |
| Leakage curre | nt at OFF | 0.1mA or lower | | 0 | |
| Maximum volta | age drop at ON | 0.5A at 0.9VDC (TYP.), 0.5A at 1.5VDC (MAX.) | 0.5A at 0.2VDC (TYP.), 0.5A at 0.3VDC (MAX.) | 0 | |
| Response | OFF to ON | 2ms or less | 0.5ms or less | 0 | |
| time | ON to OFF | 2ms or less (resistive load) | 1ms or less (rated load, resistive load) | 0 | |
| Surge suppres | sor | Varistor (52 to 62V) | Zener diode | 0 | |
| External power supply | Voltage | 12/24VDC (10.2 to 30VDC) | 12/24VDC (+20/-15%) (ripple ratio within 5%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| | Current | 50mA (TYP. 24VDC/common) | 4mA (at 24VDC) | 0 | |
| Common termi | nal | 16 points/common (common terminal: TB18, TB36) | 16 points/common (common terminal: TB18) | 0 | |
| Operation indic | cation | ON indication (LED) | | 0 | |
| Protection fund | ction | None | Overheat protection function (in increments of 1 point), overload protection function (in increments of 1 point) | 0 | |
| External interfa | ace | 38-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire size | | 0.75 to 2mm | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | conversion adapter (ERNT-1AR51Y), the existing external wiring and terminal blocks in the existing system can be used.*2 |
| Number of occ | upied I/O points | 32 points (I/O assignment: Output 32 points) | 16 points (I/O assignment: Output 16 points) | Δ | |
| Internal curren (5VDC) | t consumption | 230mA (TYP. all points ON) | 140mA (TYP. all points ON) | _ | |
| External dimer | nsions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.53kg | 0.16kg | | |

^{*1} Check the specifications of loads connected to the RY40NT5P.

^{*2} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY51-S1 and RY40NT5P

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|------------------|---|--|---------------|---|
| | | AY51-S1 | RY40NT5P | | |
| Output type | | Transistor output (sink type) | | 0 | |
| Number of outp | out points | 32 | 16 | Δ | When 17 or more points are required, use two modules of the RY40NT5P. |
| Isolation metho | d | Photocoupler | | 0 | |
| Rated load volt | age | 12/24VDC (10.2 to 30VDC) | 12/24VDC (+20%/-15%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| Maximum load | current | 0.3A/point, 2A/common (1A/fuse common) | 0.5A/point, 5A/common | 0 | |
| Maximum inrus | h current | 3A, 10ms or less | Current is to be limited by the overload protection function. | Δ | The inrush current value is changed after replacement.*1 |
| Leakage currer | nt at OFF | 0.1mA or lower | | 0 | |
| Maximum volta | ge drop at ON | 0.3A at 1VDC (TYP.), 0.3A at 1.5VDC (MAX.) | 0.5A at 0.2VDC (TYP.), 0.5A at 0.3VDC (MAX.) | 0 | |
| Response | OFF to ON | 2ms or less | 0.5ms or less | 0 | |
| time | ON to OFF | 2ms or less (resistive load) | 1ms or less (rated load, resistive load) | 0 | |
| Surge suppress | sor | Transistor built-in zener diode | Zener diode | 0 | |
| Fuse | | 1A fast blow fuse (2 fuses/common) MP-10 | None | × | No fuse is built in this model. |
| Fuse blown ind | ication | Available (An LED turns on when a fuse is blown. A signal is output to a CPU module.) | None | × | |
| External power supply | Voltage | 12/24VDC (10.2 to 30VDC) | 12/24VDC (+20/-15%) (ripple ratio within 5%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| | Current | 100mA (TYP. 24VDC/common) | 4mA (at 24VDC) | 0 | |
| Common termi arrangement | nal | 16 points/common (common terminal: TB18, TB36), 8 points/fuse common | 16 points/common (common terminal: TB18) | 0 | |
| Operation indic | ation | ON indication (LED) | | 0 | |
| Protection func | tion | None | Overheat protection function (in increments of 1 point), overload protection function (in increments of 1 point) | 0 | |
| External interfa | ce | 38-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire size | | 0.75 to 2mm ² | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool conversion adapter |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | (ERNT-1AR51Y), the existing external wiring and terminal blocks in the existing system can be used.*2 |
| Number of occ | upied I/O points | 32 points (I/O assignment: Output 32 points) | 16 points (I/O assignment: Output 16 points) | Δ | |
| Internal current (5VDC) | consumption | 310mA (TYP. all points ON) | 140mA (TYP. all points ON) | | |
| External dimen | sions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| | | | † | 1 | i e |

- *1 Check the specifications of loads connected to the RY40NT5P.
- *2 For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY51-UL and RY40NT5P

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|------------------|---|--|---------------|--|
| | | AY51-UL | RY40NT5P | | |
| Output type | | Transistor output (sink type) | | 0 | |
| Number of outp | put points | 32 | 16 | Δ | When 17 or more points are required, use two modules of the RY40NT5P. |
| Isolation metho | od | Photocoupler | | 0 | |
| Rated load vol | tage | 12/24VDC (10.2 to 30VDC) | 12/24VDC (+20%/-15%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| Maximum load | current | 0.5A/point, 4A/common (when next to the power supply module is located: 3.3A/common) | 0.5A/point, 5A/common | 0 | |
| Maximum inrus | sh current | 4A, 10ms or less | Current is to be limited by the overload protection function. | Δ | The inrush current value is changed after replacement.*1 |
| Leakage curre | nt at OFF | 0.1mA or lower | | 0 | |
| Maximum volta | age drop at ON | 0.5A at 0.9VDC (TYP.), 0.5A at 1.5VDC (MAX.) | 0.5A at 0.2VDC (TYP.), 0.5A at 0.3VDC (MAX.) | 0 | |
| Response | OFF to ON | 2ms or less | 0.5ms or less | 0 | |
| time | ON to OFF | 2ms or less (resistive load) | 1ms or less (rated load, resistive load) | 0 | |
| Surge suppres | sor | Varistor (52 to 62V) | Zener diode | 0 | |
| External power supply | Voltage | 12/24VDC (10.2 to 30VDC) | 12/24VDC (+20/-15%) (ripple ratio within 5%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| | Current | 50mA (TYP. 24VDC/common) | 4mA (at 24VDC) | 0 | |
| Withstand volta | age | Between DC external connecting terminals and general grounding 500VAC rms for 1 minute | 510VAC rms for 1 minute | 0 | |
| Isolation resista | ance | 5MΩ or more by insulation resistance tester | 10MΩ or more by insulation resistance tester | 0 | |
| Noise immunity | У | By noise simulator of 500Vp-p noise voltage, 1μs noise width and 25 to 60Hz noise frequency | | 0 | |
| Common termi arrangement | nal | 16 points/common (common terminal: TB18, TB36) | 16 points/common (common terminal: TB18) | 0 | |
| Operation indic | cation | ON indication (LED) | | 0 | |
| Protection fund | ction | None | Overheat protection function (in increments of 1 point), overload protection function (in increments of 1 point) | 0 | |
| External interfa | ace | 38-point terminal block (M3.5 × 7 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire | e size | 0.75 to 2mm² (14 to 18 AWG) | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool |
| Applicable solderless terminal | | RAV1.25-3.5, RAV2-3.5 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | conversion adapter (ERNT-1AR51Y), the existing external wiring and terminal blocks in the existing system can be used.*2 |
| Number of occ | upied I/O points | 32 points (I/O assignment: Output 32 points) | 16 points (I/O assignment: Output 16 points) | Δ | |
| Internal current (5VDC) | t consumption | 230mA (TYP. all points ON) | 140mA (TYP. all points ON) | _ | |
| External dimen | nsions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.53kg | 0.16kg | _ | |

- *1 Check the specifications of loads connected to the RY40NT5P.
- *2 For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY60 and RY10R2

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|------------------|--|---|---------------|--|
| | | AY60 | RY10R2 | | |
| Output type | | Transistor output (sink type) | Contact output | × | The output type is changed after replacement.*1 |
| Number of outp | out points | 16 | | 0 | |
| Isolation metho | od | Photocoupler | Relay | Δ | Each isolation method has the same isolation performance although the method is changed after replacement. |
| Rated load volt | age | 12/24/48VDC (10.2 to 56VDC) | 24VDC/240VAC (MAX. 125VDC/264VAC) | 0 | |
| Maximum load | current | 2A/point, 5A/common (3A/fuse common) (when next to the power supply module is located: 3A/common) | 2A/point, 8A/common | 0 | |
| Maximum inrus | sh current | 4A 100ms or less, 8A 10ms or less | _ | _ | |
| Leakage curre | nt at OFF | 0.1mA or lower | _ | _ | |
| Maximum volta | ige drop at ON | 1.5VDC (2A) | _ | _ | |
| Response | OFF to ON | 2ms or less | 10ms or less | Δ | The response time is |
| time | ON to OFF | 2ms or less (resistive load) | 12ms or less | Δ | changed after replacement.*1 |
| Life | | Unlimited electrical life | Refer to the life table.*2 | × | The electrical/mechanical |
| Maximum switching frequency | | Unlimited mechanical life | 3600 times/hour | | life is limited because contact output is used. |
| Surge suppressor | | Varistor (108 to 132V) | None | × | The surge suppressor is not built in this model. |
| Fuse | | 3.2A fast blow fuse (2 fuses/ common) MP-10 | None | × | No fuse is built in this model. |
| Fuse blown inc | lication | Available (An LED turns on when a fuse is blown. A signal is output to a CPU module.) | None | × | |
| External | Voltage | 24VDC (+10%/-10%) | _ | 0 | No external power supply |
| power supply | Current | 65mA (TYP. 24VDC/common) | _ | 0 | is required. |
| Common terminal arrangement | | 8 points/common (common terminal: TB10, TB20) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | ation | ON indication (LED) | | 0 | |
| External interfa | ice | 20-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire size | | 0.75 to 2mm | 0.3 to 0.75mm ² (Outside diameter: 2.8mm or less) | × | replacement. |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | |
| Number of occ | upied I/O points | 16 points (I/O assignment: Output 16 | points) | 0 | |
| Internal current (5VDC) | t consumption | 115mA (TYP. all points ON) | 450mA (TYP. all points ON) | _ | |
| External dimen | sions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.64kg | 0.22kg | _ | |

- *1 Check the specifications of loads connected to the RY10R2.
- *2 The following tables show the life data.

RY10R2

| Mechanical | 20 million times or more |
|------------|--|
| Electrical | Rated switching voltage/current load: 100 thousand times or more |
| | 1.5A at 200VAC, 1A at 240VAC (COS ϕ = 0.7) 100 thousand times or more 0.4A at 200VAC, 0.3A at 240VAC (COS ϕ = 0.7) 300 thousand times or more |
| | 1A at 200VAC, 0.5A at 240VAC (COS ϕ = 0.35) 100 thousand times or more 0.3A at 200VAC, 0.15A at 240VAC (COS ϕ = 0.35) 300 thousand times or more |
| | 1A at 24VDC, 0.1A at 100VDC (L/R = 7ms) 100 thousand times or more 0.3A at 24VDC, 0.03A at 100VDC (L/R = 7ms) 300 thousand times or more |

AY60E and RY10R2

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|----------------|--|---|---------------|--|
| | | AY60E | RY10R2 | | |
| Output type | | Transistor output (source type) | Contact output | × | The output type is changed after replacement.*1 |
| Number of outp | out points | 16 | | 0 | |
| Isolation metho | od | Photocoupler | Relay | Δ | Each isolation method has the same isolation performance although the method is changed after replacement. |
| Rated load volt | age | 12/24/48VDC (10.2 to 56VDC) | 24VDC/240VAC (MAX. 125VDC/264VAC) | 0 | |
| Maximum load | current | 12/24VDC, 2A/point, 48VDC, 0.8A/point, 5A/common (when next to the power supply module is located: 3A/common) | 2A/point, 8A/common | 0 | |
| Maximum inrus | sh current | 4A 100ms or less, 8A 10ms or less | _ | _ | |
| Leakage curre | nt at OFF | 0.1mA or lower | _ | _ | |
| Maximum volta | ige drop at ON | 1.5VDC (2A) | _ | _ | |
| Response | OFF to ON | 2ms or less | 10ms or less | Δ | The response time is |
| time | ON to OFF | 2ms or less (resistive load) | 12ms or less | Δ | changed after replacement.*1 |
| Life | | Unlimited electrical life | Refer to the life table.*2 | × | The electrical/mechanica |
| Maximum switching frequency | | Unlimited mechanical life | 3600 times/hour | | life is limited because contact output is used. |
| Surge suppres | sor | Surge absorbing diode | None | × | The surge suppressor is not built in this model. |
| Fuse | | 5A fast blow fuse (2 fuses/common) | None | × | No fuse is built in this |
| Fuse blown inc | lication | Available (An LED turns on when a fuse is blown. A signal is output to a CPU module.) | None | × | model. |
| External | Voltage | 24VDC (+10%/-10%) | _ | 0 | No external power supply |
| power supply | Current | 65mA (TYP. 24VDC/common) | _ | 0 | is required. |
| Common terminal arrangement | | 8 points/common (common terminal: TB10, TB20) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | ation | ON indication (LED) | | 0 | |
| External interfa | ice | 20-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire size | | 0.75 to 2mm | 0.3 to 0.75mm ² (Outside diameter: 2.8mm or less) | × | replacement. |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | |
| Number of occupied I/O points | | 16 points (I/O assignment: Output 16 | points) | 0 | |
| Internal current (5VDC) | t consumption | 115mA (TYP. all points ON) | 450mA (TYP. all points ON) | _ | |
| External dimen | sions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.63kg | 0.22kg | _ | |

- *1 Check the specifications of loads connected to the RY10R2.
- *2 The following tables show the life data.


RY10R2

| Mechanical | 20 million times or more | | | | | |
|------------|--|--|--|--|--|--|
| Electrical | Rated switching voltage/current load: 100 thousand times or more | | | | | |
| | 1.5A at 200VAC, 1A at 240VAC (COS ϕ = 0.7) 100 thousand times or more 0.4A at 200VAC, 0.3A at 240VAC (COS ϕ = 0.7) 300 thousand times or more | | | | | |
| | 1A at 200VAC, 0.5A at 240VAC (COS ϕ = 0.35) 100 thousand times or more 0.3A at 200VAC, 0.15A at 240VAC (COS ϕ = 0.35) 300 thousand times or more | | | | | |
| | 1A at 24VDC, 0.1A at 100VDC (L/R = 7ms) 100 thousand times or more 0.3A at 24VDC, 0.03A at 100VDC (L/R = 7ms) 300 thousand times or more | | | | | |

AY60EP and RY10R2

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|------------------|---|---|---------------|--|
| | | AY60EP | RY10R2 | | |
| Output type | | Transistor output (source type) | Contact output | × | The output type is changed after replacement.*1 |
| Number of outp | out points | 16 | | 0 | |
| Isolation method | | Photocoupler | Relay | Δ | Each isolation method has the same isolation performance although the method is changed after replacement. |
| Rated load volt | tage | 12/24VDC (+10%/-15%) | 24VDC/240VAC (MAX. 125VDC/264VAC) | 0 | |
| Maximum load | current | 2A/point, 0.8A/point (60% ON, 55°C)*2 | 2A/point, 8A/common | 0 | |
| Maximum inrus | sh current | No limit (short circuit protection function) | _ | _ | |
| Leakage curre | nt at OFF | 1mA or lower | _ | - | |
| Maximum voltage drop at ON | | 2.0A at 1.6V (TYP.), 2.0A at 2.0V (MAX) | _ | _ | |
| Response | OFF to ON | 0.5ms or less | 10ms or less | Δ | The response time is |
| time | ON to OFF | 1.5ms or less | 12ms or less | Δ | changed after replacement.*1 |
| Life | | Unlimited electrical life | Refer to the life table.*3 | × | The electrical/mechanical life is limited because contact output is used. |
| Maximum swite | ching frequency | Unlimited mechanical life | 3600 times/hour | | |
| Surge suppressor | | Surge absorbing diode | None | × | The surge suppressor is not built in this model. |
| External | Voltage | 24VDC (+10%/-10%) | _ | 0 | No external power supply |
| power supply | Current | 110mA (TYP. 24VDC/common) | _ | 0 | is required. |
| Common terminal arrangement | | 8 points/common (common terminal: TB9, TB19) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | ation | ON indication (LED) | | 0 | |
| Protection fund | etion | Overheat protection function (in increments of 2 points), short circuit protection function | None | × | The protection function is not available after replacement. |
| External interfa | ace | 20-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire size | | 0.75 to 2mm | 0.3 to 0.75mm ² (Outside diameter: 2.8mm or less) | × | replacement. |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | |
| Number of occ | upied I/O points | 16 points (I/O assignment: Output 16 | points) | 0 | |
| Internal current (5VDC) | t consumption | 115mA (TYP. all points ON) | 450mA (TYP. all points ON) | _ | |
| External dimen | sions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.55kg | 0.22kg | _ | |

- *1 Check the specifications of loads connected to the RY10R2.
- *2 The following figure shows a derating chart.

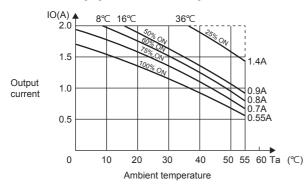

*3 The following tables show the life data.

RY10R2

| Mechanical | 20 million times or more |
|------------|--|
| Electrical | Rated switching voltage/current load: 100 thousand times or more |
| | 1.5A at 200VAC, 1A at 240VAC (COS ϕ = 0.7) 100 thousand times or more 0.4A at 200VAC, 0.3A at 240VAC (COS ϕ = 0.7) 300 thousand times or more |
| | 1A at 200VAC, 0.5A at 240VAC (COS ϕ = 0.35) 100 thousand times or more 0.3A at 200VAC, 0.15A at 240VAC (COS ϕ = 0.35) 300 thousand times or more |
| | 1A at 24VDC, 0.1A at 100VDC (L/R = 7ms) 100 thousand times or more 0.3A at 24VDC, 0.03A at 100VDC (L/R = 7ms) 300 thousand times or more |

AY60S and RY10R2

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|---------------|--|---|---------------|--|
| | | AY60S RY10R2 | | 7 | |
| Output type | | Transistor output (sink type) | Contact output | × | The output type is changed after replacement.*1 |
| Number of out | out points | 16 | | 0 | |
| Isolation method | | Photocoupler | Relay | Δ | Each isolation method has the same isolation performance although the method is changed after replacement. |
| Rated load vol | tage | 12/24/48VDC (+10%/-15%) | 24VDC/240VAC (MAX. 125VDC/ 264VAC) | 0 | |
| Maximum load | current | 2A/point, 6.4A/common (5A/fuse common) (when next to the power supply module is located: 5A/common) | 2A/point, 8A/common | 0 | |
| Maximum inrus | sh current | 4A 100ms or less, 8A 10ms or less | _ | _ | |
| Leakage curre | nt at OFF | 0.1mA or lower | | | |
| Maximum volta | ge drop at ON | 1VDC (2A) | _ | _ | |
| Response | OFF to ON | 1ms or less | 10ms or less | Δ | The response time is |
| time | ON to OFF | 3ms or less (resistive load) | 12ms or less | Δ | changed after replacement.*1 |
| Life | | Unlimited electrical life | Refer to the life table.*2 | × | The electrical/mechanical life is limited because contact output is used. |
| Maximum switching frequency | | Unlimited mechanical life | 3600 times/hour | | |
| Surge suppres | sor | Varistor (90 to 110V) | None | × | The surge suppressor is not built in this model. |
| Fuse | | 5A fast blow fuse (2 fuses/common) MP-50 | None | × | No fuse is built in this model. |
| Fuse blown inc | lication | Available (An LED turns on when a fuse is blown. A signal is output to a CPU module.) | None | × | |
| External | Voltage | 24/48VDC (+10%/-10%) | _ | 0 | No external power supply |
| power supply | Current | 3mA (TYP. 24VDC/common) | _ | 0 | is required. |
| Common termi arrangement | nal | 8 points/common (common terminal: TB10, TB20) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | ation | ON indication (LED) | | 0 | |
| External interfa | ace | 20-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 \times 6 screws) | × | Wiring needs to be changed after |
| Applicable wire size | | 0.75 to 2mm | 0.3 to 0.75mm ² (Outside diameter: 2.8mm or less) | × | replacement. |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | |
| Number of occupied I/O points | | 16 points (I/O assignment: Output 16 | points) | 0 | |
| Internal current (5VDC) | t consumption | 75mA (TYP. all points ON) | 450mA (TYP. all points ON) | _ | |
| External dimen | sions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.66kg | 0.22kg | _ | |

- *1 Check the specifications of loads connected to the RY10R2.
- *2 The following tables show the life data.

RY10R2

| Mechanical | 20 million times or more |
|------------|--|
| Electrical | Rated switching voltage/current load: 100 thousand times or more |
| | 1.5A at 200VAC, 1A at 240VAC (COS ϕ = 0.7) 100 thousand times or more 0.4A at 200VAC, 0.3A at 240VAC (COS ϕ = 0.7) 300 thousand times or more |
| | 1A at 200VAC, 0.5A at 240VAC (COS ϕ = 0.35) 100 thousand times or more 0.3A at 200VAC, 0.15A at 240VAC (COS ϕ = 0.35) 300 thousand times or more |
| | 1A at 24VDC, 0.1A at 100VDC (L/R = 7ms) 100 thousand times or more 0.3A at 24VDC, 0.03A at 100VDC (L/R = 7ms) 300 thousand times or more |

AY60S-UL and RY10R2

| Item | | Specifications | | Compatibility | Precautions |
|-------------------------------------|-----------------|--|---|---------------|--|
| | | AY60S-UL | RY10R2 | | |
| Output type | | Transistor output (sink type) | Contact output | × | The output type is changed after replacement.*1 |
| Number of out | put points | 16 | | 0 | |
| Isolation method | | Photocoupler | Relay | Δ | Each isolation method has the same isolation performance although the method is changed after replacement. |
| Rated load vol | tage | 12/24VDC (+10%/-15%) | 24VDC/240VAC (MAX. 125VDC/ 264VAC) | 0 | |
| Maximum load | current | 2A/point, 6.4A/common (5A/fuse common) (when next to the power supply module is located: 5A/common) | 2A/point, 8A/common | 0 | |
| Maximum inrus | sh current | 4A 100ms or less, 8A 10ms or less | _ | _ | |
| Leakage curre | nt at OFF | 0.1mA or lower | _ | _ | |
| Maximum volta | age drop at ON | 1VDC (2A) | _ | _ | |
| Response | OFF to ON | 1ms or less | 10ms or less | Δ | The response time is |
| time | ON to OFF | 3ms or less (resistive load) | 12ms or less | Δ | changed after replacement.*1 |
| Life | | Unlimited electrical life | Refer to the life table.*2 | × | The electrical/mechanical |
| | ching frequency | Unlimited mechanical life | 3600 times/hour | | life is limited because contact output is used. |
| Surge suppressor | | Varistor (90 to 110V) | None | × | The surge suppressor is not built in this model. |
| Fuse | | 5A fast blow fuse (2 fuses/common) | None | × | No fuse is built in this |
| Fuse blown indication | | Available (An LED turns on when a fuse is blown. A signal is output to a CPU module.) | None | × | model. |
| External | Voltage | 12/24VDC (+10%/-15%) | _ | 0 | No external power supply |
| power supply | Current | 3mA (TYP. 24VDC/common) | _ | 0 | is required. |
| Withstand volta | age | Between DC external connecting terminals and general grounding 500VAC rms for 1 minute | 510VAC rms for 1 minute | 0 | |
| Isolation resista | ance | 5MΩ or more by insulation resistance tester | 10MΩ or more by insulation resistance tester | 0 | |
| Noise immunity | У | By noise simulator of 500Vp-p noise vand 25 to 60Hz noise frequency | /oltage, 1μs noise width | 0 | |
| Common terminal arrangement | | 8 points/common (common terminal: TB10, TB20) | 16 points/common (common terminal: TB17) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | cation | ON indication (LED) | • | 0 | |
| External interfa | ace | 20-point terminal block (M3.5 × 7 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire size | | 0.75 to 2mm (14 to 18 AWG) | 0.3 to 0.75mm (Outside diameter: 2.8mm or less) | × | replacement. |
| Applicable solderless terminal | | RAV1.25-3.5, RAV2-3.5 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | |
| Number of occupied I/O points | | 16 points (I/O assignment: Output 16 | points) | 0 | |
| Internal current consumption (5VDC) | | 75mA (TYP. all points ON) | 450mA (TYP. all points ON) | _ | |
| External dimensions | | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | 1_ | |

| Item | em Specifications | | Compatibility | Precautions |
|--------|-------------------|--------|---------------|-------------|
| | AY60S-UL | RY10R2 | | |
| Weight | 0.66kg | 0.22kg | _ | |

^{*1} Check the specifications of loads connected to the RY10R2.

RY10R2

| Mechanical | 20 million times or more |
|------------|--|
| Electrical | Rated switching voltage/current load: 100 thousand times or more |
| | 1.5A at 200VAC, 1A at 240VAC (COSφ = 0.7) 100 thousand times or more 0.4A at 200VAC, 0.3A at 240VAC (COSφ = 0.7) 300 thousand times or more |
| | 1A at 200VAC, 0.5A at 240VAC (COS ϕ = 0.35) 100 thousand times or more 0.3A at 200VAC, 0.15A at 240VAC (COS ϕ = 0.35) 300 thousand times or more |
| | 1A at 24VDC, 0.1A at 100VDC (L/R = 7ms) 100 thousand times or more 0.3A at 24VDC, 0.03A at 100VDC (L/R = 7ms) 300 thousand times or more |

^{*2} The following tables show the life data.

AY70 and RY40NT5P

| Item | | Specifications | | Compatibility | Precautions |
|-------------------------------------|----------------|---|--|---------------|--|
| | | AY70 | RY40NT5P | | |
| Output type | | Transistor output (sink type) | | 0 | |
| Number of output points | | 16 | | 0 | |
| Isolation metho | od | Photocoupler | | 0 | |
| Rated load vol | tage | 5/12VDC (+25%/-10%) | 12/24VDC (+20%/-15%) | Δ | 5VDC voltage cannot be used after replacement.*1 |
| Maximum load | current | 16mA/point, 128mA/common | 0.5A/point, 5A/common | 0 | |
| Maximum inrus | sh current | 50mA 10ms | Current is to be limited by the overload protection function. | Δ | The inrush current value is changed after replacement.*1 |
| Leakage curre | nt at OFF | _ | 0.1mA or lower | _ | |
| Output voltage | at OFF | V _{OH} : 3.5VDC (V _{CC} = 5VDC, I _{OH} = 0.4mA) | _ | _ | |
| Maximum volta | age drop at ON | V _{OL} : 0.2VDC (I _{OL} = 16mA) | 0.5A at 0.2VDC (TYP.), 0.5A at 0.3VDC (MAX.) | 0 | |
| Response | OFF to ON | 1ms or less | 0.5ms or less | 0 | |
| time | ON to OFF | 1ms or less | 1ms or less (rated load, resistive load) | 0 | |
| Surge suppres | sor | None | Zener diode | 0 | |
| External power supply | Voltage | 5/12VDC (+25%/-10%) | 12/24VDC (+20/-15%) (ripple ratio within 5%) | Δ | 24VDC voltage cannot be used after replacement.*1 |
| | Current | 55mA (TYP. 12VDC/common) | 4mA (at 24VDC) | 0 | |
| Common terminal arrangement | | 8 points/common (common terminal: TB10, TB20) | 16 points/common (common terminal: TB18) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | cation | ON indication (LED) | | 0 | |
| Protection fund | tion | None | Overheat protection function (in increments of 1 point), overload protection function (in increments of 1 point) | 0 | |
| External interfa | ace | 20-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 \times 6 screws) | × | Wiring needs to be changed after |
| Applicable wire size | | 0.75 to 2mm | 0.3 to 0.75mm ² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | conversion adapter (ERNT-1AR40Y), the existing external wiring and terminal blocks in the existing system can be used.*2 |
| Number of occupied I/O points | | 16 points (I/O assignment: Output 16 | points) | 0 | |
| Internal current consumption (5VDC) | | 100mA (TYP. all points ON) | 140mA (TYP. all points ON) | _ | |
| External dimensions | | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.36kg | 0.16kg | _ | |

^{*1} Check the specifications of loads connected to the RY40NT5P.

^{*2} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY70-UL and RY40NT5P

| Item | | Specifications | | Compatibility | Precautions |
|-------------------------------------|----------------|---|--|---------------|--|
| | | AY70-UL RY40NT5P | | | |
| Output type | | Transistor output (sink type) | | 0 | |
| Number of output points | | 16 | | 0 | |
| Isolation metho | od | Photocoupler | | 0 | |
| Rated load vol | tage | 5/12VDC (+25%/-10%) | 12/24VDC (+20%/-15%) | Δ | 5VDC voltage cannot be used after replacement.*1 |
| Maximum load | current | 16mA/point, 128mA/common | 0.5A/point, 5A/common | 0 | |
| Maximum inrus | sh current | 50mA 10ms | Current is to be limited by the overload protection function. | Δ | The inrush current value is changed after replacement.*1 |
| Leakage curre | nt at OFF | _ | 0.1mA or lower | _ | |
| Output voltage | at OFF | V _{OH} : 3.5VDC (V _{cc} = 5VDC, I _{OH} = 0.4mA) | _ | _ | |
| Maximum volta | age drop at ON | V _{OL} : 0.2VDC (I _{OL} = 16mA) | 0.5A at 0.2VDC (TYP.), 0.5A at 0.3VDC (MAX.) | 0 | |
| Response | OFF to ON | 1ms or less | 0.5ms or less | 0 | |
| time | ON to OFF | 1ms or less | 1ms or less (rated load, resistive load) | 0 | |
| Surge suppres | sor | None | Zener diode | 0 | |
| External power supply | Voltage | 5/12VDC (+25%/-10%) | 12/24VDC (+20/-15%) (ripple ratio within 5%) | Δ | 24VDC voltage cannot be used after replacement.*1 |
| | Current | 55mA (TYP. 12VDC/common) | 4mA (at 24VDC) | 0 | |
| Withstand voltage | | Between DC external connecting terminals and general grounding 500VAC rms for 1 minute | 510VAC rms for 1 minute | 0 | |
| Isolation resistance | | 5MΩ or more by insulation resistance tester | 10MΩ or more by insulation resistance tester | 0 | |
| Noise immunity | У | By noise simulator of 500Vp-p noise voltage, 1μs noise width and 25 to 60Hz noise frequency | | 0 | |
| Common termi arrangement | nal | 8 points/common (common terminal: TB10, TB20) | 16 points/common (common terminal: TB18) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | cation | ON indication (LED) | | 0 | |
| Protection fund | ction | None | Overheat protection function (in increments of 1 point), overload protection function (in increments of 1 point) | 0 | |
| External interfa | ace | 20-point terminal block (M3.5 × 7 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after |
| Applicable wire | e size | 0.75 to 2mm (14 to 18 AWG) | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | conversion adapter (ERNT-1AR40Y), the existing external wiring and terminal blocks in the existing system can be used." ² |
| Number of occupied I/O points | | 16 points (I/O assignment: Output 16 | points) | 0 | |
| Internal current consumption (5VDC) | | 100mA (TYP. all points ON) | 140mA (TYP. all points ON) | _ | |
| External dimensions | | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.36kg | 0.16kg | _ | |

^{*1} Check the specifications of loads connected to the RY40NT5P.

^{*2} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY71 and RY41NT2H

| Item | | Specifications | | Compatibility | Precautions |
|-------------------------------------|------------|---|--|---------------|--|
| | | AY71 | RY41NT2H | | |
| Output type | | Transistor output (sink type) | | 0 | |
| Number of out | out points | 32 | | 0 | |
| Isolation metho | od | Photocoupler | | 0 | |
| Rated load vol | tage | 5/12VDC (+25%/-10%) | 5/12/24VDC (+20%/-15%) | 0 | |
| Maximum load | current | 16mA/point, 256mA/common | 0.2A/point, 2A/common | 0 | |
| Maximum inrus | sh current | 50mA 10ms | 0.7A, 10ms or less | 0 | |
| Leakage curre | nt at OFF | _ | 0.1mA or lower | _ | |
| Output voltage | at OFF | V _{OH} : 3.5VDC (V _{CC} = 5VDC, I _{OH} = 0.4mA) | _ | _ | |
| Maximum voltage drop at ON | | V _{OL} : 0.2VDC (I _{OL} = 16mA) | 0.2A at 0.1VDC (TYP.), 0.2A at 0.2VDC (MAX.) | 0 | |
| Response | OFF to ON | 1ms or less | 1μs or less | 0 | |
| time | ON to OFF | 1ms or less | 2μs or less (rated load, resistive load) | 0 | |
| Surge suppressor | | None | Zener diode | 0 | |
| External | Voltage | 5/12VDC (+25%/-10%) | _ | 0 | No external power supply is required. |
| power supply | Current | 100mA (TYP. 12VDC/common) | _ | 0 | |
| Common termi arrangement | nal | 16 points/common (common terminal: TB18, TB36) | 32 points/common (common terminal: A01, A02) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | cation | ON indication (LED) | | 0 | |
| External interfa | ice | 38-point terminal block (M3 × 6 screws) | 40-pin connector (A6CON1/2/3/4) | × | Wiring needs to be changed after |
| Applicable wire size | | 0.75 to 2mm³ | 0.088 to 0.3mm² | × | replacement. |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | _ | _ | |
| Number of occupied I/O points | | 32 points (I/O assignment: Output 32 points) | | 0 | |
| Internal current consumption (5VDC) | | 200mA (TYP. all points ON) | 420mA (TYP. all points ON) | _ | |
| External dimensions | | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.44kg | 0.12kg | _ | |

AY72 and RY41NT2H

O: Compatible, △: Partly changed, ×: Incompatible, —: Not applicable

| Item | | Specifications | | Compatibility | Precautions | |
|-------------------------------|---------------|---|--|---------------|---|--|
| | | AY72 | RY41NT2H | | | |
| Output type | | Transistor output (sink type) | | 0 | | |
| Number of output points | | 64 | 64 32 | | When 33 or more points are required, use two modules of the RY41NT2H. | |
| Isolation metho | od | Photocoupler | | 0 | | |
| Rated load vol | tage | 5/12VDC (+25%/-10%) | 5/12/24VDC (+20%/-15%) | 0 | | |
| Maximum load | current | 16mA/point, 512mA/common | 0.2A/point, 2A/common | 0 | | |
| Maximum inrush current | | 50mA 10ms | 0.7A, 10ms or less | 0 | | |
| Leakage current at OFF | | _ | 0.1mA or lower | _ | | |
| Output voltage at OFF | | V _{OH} : 3.5VDC (V _{CC} = 5VDC, I _{OH} = 0.4mA) | _ | _ | | |
| Maximum voltage drop at ON | | V _{OL} : 0.2VDC (I _{OL} = 16mA) | 0.2A at 0.1VDC (TYP.), 0.2A at 0.2VDC (MAX.) | 0 | | |
| time o | OFF to ON | 1ms or less | 1μs or less | 0 | | |
| | ON to OFF | 1ms or less | 2μs or less (rated load, resistive load) | 0 | | |
| Surge suppres | sor | None | Zener diode | 0 | | |
| External | Voltage | 5/12VDC (+25%/-10%) | _ | 0 | No external power supply | |
| power supply | Current | 300mA (TYP. 12VDC/common) | _ | 0 | is required. | |
| Common termi arrangement | inal | 32 points/common (common terminal: 1A1, 1A2, 2A1, 2A2) | 32 points/common (common terminal: A01, A02) | 0 | | |
| Operation indic | cation | ON indication (LED), 32 point switch-o | over using switch | 0 | | |
| External interfa | асе | 40-pin connector × 2 (A6CON1/2/3/ 4) | 40-pin connector (A6CON1/2/3/4) | 0 | Existing external wiring can be used. | |
| Applicable wire size | | 0.088 to 0.3mm² | | 0 | | |
| Number of occupied I/O points | | 64 points (I/O assignment: Output 64 points) | 32 points (I/O assignment: Output 32 points) | Δ | | |
| Internal curren | t consumption | 300mA (TYP. all points ON) | 420mA (TYP. all points ON) | _ | | |
| External dimen | nsions | 250(H)×37.5(W)×106(D)mm | 106(H)×27.8(W)×131(D)mm | _ | | |
| Weight | | 0.47kg | 0.12kg | _ | | |

AY80 and RY40PT5P

 $\bigcirc : \textbf{Compatible}, \ \triangle : \textbf{Partly changed}, \ \times : \textbf{Incompatible}, \ -\!\!\!-\!\!\!: \textbf{Not applicable}$

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|------------------|---|---|---------------|--|
| | | AY80 | RY40PT5P | - | |
| Output type | | Transistor output (source type) | | 0 | |
| Number of out | out points | 16 | | 0 | |
| Isolation metho | • | Photocoupler | | 0 | |
| Rated load vol | tage | 12/24VDC (10.2 to 30VDC) | 12/24VDC (+20%/-15%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| Maximum load | current | 0.5A/point, 2A/common | 0.5A/point, 5A/common | 0 | |
| Maximum inrus | sh current | 7A 10ms or less, 3.5A 100ms or less | | Δ | The inrush current value is changed after replacement.*1 |
| Leakage curre | nt at OFF | 0.1mA or lower | | 0 | |
| Maximum volta | age drop at ON | 0.5A at 1.5VDC (MAX.) | 1 | 0 | |
| Response | OFF to ON | 2ms or less | 0.5ms or less | 0 | |
| ON to OFF | | 2ms or less (resistive load) | , | 0 | |
| Surge suppres | sor | Varistor (52 to 62V) | Zener diode | 0 | |
| Fuse | | 2A fast blow fuse (1 fuses/common) MP-20 | None | × | No fuse is built in this model. |
| Fuse blown inc | lication | Available (An LED turns on when a fuse is blown. A signal is output to a CPU module.) | None | × | |
| External power supply | · · | | | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| | Current | 60mA (TYP. 24VDC/common) | 16mA (at 24VDC) | 0 | |
| Common termi arrangement | nal | 8 points/common (common terminal: TB9, TB19) | , , | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | ation | ON indication (LED) | | 0 | |
| Protection fund | ction | None | increments of 1 point), overload protection function (in increments of | 0 | |
| External interfa | ace | 20-point terminal block (M3 × 6 screws) | , , | × | Wiring needs to be changed after |
| Applicable wire | e size | 0.75 to 2mm | | × | replacement. By using the upgrade tool conversion adapter |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | (ERNT-1AR40Y), the existing external wiring and terminal blocks in the existing system can be used.*2 |
| Number of occ | upied I/O points | 16 points (I/O assignment: Output 16 | points) | 0 | |
| Internal current (5VDC) | t consumption | 115mA (TYP. all points ON) | 130mA (TYP. all points ON) | _ | |
| External dimen | sions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.42kg | 0.16kg | | |
| | | | | | |


^{*1} Check the specifications of loads connected to the RY40PT5P.

^{*2} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY80EP and RY40PT5P

| Item | | Specifications | | Compatibility | Precautions | |
|--------------------------------|------------------|---|--|---------------|---|--|
| | | AY80EP | RY40PT5P | | | |
| Output type | | Transistor output (source type) | | 0 | | |
| Number of outp | out points | 16 | | 0 | | |
| Isolation metho | od | Photocoupler | | 0 | | |
| Rated load volt | age | 12/24VDC (+10%/-15%) | 12/24VDC (+20%/-15%) | 0 | | |
| Maximum load | current | 0.8A/point, 0.8A/point (60% ON, 55°C)*1 | 0.5A/point, 5A/common | Δ | The maximum load current is decreased after replacement.*2 | |
| Maximum inrus | sh current | No limit (short circuit protection function) | Current is to be limited by the overload protection function. | 0 | | |
| Leakage curre | nt at OFF | 1mA or lower | 0.1mA or lower | 0 | | |
| • | | 0.8A at 1.1VDC (TYP.), 0.8A at 1.5VDC (MAX.) | 0.5A at 0.2VDC (TYP.), 0.5A at 0.3VDC (MAX.) | 0 | | |
| Response | OFF to ON | 0.5ms or less | 0.5ms or less | 0 | | |
| time | ON to OFF | 1.5ms or less | 1ms or less (rated load, resistive load) | 0 | | |
| Surge suppressor | | Surge absorbing diode | Zener diode | 0 | | |
| External power supply | Voltage | 12/24VDC (+10%/-15%) 12/24VDC (+20/-15%) (ripple rawithin 5%) | | 0 | | |
| | Current | 110mA (TYP. 24VDC/common) | 16mA (at 24VDC) | 0 | | |
| Common termi arrangement | nal | 8 points/common (common terminal: TB9, TB19) | · · · · · · · · · · · · · · · · · · · | | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. | |
| Operation indic | ation | ON indication (LED) | | 0 | | |
| Protection func | tion | Overheat protection function (in increments of 2 points), short circuit protection function | Overheat protection function (in increments of 1 point), overload protection function (in increments of 1 point) | 0 | | |
| External interfa | ice | 20-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after | |
| Applicable wire | size | 0.75 to 2mm | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool | |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | conversion adapter (ERNT-1AR40Y), the existing external wiring and terminal blocks in the existing system can be used.*3 | |
| Number of occ | upied I/O points | 16 points (I/O assignment: Output 16 | points) | 0 | | |
| Internal current (5VDC) | t consumption | 115mA (TYP. all points ON) | 130mA (TYP. all points ON) | _ | | |
| ` ' | | 050(1) 07.5(11) 101(5) | 106(H)×27.8(W)×131(D)mm | | | |
| External dimen | sions | 250(H)×37.5(W)×121(D)mm | 100(11)×27.0(VV)×131(D)IIIII | _ | | |

*1 The following figure shows a derating chart.

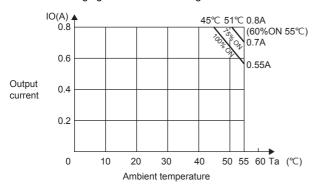

- *2 Check the specifications of loads connected to the RY40PT5P.
- *3 For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY81 and RY41PT1P

 $\bigcirc : \textbf{Compatible}, \ \triangle : \textbf{Partly changed}, \ \times : \textbf{Incompatible}, \ -\!\!\!-\!\!\!: \textbf{Not applicable}$

| Item | | Specifications | | Compatibility | Precautions |
|--|---|---|--|---------------|--|
| | | AY81 | RY41PT1P | | |
| Output type | | Transistor output (source type) | ' | 0 | |
| Number of out | put points | 32 | | 0 | |
| Isolation metho | od | Photocoupler | | 0 | |
| Rated load vol | tage | 12/24VDC (10.2 to 30VDC) | 12/24VDC (+20%/-15%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| Maximum load | current | 0.5A/point, 4A/common (when next to the power supply module is located: 3A/common) 0.1A/point, 2A/common | | Δ | The maximum load current is decreased after replacement.*1 |
| Maximum inrus | sh current | 4A, 10ms or less | Current is to be limited by the overload protection function. | Δ | The inrush current value is changed after replacement.*1 |
| Leakage curre | nt at OFF | 0.1mA or lower | | 0 | |
| Maximum volta | age drop at ON | 0.5A at 1.5VDC (MAX.) 0.1A at 0.1VDC (TYP.), 0.1A at 0.2VDC (MAX.) | | 0 | |
| Output type Number of output Isolation method Rated load volta Maximum load of Maximum inrush Leakage current Maximum voltage Response time Surge suppressore External power supply Common terminarrangement Operation indica Protection function External interface Applicable wire search applicable solde Number of occup Internal current of | OFF to ON | 2ms or less | 0.5ms or less | 0 | |
| time | ON to OFF | 2ms or less (resistive load) | 1ms or less (rated load, resistive load) | 0 | |
| Surge suppres | sor | Varistor (52 to 62V) | Zener diode | 0 | |
| External power supply | ternal Voltage 12/24VDC (10.2 to 30VDC) | | 12/24VDC (+20/-15%) (ripple ratio within 5%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| | Current | 50mA (TYP. 24VDC/common) | 19mA (at 24VDC) | 0 | |
| Common termi arrangement | inal | 16 points/common (common terminal: TB17, TB35) | 32 points/common (common terminal: B01, B02) | Δ | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indic | cation | ON indication (LED) | • | 0 | |
| Protection fund | ction | None | Overheat protection function (in increments of 1 point), overload protection function (in increments of 1 point) | 0 | |
| External interfa | ace | 38-point terminal block (M3 × 6 screws) | 40-pin connector (A6CON1/2/3/4) | × | Wiring needs to be changed after |
| Applicable wire | e size | 0.75 to 2mm² | 0.088 to 0.3mm² | × | replacement. |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | _ | _ | By using the upgrade tool conversion adapter (ERNT-1AR41Y), the existing external wiring and terminal blocks in the existing system can be used.*2 |
| Number of occ | upied I/O points | 32 points (I/O assignment: Output 32 | points) | 0 | |
| Internal curren (5VDC) | t consumption | 230mA (TYP. all points ON) | 190mA (TYP. all points ON) | _ | |
| External dimer | nsions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.53kg | 0.11kg | _ | |

^{*1} Check the specifications of loads connected to the RY41PT1P.


^{*2} For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY81EP and RY41PT1P

 $\bigcirc : \textbf{Compatible}, \ \triangle : \textbf{Partly changed}, \ \times : \textbf{Incompatible}, \ -\!\!\!-\!\!\!: \textbf{Not applicable}$

| Output type Number of output Isolation method Rated load volta Maximum load of Maximum inrust Leakage curren Maximum voltage Response time Surge suppress | d age current h current | AY81EP Transistor output (source type) 32 Photocoupler 12/24VDC (+10%/-15%) 0.8A/point, 0.4A/point (60% ON, 55°C)*1 No limit (short circuit protection function) 1mA or lower | 12/24VDC (+20%/-15%) 0.1A/point, 2A/common Current is to be limited by the overload protection function. | О О О О | The maximum load current is decreased after replacement.*2 |
|---|---|--|--|------------------|--|
| Number of outpo | d age current h current at at OFF ge drop at ON | 32 Photocoupler 12/24VDC (+10%/-15%) 0.8A/point, 0.4A/point (60% ON, 55°C)*1 No limit (short circuit protection function) | 0.1A/point, 2A/common Current is to be limited by the | Ο Ο Ο Δ | is decreased after |
| Rated load volta Maximum load of Maximum inrust Leakage curren Maximum voltage Response time | d age current h current at at OFF ge drop at ON | Photocoupler 12/24VDC (+10%/-15%) 0.8A/point, 0.4A/point (60% ON, 55°C)*1 No limit (short circuit protection function) | 0.1A/point, 2A/common Current is to be limited by the | Ο Ο Δ | is decreased after |
| Rated load volta Maximum load of Maximum inrust Leakage curren Maximum voltage Response time | age current h current at at OFF ge drop at ON | 12/24VDC (+10%/-15%) 0.8A/point, 0.4A/point (60% ON, 55°C)*1 No limit (short circuit protection function) | 0.1A/point, 2A/common Current is to be limited by the | Ο | is decreased after |
| Maximum load of Maximum inrush Leakage curren Maximum voltage Response time | h current It at OFF ge drop at ON | 0.8A/point, 0.4A/point (60% ON, 55°C)*1 No limit (short circuit protection function) | 0.1A/point, 2A/common Current is to be limited by the | Δ | is decreased after |
| Maximum inrusl Leakage curren Maximum voltage Response time | h current nt at OFF ge drop at ON | 55°C) ^{*1} No limit (short circuit protection function) | Current is to be limited by the | | is decreased after |
| Leakage curren Maximum voltag Response time | nt at OFF ge drop at ON | function) | = | 0 | 1 |
| Maximum voltage Response time | ge drop at ON | 1mA or lower | | | |
| Response time | | | 0.1mA or lower | 0 | |
| time | OFF to ON | 0.8A at 1.1VDC (TYP.), 0.8A at 1.5VDC (MAX.) | 0.1A at 0.1VDC (TYP.), 0.1A at 0.2VDC (MAX.) | 0 | |
| | - | 0.5ms or less | 0.5ms or less | 0 | |
| time ON to OFF Surge suppressor | | 1.5ms or less | 1ms or less (rated load, resistive load) | 0 | |
| | | Surge absorbing diode | Zener diode | 0 | |
| External Voltage power supply | | 12/24VDC (+10%/-15%) | 12/24VDC (+20/-15%) (ripple ratio within 5%) | 0 | |
| | Current | 220mA (TYP. 24VDC/common) | 19mA (at 24VDC) | 0 | |
| Common terminal arrangement | | 16 points/common (common terminal: TB17, TB35) | on 32 points/common (common terminal: B01, B02) | | As the common changes from two commons to a common, wiring with a different voltage for each common is not possible. |
| Operation indica | ation | ON indication (LED) | | 0 | |
| Protection funct | tion | Overheat protection function (in increments of 2 points), short circuit protection function | Overheat protection function (in increments of 1 point), overload protection function (in increments of 1 point) | 0 | |
| External interfac | ce | 38-point terminal block (M3 × 6 screws) | 40-pin connector (A6CON1/2/3/4) | × | Wiring needs to be changed after |
| Applicable wire | size | 0.75 to 2mm² | 0.088 to 0.3mm² | × | replacement. |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 — | | _ | By using the upgrade tool conversion adapter (ERNT-1AR41Y), the existing external wiring and terminal blocks in the existing system can be used.*3 |
| Number of occu | upied I/O points | 32 points (I/O assignment: Output 32 | points) | 0 | |
| Internal current (5VDC) | consumption | 230mA (TYP. all points ON) | 190mA (TYP. all points ON) | _ | |
| External dimens | | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | sions | | | | |

*1 The following figure shows a derating chart.

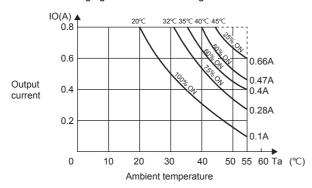


- *2 Check the specifications of loads connected to the RY41PT1P.
- *3 For an upgrade tool, please consult your local Mitsubishi Electric representative.

AY82EP and RY42PT1P

O: Compatible, △: Partly changed, ×: Incompatible, —: Not applicable

| Item | | Specifications | | Compatibility | Precautions |
|-----------------------------|------------------|---|--|---------------|---|
| | | AY82EP | RY42PT1P | | |
| Output type | | Transistor output (source type) | | 0 | |
| Number of out | put points | 64 | | 0 | |
| Isolation metho | od | Photocoupler | | 0 | |
| Rated load vol | tage | 12/24VDC (+10%/-15%) | 12/24VDC (+20%/-15%) | 0 | |
| Maximum load current | | 0.1A/point, 0.04A/point (60% ON, 55°C) ^{*1} | 0.1A/point, 2A/common | 0 | |
| Maximum inrush current | | No limit (short circuit protection function) | · · | | |
| Leakage current at OFF | | 0.1mA or lower | | 0 | |
| Maximum voltage drop at ON | | 0.1A at 2.5VDC (TYP.), 0.1A at 3.5VDC (MAX.) | 0.1A at 0.1VDC (TYP.), 0.1A at 0.2VDC (MAX.) | 0 | |
| Response | OFF to ON | 0.5ms or less | 0.5ms or less | 0 | |
| time | ON to OFF | 1.5ms or less | s or less 1ms or less (rated load, resistive load) | | |
| Surge suppressor | | Surge absorbing diode | Zener diode | 0 | |
| External power supply | Voltage | 12/24VDC (10.2 to 30VDC) | 12/24VDC (+20/-15%) (ripple ratio within 5%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*2 |
| | Current | 50mA (TYP. 24VDC/common) | 19mA (at 24VDC) | 0 | |
| Common termi arrangement | inal | 32 points/common (common terminal: 1-17, 1-18, 1-36, 2-17, 2-18, 2-36) | 32 points/common (common terminal: 1B01, 1B02, 2B01, 2B02) | 0 | |
| Operation indic | cation | ON indication (LED), 32 point switch- | over using switch | 0 | |
| Protection function | | Overheat protection function (in increments of 1 common), short circuit protection function | Overheat protection function (in increments of 1 point), overload protection function (in increments of 1 point) | 0 | |
| External interfa | ace | 37-pin D-sub connector × 2 (A6CON1E/2E/3E) | 40-pin connector (A6CON1/2/3/4) | × | Wiring needs to be changed after |
| Applicable wire | e size | 0.088 to 0.3mm ² | | × | replacement. |
| Number of occ | upied I/O points | 64 points (I/O assignment: Output 64 | points) | 0 | |
| Internal curren (5VDC) | t consumption | 290mA (TYP. all points ON) | 290mA (TYP. all points ON) | _ | |
| External dimer | nsions | 250(H)×37.5(W)×106(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.58kg | 0.13kg | _ | |

*1 The following figure shows a derating chart.

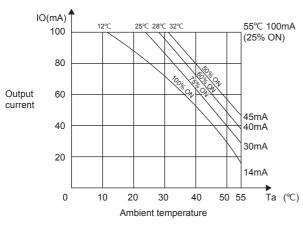


*2 Check the specifications of loads connected to the RY42PT1P.

AY82EP and RY41PT1P

| Item | | Specifications | | Compatibility | Precautions |
|--|------------------|---|--|---------------|---|
| | | AY82EP | RY41PT1P | | |
| Output type | | Transistor output (source type) | | 0 | |
| Number of outp | out points | 64 | 32 | Δ | When 33 or more points are required, use two modules of the RY41PT1P. |
| Isolation metho | od | Photocoupler | | 0 | |
| Rated load volt | age | 12/24VDC (+10%/-15%) | 12/24VDC (+20%/-15%) | 0 | |
| Maximum load | current | 0.1A/point, 0.04A/point (60% ON, 55°C)*1 | 0.1A/point, 2A/common | 0 | |
| Maximum inrus | sh current | No limit (short circuit protection function) | Current is to be limited by the overload protection function. | 0 | |
| Leakage curre | nt at OFF | 0.1mA or lower | | 0 | |
| Maximum voltage drop at ON Response OFF to ON | | 0.1A at 2.5VDC (TYP.), 0.1A at 3.5VDC (MAX.) | 0.1A at 0.1VDC (TYP.), 0.1A at 0.2VDC (MAX.) | 0 | |
| Response | OFF to ON | 0.5ms or less | 0.5ms or less | 0 | |
| | | 1.5ms or less | 1ms or less (rated load, resistive load) | 0 | |
| Surge suppres | sor | Surge absorbing diode | Zener diode | 0 | |
| External power supply | Voltage | 12/24VDC (10.2 to 30VDC) | 12/24VDC (+20/-15%) (ripple ratio within 5%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*2 |
| Current | | 50mA (TYP. 24VDC/common) | 19mA (at 24VDC) | 0 | |
| Common termi arrangement | nal | 32 points/common (common terminal: 1-17, 1-18, 1-36, 2-17, 2-18, 2-36) | 32 points/common (common terminal: B01, B02) | 0 | |
| Operation indic | ation | ON indication (LED) 32 point switch-over using switch | ON indication (LED) | 0 | |
| Protection fund | tion | Overheat protection function (in increments of 1 common), short circuit protection function | Overheat protection function (in increments of 1 point), overload protection function (in increments of 1 point) | 0 | |
| External interfa | ice | 37-pin D-sub connector × 2 (A6CON1E/2E/3E) | 40-pin connector (A6CON1/2/3/4) | × | Wiring needs to be changed after |
| Applicable wire size | | 0.088 to 0.3mm | | × | replacement. By using the upgrade tool conversion adapter (ERNT-ASLCXY81), the existing external wiring and terminal blocks in the existing system can be used.*3 |
| Number of occ | upied I/O points | 64 points (I/O assignment: Output 64 points) | 32 points (I/O assignment: Output 32 points) | Δ | |
| Internal current (5VDC) | t consumption | 290mA (TYP. all points ON) | 190mA (TYP. all points ON) | _ | |
| External dimen | sions | 250(H)×37.5(W)×106(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | | 0.58kg | 0.11kg | _ | |

*1 The following figure shows a derating chart.

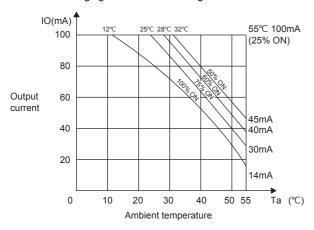

- *2 Check the specifications of loads connected to the RY41PT1P.
- *3 For an upgrade tool, please consult your local Mitsubishi Electric representative.

I/O combined modules

AH42 and RH42C4NT2P


 $\bigcirc \text{: Compatible, } \triangle \text{: Partly changed, } \times \text{: Incompatible, } - \text{: Not applicable}$

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------------|--|--|---|---------------|---|
| | | AH42 | RH42C4NT2P | | |
| ■Input specific | ations | | | | |
| Input type | | DC input (positive common type) | DC input (positive common/negative common shared type) | 0 | |
| Number of inpu | ut points | 32 | | 0 | |
| Isolation metho | od | Photocoupler | | 0 | |
| Rated input vo | Itage | 12/24VDC (+10/-15%, ripple ratio within 5%) | 24VDC (+20/-15%, ripple ratio within 5%) | Δ | 12VDC voltage cannot be used after replacement.*1 |
| Rated input cu | rrent | Approx. 3mA (12VDC) Approx. 7mA (24VDC) | 4mA TYP. (at 24VDC) | Δ | The rated input current is decreased after replacement.*1 |
| Maximum num simultaneous i | | 60% (20 points/common) | Refer to the derating chart.*2 | Δ | Use the module within the range shown in the derating chart. |
| · | | 9.5VDC or higher/3mA or higher | 19V or higher/3mA or higher | Δ | The ON voltage is changed after replacement.*1 |
| OFF voltage/OFF current | | 6VDC or lower/1.5mA or lower | 6V or lower/1mA or lower | Δ | The OFF current is changed after replacement.*1 |
| Input resistance Response OFF to ON | | Αρρτοχ. 3.3kΩ | 5.3kΩ | Δ | The input resistance is changed after replacement.*1 |
| Response | OFF to ON | 10ms or less (at 24VDC) | Configured in the parameter.*3 | 0 | Set the input response |
| ON to OFF | | 10ms or less (at 24VDC) | Configured in the parameter.*3 | 0 | time of parameters to 10ms. |
| Input common arrangement | terminal | 32 points/common (common terminal: 1B1, 1B2) | 32 points/common (common terminal: 1B01, 1B02) | 0 | |
| ■Output specif | fications | | | | |
| Output type | | Transistor output (sink type) | | 0 | |
| Number of out | out points | 32 | | 0 | |
| Isolation metho | od | Photocoupler | | 0 | |
| Rated load vol | tage | 12/24VDC (10.2 to 40VDC) | 12/24VDC (+20%/-15%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| Maximum load | current | 0.1A/point, 1A/common | 0.2A/point, 2A/common | 0 | |
| Maximum inrus | sh current | 0.4A, 10ms or less | Current is to be limited by the overload protection function. | Δ | The inrush current value is changed after replacement.*1 |
| Leakage curre | nt at OFF | 0.1mA or lower | | 0 | |
| Maximum volta | age drop at ON | 0.1A at 2.5VDC, 5mA at 1.75VDC, 1mA at 1.7VDC | 0.2A at 0.2VDC (TYP.), 0.2A at 0.3VDC (MAX.) | 0 | |
| Response | OFF to ON | 2ms or less | 0.5ms or less | 0 | |
| time | ON to OFF 2ms or less (resistive load) | | 1ms or less (rated load, resistive load) | 0 | |
| Surge suppres | sor | Clamp diode | Zener diode | 0 | |
| External power supply | Voltage | 12/24VDC (10.2 to 40VDC) | 12/24VDC (+20/-15%) (ripple ratio within 5%) | Δ | The voltage exceeding 28.8VDC cannot be used after replacement.*1 |
| | Current | 20mA (TYP. 24VDC/common) | 16mA (at 24VDC) | 0 | |
| Output commo arrangement | n terminal | 32 points/common (common terminal: 2A1, 2A2) | 32 points/common (common terminal: 2A01, 2A02) | 0 | |

| Item | Specifications | Compatibility | Precautions | | |
|-------------------------------------|--|--|-------------|--|--|
| | AH42 | RH42C4NT2P | | | |
| Protection function | None | Overheat protection function (in increments of 1 point), overload protection function (in increments of 1 point) | 0 | | |
| ■Common specifications | | | | | |
| Operation indication | ON indication (LED) | 0 | | | |
| External interface | 40-pin connector × 2 (A6CON1/2/3/4) | | 0 | Existing external wiring | |
| Applicable wire size | 0.088 to 0.3mm | | 0 | can be used. | |
| Number of occupied I/O points | 64 points (I/O assignment: Output 64 points) | ent: Output 64 32 points (I/O assignment: I/O combined 32 points) | | The number of occupied I/ O points is changed after replacement. | |
| Internal current consumption (5VDC) | 245mA (TYP. all points ON) | 220mA (TYP. all points ON) | _ | | |
| External dimensions | 250(H)×37.5(W)×106(D)mm | 106(H)×27.8(W)×110(D)mm | _ | | |
| Weight | 0.70kg | 0.13kg | _ | | |

^{*1} Check the specifications of sensors, switches, and loads connected to the RH42C4NT2P.

^{*2} The following figure shows a derating chart.

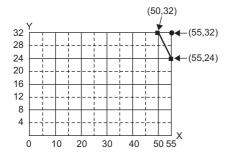

- ●: Input voltage 26.4VDC
- ■: Input voltage 28.8V
- X: Ambient temperature (°C)
- Y: Number of simultaneous on points (point)
- *3 The following table shows the input response times.

| Timing | Set value | et value | | | | | | | |
|------------------|-----------|----------|-------|-------|-----|-----|------|------|------|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| OFF to ON (MAX.) | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| ON to OFF (MAX.) | 0.2ms | 0.3ms | 0.5ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms |

Interrupt modules

Al61 (when 24VDC is used) and RX40C7

| Item | | Specifications | | Compatibility | Precautions | |
|--|---------------|--|---|---------------|---|--|
| Input type Number of input points | | Al61 | RX40C7 | | | |
| Input type | | DC input (positive common type) | DC input (positive common/negative common shared type) | 0 | | |
| Number of inp | ut points | 16 | | 0 | | |
| Isolation metho | od | Photocoupler | | 0 | | |
| Rated input voltage | | 12/24VDC (+10/-15%, ripple ratio within 5%) | 24VDC (+20/-15%, ripple ratio within 5%) | 0 | | |
| Rated input cu | rrent | Approx. 6mA (12VDC) Approx. 14mA (24VDC) | 7mA TYP. (at 24VDC) | Δ | The rated input current is decreased after replacement.*1 | |
| Maximum num simultaneous i | | 100% (16 points) | 100% (16 points) | 0 | | |
| ON voltage/ON current OFF voltage/OFF current | | 9VDC or higher | 15V or higher/4mA or higher | Δ | The ON voltage is changed after replacement.*1 | |
| OFF voltage/OFF current | | 4VDC or lower | 8V or lower/2mA or lower | Δ | The OFF voltage is changed after replacement.*1 | |
| nput resistance | | Approx. 2.4kΩ | 3.3kΩ | Δ | The input resistance is changed after replacement.*1 | |
| Response | OFF to ON | 0.2ms or less | Configured in the parameter.*2 | 0 | Set the input response | |
| time | ON to OFF | 0.2ms or less | Configured in the parameter.*2 | | time of parameters to 0.2/ 0.1ms. | |
| Common term | inal | 16 points/common (common terminal: TB9, TB18) | 16 points/common (common terminal: TB17) | 0 | | |
| Operation indic | cation | ON indication (LED) | 0 | | | |
| External interfa | ace | 20-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after | |
| Applicable wire | e size | 0.75 to 2mm | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | replacement. By using the upgrade tool | |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | conversion adapter (ERNT-1AR10XY), the existing external wiring and terminal blocks in the existing system can be used.*3 | |
| Number of occupied I/O points | | er of occupied I/O points 32 points (I/O assignment: special 32 points) 16 (I/O assignment: Input 32 points) | | Δ | The number of occupied land of points is changed after replacement. Interrupt settings can be configured in the parameter setting of GX Works3. | |
| Internal curren (5VDC) | t consumption | 140mA (TYP. all points ON) | 110mA (TYP. all points ON) | _ | | |
| External dimer | nsions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | | |
| Weight | | 0.40kg | 0.16kg | - | | |

- *1 Check the specifications of sensors and switches connected to the RX40C7.
- *2 The following table shows the input response times.

| Timing | Set value | Set value | | | | | | | |
|------------------|-----------|-----------|-------|-------|-----|-----|------|------|------|
| | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| OFF to ON (MAX.) | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| ON to OFF (MAX.) | 0.35ms | 0.4ms | 0.5ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

Al61 (when 12VDC is used) and RX70C4

| Item | | Specifications | | Compatibility | Precautions | |
|-------------------------------|------------------|---|---|---------------|---|--|
| | | AI61 | RX70C4 | | | |
| Input type | | DC input (positive common type) | DC input (positive common/ negative common shared type) | 0 | | |
| Number of input points | | 16 | 0 | | | |
| Isolation metho | od | Photocoupler | | 0 | | |
| Rated input vo | Itage | 12/24VDC (+10/-15%, ripple ratio within 5%) | 5/12VDC (+20/-15%, ripple ratio within 5%) | 0 | | |
| Rated input cu | rrent | Approx. 6mA (12VDC) Approx. 14mA (24VDC) | 1.7mA TYP. (at 5VDC) 4.8mA TYP. (at 12VDC) | Δ | The rated input current is decreased after replacement.*1 | |
| Maximum num simultaneous i | | 100% (16 points) | 100% (16 points) | 0 | | |
| ON voltage/ON | l current | 9VDC or higher | 3.5V or higher/1mA or higher | Δ | The ON voltage is changed after replacement.*1 | |
| OFF voltage/C | FF current | 4VDC or lower | 1V or lower/0.1mA or lower | Δ | The OFF voltage is changed after replacement.*1 | |
| Input resistanc | е | Approx. 2.4kΩ | 2.3kΩ | Δ | The input resistance is changed after replacement.*1 | |
| Response | OFF to ON | 0.2ms or less | Configured in the parameter.*2 | 0 | Set the input response time | |
| time | ON to OFF | 0.2ms or less | Configured in the parameter.*2 | 0 | of parameters to 0.1ms. | |
| Common term | nal | 16 points/common (common terminal: TB9, TB18) | 16 points/common (common terminal: TB17) | 0 | | |
| Operation indic | cation | ON indication (LED) | | 0 | | |
| External interfa | ace | 20-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after replacement. | |
| Applicable wire | e size | 0.75 to 2mm | 0.3 to 0.75mm ² (Outside diameter: 2.8mm or less) | × | By using the upgrade tool conversion adapter (ERNT- | |
| Applicable solo | derless terminal | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | - 1AR10XY), the existing external wiring and terminal blocks in the existing system can be used.*3 | |
| Number of occupied I/O points | | 32 points (I/O assignment: special 32 points) | 16 (I/O assignment: Input 16 points) | Δ | The number of occupied I/O points is changed after replacement. Interrupt settings can be configured in the parameter setting of GX Works3. | |
| Internal curren (5VDC) | t consumption | 140mA (TYP. all points ON) | 100mA (TYP. all points ON) | _ | | |
| External dimer | nsions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | | |
| Weight | | 0.40kg | 0.16kg | _ | | |

^{*1} Check the specifications of sensors and switches connected to the RX70C4.

^{*2} The following table shows the input response times.

| Timing | Set value | Set value | | | | | | | |
|------------------|-----------|-----------|-------|-------|-----|-----|------|------|------|
| | 0.1ms | | | | | | | | |
| OFF to ON (MAX.) | 0.2ms | 0.3ms | 0.4ms | 0.5ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| ON to OFF (MAX.) | 0.41ms | 0.5ms | 0.6ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

Al61-S1 and RX40C7

O: Compatible, △: Partly changed, ×: Incompatible, —: Not applicable

| Item | | Specifications | | Compatibility | Precautions | |
|-------------------------------|------------------|---|---|---------------|---|--|
| | | AI61-S1 | RX40C7 | | | |
| Input type | | DC input (positive common type) | DC input (positive common/ negative common shared type) | 0 | | |
| Number of inp | ut points | 16 | 0 | | | |
| Isolation metho | bc | Photocoupler | | 0 | | |
| Rated input vo | ltage | 24VDC (+10/-10%, ripple ratio within 5%) | 24VDC (+20/-15%, ripple ratio within 5%) | 0 | | |
| Rated input cu | rrent | 14mA | 7mA TYP. (at 24VDC) | Δ | The rated input current is decreased after replacement.*1 | |
| Maximum num simultaneous i | | 100% (16 points) | 100% (16 points) | 0 | | |
| ON voltage/ON | l current | 16VDC or higher | 15V or higher/4mA or higher | Δ | The ON voltage is changed after replacement.*1 | |
| OFF voltage/C | FF current | 9VDC or lower | 8V or lower/2mA or lower | Δ | The OFF voltage is changed after replacement.*1 | |
| Input resistance | | Approx. 2.4kΩ | 3.3kΩ | Δ | The input resistance is changed after replacement.*1 | |
| Response | OFF to ON | 2ms or more, 8ms or less | Configured in the parameter.*2 | 0 | Set the input response time | |
| time | ON to OFF | 2ms or more, 8ms or less | Configured in the parameter.*2 | 0 | of parameters to 5ms. | |
| Common term | inal | 16 points/common (common terminal: TB9, TB18) | 16 points/common (common terminal: TB17) | 0 | | |
| Operation indic | cation | ON indication (LED) | | 0 | | |
| External interfa | ace | 20-point terminal block (M3 × 6 screws) | 18-point terminal block (M3 × 6 screws) | × | Wiring needs to be changed after replacement. | |
| Applicable wire | e size | 0.75 to 2mm | 0.3 to 0.75mm² (Outside diameter: 2.8mm or less) | × | By using the upgrade tool conversion adapter (ERNT- | |
| Applicable solo | derless terminal | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | R1.25-3 (A solderless terminal with an insulation sleeve cannot be used.) | × | - 1AR10XY), the existing external wiring and terminal blocks in the existing system can be used.*3 | |
| Number of occupied I/O points | | 32 points (I/O assignment: special 32 points) | 16 (I/O assignment: Input 16 points) | Δ | The number of occupied I/O points is changed after replacement. Interrupt settings can be configured in the parameter setting of GX Works3. | |
| Internal curren (5VDC) | t consumption | 140mA (TYP. all points ON) | 110mA (TYP. all points ON) | _ | | |
| External dimer | nsions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | | |
| Weight | | 0.40kg | 0.16kg | _ | | |

^{*1} Check the specifications of sensors and switches connected to the RX40C7.

^{*2} The following table shows the input response times.

| Timing | Set value | Set value | | | | | | | |
|------------------|--|-----------|-------|-------|-----|-----|------|------|------|
| | 0.1ms 0.2ms 0.4ms 0.6ms 1ms 5ms 10ms 20ms 70ms | | | | | | | | |
| OFF to ON (MAX.) | 0.1ms | 0.2ms | 0.4ms | 0.6ms | 1ms | 5ms | 10ms | 20ms | 70ms |
| ON to OFF (MAX.) | 0.35ms | 0.4ms | 0.5ms | 0.7ms | 1ms | 5ms | 10ms | 20ms | 70ms |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

Blank cover modules

AG60 and RG60

 $\bigcirc : \textbf{Compatible}, \ \triangle : \textbf{Partly changed}, \ \times : \textbf{Incompatible}, \ -\!\!\!-\!\!\!: \textbf{Not applicable}$

| Item | Specifications | Compatibility | Precautions | |
|-------------------------------|--|--|-------------|--|
| | AG60 | RG60 | | |
| Number of occupied I/O points | Default: 16 points (Can be changed to 0, 16, 32, 48, or 64 points by the parameter.) | Default: 16 points (Can be changed to 0, 16, 32, 48, 64, 128, 256, 512, or 1024 points by the parameter.) | 0 | |
| Application | Used as a dustproof cover for a slot no (especially a vacant slot between mod | | 0 | |
| External dimensions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×110(D)mm | _ | |
| Weight | 0.17kg | 0.07kg | _ | |

3.3 Precautions for Replacement

Wiring

Size of cables and solderless terminals

The sizes of wires or solderless terminals that can be used for terminal blocks vary between MELSEC iQ-R series and MELSEC-A/QnA series, since modules and terminal blocks of the MELSEC iQ-R series are smaller than those of the MELSEC-A/QnA series.

When replacing MELSEC-A/QnA series modules with MELSEC iQ-R series modules, use wires and solderless terminals that meet the specifications of MELSEC iQ-R series modules.

The wiring change is not required when the upgrade tool conversion adapter is used for replacement.

(Connection change for power supply and common terminals is required. Also, the conversion adapter fixture is required when the conversion adapter is used.)

As the MELSEC iQ-R series is a smaller model, wiring space on terminal blocks is narrower. Pay much attention in wiring.

Change from a terminal block to a connecter

A 32-point I/O module of the MELSEC-A/QnA series uses a terminal block while that of MELSEC iQ-R series uses a connecter.

When using a 32-point I/O module of the MELSEC iQ-R series, shift to the wiring using connecters or convert the connecters to terminal blocks with the following methods.

- · Using a converter module for a connecter and a terminal block
- · Using an upgrade tool conversion adapter

External wiring connector

An external wiring connecter is not included in packages of 32- and 64-point I/O modules of the MELSEC iQ-R series. Purchase the necessary number of the connecters (A6COND) separately.

Input modules

Specifications change of rated input current

Check the specifications of external devices (such as sensors and switches) since the rated input current is decreased for some MELSEC iQ-R series input modules compared to that for the MELSEC-A/QnA series.

Specifications changes of ON voltage/ON current and OFF voltage/OFF current

Check the specifications of external devices (such as sensors and switches) since the ON voltage/ON current and OFF voltage/OFF current differ for some MELSEC iQ-R series input modules compared to that for the MELSEC-A/QnA series.

Specifications change of rated voltage value

The RX4□C□ DC input module of the MELSEC iQ-R series is dedicated to 24VDC. Use the RX7□C4 DC input module at 12VDC.

Specifications change of response time

For the MELSEC iQ-R series DC input modules, the I/O response time can be set with the parameter. Set the I/O response time that matches the response time of the MELSEC-A/QnA series DC input module.

Specifications change of common terminal arrangement

The common terminal arrangement may differ between the MELSEC-A/QnA series and MELSEC iQ-R series. Pay attention when applying a different voltage to each common.

Output modules

Specifications change of rated output current

Check the specifications of the load side since the rated output current is decreased for some MELSEC iQ-R series output modules compared to that for the MELSEC-A/QnA series.

Specifications change of common terminal arrangement

The common terminal arrangement may differ between the MELSEC-A/QnA series and MELSEC iQ-R series. Pay attention when applying a different voltage to each common.

Specifications change of common maximum load current

Since the maximum load current per common may differ between the MELSEC-A/QnA series and MELSEC iQ-R series, check them before use.

Leakage current at OFF

Pay attention that devices that operate with a minute current (such as an LED and a buzzer) connected to the transistor output module may operate due to leakage current at OFF.

Triac output module

Operation of the triac that is used on a triac output module may be unstable when a sudden change occurs in the voltage and current due to component characteristics.

Problems due to voltage and current fluctuation may become obvious depending on individual differences between components. Refer to the following manual and check relevant items in the precautions.

Interrupt modules

To use the interrupt function in the MELSEC iQ-R series system, use an input module. Set the interrupt function in the module parameter of the input module used.



For details on these precautions, refer to the following.

MELSEC iQ-R Module Configuration Manual

MELSEC iQ-R I/O Module User's Manual

4 POWER SUPPLY MODULE REPLACEMENT

4.1 Alternative Model List

This section lists alternative models of the MELSEC iQ-R series power supply modules in accordance with the specifications of the MELSEC-A/QnA series power supply modules.

Select models that best suit your application considering the specifications of the MELSEC-A/QnA series power supply module currently used.

| Item | MELSEC-A/ QnA series | MELSEC iQ-R series | Specification difference |
|---------------------|----------------------------|-----------------------|--|
| Power supply module | A61P A61PN A61P-UL | R61P | (1) External wiring: Changed (2) Slots: Not changed (3) Specifications: Rated output voltage (5VDC: 8A → 6.5A), applicable tightening torque (M4 screw: 78 to 118N·cm → 102 to 138N·cm) (4) Accessories: A spare fuse and a short chip for applied voltage select terminal are not included with the MELSEC iQ-R series power supply module. |
| | A61PEU | R61P | (1) External wiring: Changed (2) Slots: Not changed (3) Specifications: Rated output voltage (5VDC: 8A → 6.5A), applicable tightening torque (M4 screw: 98 to 137N·cm → 102 to 138N·cm) (4) Accessories: A spare fuse and a short chip for applied voltage select terminal are not included with the MELSEC iQ-R series power supply module. |
| | A62P | R62P | (1) External wiring: Changed (2) Slots: Not changed (3) Specifications: Rated output voltages (5VDC: 5A → 3.5A, 24VDC: 0.8A → 0.6A), +24 and 24G terminal screws (M4 screw → M3.5 screw), applicable tightening torque (M4 screw: 78 to 118N·cm → 102 to 138N·cm) (4) Accessories: A spare fuse and a short chip for applied voltage select terminal are not included with the MELSEC iQ-R series power supply module. |
| | A62PEU | R62P | (1) External wiring: Changed (2) Slots: Not changed (3) Specifications: Rated output voltages (5VDC: 5A → 3.5A, 24VDC: 0.8A → 0.6A), +24 and 24G terminal screws (M4 screw → M3.5 screw), applicable tightening torque (M4 screw: 98 to 137N·cm → 102 to 138N·cm) (4) Accessories: A spare fuse and a short chip for applied voltage select terminal are not included with the MELSEC iQ-R series power supply module. |
| | A63P | R63P | (1) External wiring: Changed (2) Slots: Not changed (3) Specifications: Rated output voltage (5VDC: 8A → 6.5A), applicable tightening torque (M4 screw: 78 to 118N·cm → 102 to 138N·cm) (4) Accessories: A spare fuse is not included with the MELSEC iQ-R series power supply module. |
| | A65P | R62P | (1) External wiring: Changed (2) Slots: Not changed (3) Specifications: Rated output voltages (5VDC: 2A → 3.5A, 24VDC: 1.5A → 0.6A), +24 and 24G terminal screws (M4 screw → M3.5 screw), applicable tightening torque (M4 screw: 78 to 118N·cm → 102 to 138N·cm) (4) Accessories: A spare fuse and a short chip for applied voltage select terminal are not included with the MELSEC iQ-R series power supply module. |
| | A66P | No alternative models | Use a 24VDC power supply external to the programmable controller. Since the A66P is mounted on a slot for I/O modules, the corresponding slot of the MELSEC iQ-R series base unit will be empty. |
| | A67P | No alternative models | Consider using the R63P (input power supply voltage: 24VDC) instead. When the R63P is used, the input voltage is required to be transformed to 24VDC externally. |
| | A68P | No alternative models | Use a ± 15 VDC power supply external to the programmable controller. Since the A68P is mounted on a slot for I/O modules, the corresponding slot of the MELSEC iQ-R series base unit will be empty. |
| | A1NCPU (power supply part) | R62P | (1) External wiring: Changed (2) Slots: Changed (Integrated structure of the CPU and power supply part → single power supply module) (3) Specifications: Rated output voltages (5VDC: 5A → 3.5A, 24VDC: 0.8A → 0.6A), +24 and 24G terminal screws (M4 screw → M3.5 screw), applicable tightening torque (M4 screw: 78 to 118N·cm → 102 to 138N·cm) (4) Accessories: A spare fuse and a short chip for applied voltage select terminal are not included with the MELSEC iQ-R series power supply module. |

4.2 Specification Comparison Tables

A61P/A61PN/A61P-UL and R61P

| Item | | Specifications | | Compatibility | Precautions |
|----------------------------|----------------|--|---|---------------|--|
| | | A61P/A61PN/A61P-UL | R61P | 1 | |
| Input power s | supply voltage | 100 to 120VAC (+10%, -15%) (85 to 132VAC) 200 to 240VAC (+10%, -15%) (170 to 264VAC) | 100 to 240VAC (+10%, -15%) (85 to 264VAC) | 0 | The R61P is a wide-range type applicable to 100 to 240VAC. |
| Input frequen | cy | , , | | 0 | |
| Input voltage factor | distortion | Within 5% | | 0 | |
| Maximum inp power | ut apparent | 160VA | 130VA | 0 | |
| Inrush curren | t | 20A within 8ms | | 0 | |
| Rated output current | 5VDC | 8A | 6.5A | Δ | Check the power consumption of the entire system. If the capacity is not enough, consider using the R64P (rated output current: 9A). |
| | 24VDC | _ | | _ | |
| Overcurrent | 5VDC | 8.8A or higher | 7.1A or higher | 0 | |
| protection | 24VDC | _ | | _ | |
| Overvoltage | 5VDC | 5.5 to 6.5V | | 0 | |
| protection | 24VDC | _ | | _ | |
| Efficiency | | 65% or more | 76% or more | 0 | |
| Allowable mo power failure | • | Within 20ms | | 0 | |
| Withstand vol | itage | 1500VAC for 1 minute between all AC external terminals and the ground 500VAC for 1 minute between all DC external terminals and the ground | 2300VAC rms per minute (altitude 0 to 2000m) between the combined "line input/LG terminals" and the "FG terminal and output" | 0 | |
| Insulation resistance | | 5MΩ or higher by 500VDC insulation resistance tester between all AC external terminals and the ground | 10MΩ or higher by 500VDC insulation resistance tester between the combined "line input/LG terminals" and the "FG terminal and output", the line input and LG terminals, the output and FG terminals | 0 | |
| Noise immunity | | Noise voltage 1500Vp-p | Noise voltage 1500Vp-p, noise width 1µs, noise frequency 25 to 60Hz (noise simulator condition) Noise immunity test IEC 61000-4-4: 2kV | 0 | |
| Operation ind | lication | POWER LED | POWER LED (Normal: On (green), Error: Off) | 0 | |
| Fuse | | Glass tube fuse (rated current: 4A, external dimensions: $\phi 6 \times 32$ mm, user-changeable) | Built-in (user-unchangeable) | _ | |

| Item | | Specifications | | Compatibility | Precautions |
|---|------------------------------|---|---|---------------|--|
| | | A61P/A61PN/A61P-UL | R61P | 1 | |
| Contact Application | | None | ERR. contact | 0 | |
| output Rated switching voltage, current | switching | | 0.5A at 24VDC | | |
| | Minimum switching load | | 1mA at 5VDC | | |
| | Response time | | Off→on: 10ms or less On→off: 12ms or less | 1 | |
| Life | Life | | Mechanical: 20 million times or more Electrical: Rated switching voltage/ current, 100 thousand times or more | | |
| Terminal sc | rew size | M4×0.7×6 | M4.0 | 0 | |
| Applicable v | vire size | 0.75 to 2mm | | 0 | |
| Applicable s terminal | solderless | R1.25-4, R2-4 RAV1.25-4, RAV2-4 | RAV1.25-4, RAV2-4, Thickness of 0.8mm or less, up to two solderless terminal connections per terminal | 0 | For the R61P, use a solderless terminal with insulating coating. |
| Applicable t torque | ightening | 78 to 118N·cm | 102 to 138N⋅cm | × | Tighten the screws within the applicable torque range. |
| External din | nensions | 250(H)×55(W)×121(D)mm | 106(H)×54.6(W)×110(D)mm | _ | |
| Weight | | A61P(-UL): 0.98kg A61PN: 0.75kg | 0.41kg | _ | |
| Accessories | 5 | Spare fuse: 1 Short chip for applied voltage select terminal: 1 | None | _ | A spare fuse is not included in the accessories of the MELSEC iQ-R series power supply module since fuses are not user-changeable, nor is the short chip since it is unnecessary to switch operating voltage. |

A61PEU and R61P

| Item | | Specifications | | Compatibility | Precautions |
|---------------------------|----------------|---|---|---------------|--|
| | | A61PEU | R61P | | |
| Input power s | supply voltage | 100 to 120VAC (+10%, -15%) (85 to 132VAC) | 100 to 240VAC (+10%, -15%) (85 to 264VAC) | 0 | The R61P is a wide-range type applicable to 100 to 240VAC. |
| | | 200 to 240VAC (+10%, -15%) (170 to 264VAC) | | | |
| Input frequen | су | 50/60Hz±5% | | 0 | |
| Input voltage factor | distortion | Within 5% | | 0 | |
| Maximum inp | ut apparent | 130VA | | 0 | |
| Inrush curren | t | 20A within 8ms | | 0 | |
| Rated 5VDC output current | | 8A | 6.5A | Δ | Check the power consumption of the entire system. If the capacity is not enough, consider using the R64P (rated output current: 9A). |
| | 24VDC | _ | | _ | |
| Overcurrent | 5VDC | 8.8A or higher | 7.1A or higher | 0 | |
| protection | 24VDC | _ | _ | | |
| Overvoltage | 5VDC | 5.5 to 6.5V | | 0 | |
| protection | 24VDC | _ | | _ | |
| Efficiency | | 65% or more | 76% or more | 0 | |
| Allowable mo | • | Within 20ms | | 0 | |
| Withstand vol | ltage | 2830VAC rms per 3 cycles (altitude 2000m) between the primary side and FG terminal | 2300VAC rms per minute (altitude 0 to 2000m) between the combined "line input/LG terminals" and the "FG terminal and output" | 0 | |
| Insulation resistance | | 10MΩ or higher by 500VDC insulation resistance tester between all inputs and all outputs (LG and FG separated), all inputs and LG/FG terminals, all outputs and FG/LG terminals | 10MΩ or higher by 500VDC insulation resistance tester between the combined "line input/LG terminals" and the "FG terminal and output", the line input and LG terminals, the output and FG terminals | 0 | |
| Noise immunity | | By noise simulator of noise voltage of IEC 801-4, 2KV, 1500Vp-p, noise width of $1\mu s$, and noise frequency of 25 to 60Hz | Noise voltage 1500Vp-p, noise width 1µs, noise frequency 25 to 60Hz (noise simulator condition) Noise immunity test IEC 61000-4-4: 2kV | 0 | |
| Operation ind | lication | POWER LED | POWER LED (Normal: On (green), Error: Off) | 0 | |
| Fuse | | Glass tube fuse (rated current: 4A, external dimensions: $\phi 6 \times 32$ mm, user-changeable) | Built-in (user-unchangeable) | _ | |

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------|--|---|---|---------------|--|
| | | A61PEU | R61P | | |
| Contact | Application | None | ERR contact | 0 | |
| output section | Rated switching voltage, current | | 0.5A at 24VDC | | |
| | Minimum switching load | | 1mA at 5VDC | | |
| | Response time | | Off→on: 10ms or less On→off: 12ms or less | | |
| | Life Mechanical: 20 million times or more Electrical: Rated switching voltage/ current, 100 thousand times or more | | | | |
| Terminal sc | rew size | M4×0.7×6 | M4.0 | 0 | |
| Applicable v | vire size | 0.75 to 2mm | | 0 | |
| Applicable s terminal | solderless | RAV1.25-4, RAV2-4 | RAV1.25-4, RAV2-4, thickness of 0.8mm or less, up to two solderless terminal connections per terminal | 0 | For the R61P, use a solderless terminal with insulating coating. |
| Applicable t torque | ightening | 98 to 137N·cm | 102 to 138N-cm | × | Tighten the screws within the applicable torque range. |
| External din | nensions | 250(H)×55(W)×121(D)mm | 106(H)×54.6(W)×110(D)mm | _ | |
| Weight | | 0.80kg | 0.41kg | _ | |
| Accessories | <u> </u> | Spare fuse: 1 Short chip for applied voltage select terminal: 1 | None | _ | A spare fuse is not included in the accessories of the MELSEC iQ-R series power supply module since fuses are not user-changeable, nor is the short chip since it is unnecessary to switch operating voltage. |

A62P and R62P

| Item | | Specifications | | Compatibility | Precautions | |
|---|------------------------------|--|---|---------------|--|--|
| | | A62P | R62P | | | |
| Input power s | supply voltage | 100 to 120VAC (+10%, -15%) (85 to 132VAC) | 100 to 240VAC (+10%, -15%) (85 to 264VAC) | 0 | The R62P is a wide-range type applicable to 100 to 240VAC. | |
| | | 200 to 240VAC (+10%, -15%) (170 to 264VAC) | | | | |
| Input frequen | су | 50/60Hz±5% | | 0 | | |
| Input voltage factor | distortion | Within 5% | | 0 | | |
| Maximum inp | ut apparent | 155VA | 120VA | 0 | | |
| Inrush curren | t | 20A within 8ms | | 0 | | |
| Rated | 5VDC | 5A | 3.5A | Δ | Check the power consumption | |
| output current | 24VDC | 0.8A | 0.6A | Δ | of the entire system. | |
| Overcurrent | 5VDC | 5.5A or higher | 3.8A or higher | 0 | | |
| protection | 24VDC | 1.2A or higher | 0.66A or higher | _ | | |
| Overvoltage | 5VDC | 5.5 to 6.5V | | 0 | | |
| protection | 24VDC | _ | | _ | | |
| Efficiency | | 65% or more | 76% or more | 0 | | |
| Allowable mo | • | Within 20ms | | 0 | | |
| Withstand vo | Itage | 1500VAC for 1 minute between all AC external terminals and the ground 500VAC for 1 minute between all DC external terminals and the ground | 2300VAC rms per minute (altitude 0 to 2000m) between the combined "line input/LG terminals" and the "FG terminal and output" | 0 | | |
| Insulation res | istance | $5 M \Omega$ or higher by 500VDC insulation resistance tester between all AC external terminals and the ground | 10MΩ or higher by 500VDC insulation resistance tester between the combined "line input/LG terminals" and the "FG terminal and output", the line input and LG terminals, the output and FG terminals | 0 | | |
| Noise immun | ity | Noise voltage 1500Vp-p | Noise voltage 1500Vp-p, noise width 1µs, noise frequency 25 to 60Hz (noise simulator condition) Noise immunity test IEC 61000-4-4: 2kV | 0 | | |
| Operation inc | lication | POWER LED | POWER LED (Normal: On (green), Error: Off) | 0 | | |
| Fuse | | Glass tube fuse (rated current: 4A, external dimensions: ϕ 6 × 32mm, user-changeable) | Built-in (user-unchangeable) | _ | | |
| Contact | Application | None | ERR. contact | 0 | | |
| output Rated switching voltage, current | | | 0.5A at 24VDC | | | |
| | Minimum switching load | | 1mA at 5VDC | | | |
| | Response time | | Off→on: 10ms or less On→off: 12ms or less | | | |
| Life | | | Mechanical: 20 million times or more Electrical: Rated switching voltage/ current, 100 thousand times or more | | | |
| | L | 1 | | <u> </u> | <u> </u> | |

| Item | Specifications | | Compatibility | Precautions | |
|--------------------------------|---|---|---------------|---|--|
| | A62P | R62P | | | |
| Terminal screw size | M4×0.7×6 | M4.0 (M3.5 screw for +24V, 24G terminals) | × | The wiring for the +24V and 24G terminals needs to be changed after replacement. | |
| Applicable wire size | 0.75 to 2mm | | 0 | | |
| Applicable solderless terminal | R1.25-4, R2-4 RAV1.25-4, RAV2-4 | RAV1.25-4, RAV2-4, thickness of 0.8mm or less, up to two solderless terminal connections per terminal (RAV1.25-3.5, RAV2-3.5, thickness 0.8mm or less for +24V and 24G terminals. Two solderless terminals can be connected to one terminal.) | 0 | For the R62P, use a solderless terminal with insulating coating. | |
| Applicable tightening torque | 78 to 118N·cm | M4 screw: 102 to 138N·cm M3.5 screw: 66 to 89N·cm | × | Tighten the screws within the applicable torque range. | |
| External dimensions | 250(H)×55(W)×121(D)mm | 106(H)×54.6(W)×110(D)mm | _ | | |
| Weight | 0.94kg | 0.45kg | _ | | |
| Accessories | Spare fuse: 1 Short chip for applied voltage select terminal: 1 | None | _ | A spare fuse is not included in the accessories of the MELSEC iQ-R series power supply module since fuses are not user-changeable, nor is the short chip since it is unnecessary to switch operating voltage. | |

A62PEU and R62P

| Item | | Specifications | | Compatibility | Precautions |
|----------------------------|---|--|--|---------------|--|
| | | A62PEU | R62P | | |
| Input power supply voltage | | 100 to 120VAC (+10%, -15%) (85 to 132VAC) | | | The R62P is a wide-range type applicable to 100 to 240VAC. |
| | | 200 to 240VAC (+10%, -15%) (170 to 264VAC) | | | |
| Input frequen | су | 50/60Hz±5% | | 0 | |
| Input voltage factor | distortion | Within 5% | | 0 | |
| Maximum inp power | ut apparent | 155VA | 120VA | 0 | |
| Inrush curren | t | 20A within 8ms | | 0 | |
| Rated | 5VDC | 5A | 3.5A | Δ | Check the power consumption |
| output current | 24VDC | 0.8A | 0.6A | Δ | of the entire system. |
| Overcurrent | 5VDC | 5.5A or higher | 3.8A or higher | 0 | |
| protection | 24VDC | 1.2A or higher | 0.66A or higher | _ | |
| Overvoltage | 5VDC | 5.5 to 6.5V | | 0 | |
| protection | 24VDC | _ | | _ | |
| Efficiency | | 65% or more | 76% or more | 0 | |
| Allowable mo | - | Within 20ms | | 0 | |
| Withstand voltage | | 1500VAC for 1 minute between all AC external terminals and the ground 500VAC for 1 minute between all DC external terminals and the ground | 2300VAC rms per minute (altitude 0 to 2000m) between the combined "line input/LG terminals" and the "FG terminal and output" | 0 | |
| Insulation resistance | | $5 M \Omega$ or higher by 500VDC insulation resistance tester between all AC external terminals and the ground | $10M\Omega$ or higher by $500VDC$ insulation resistance tester between the combined "line input/LG terminals" and the "FG terminal and output", the line input and LG terminals, the output and FG terminals | 0 | |
| Noise immuni | ity | Noise voltage 1500Vp-p | Noise voltage 1500Vp-p, noise width 1µs, noise frequency 25 to 60Hz (noise simulator condition) Noise immunity test IEC 61000-4-4: 2kV | 0 | |
| Operation ind | lication | POWER LED | POWER LED (Normal: On (green), Error: Off) | 0 | |
| Fuse | | Glass tube fuse (rated current: 4A, external dimensions: $\phi 6 \times 32$ mm, user-changeable) | Built-in (user-unchangeable) | _ | |
| Contact | Application | None | ERR. contact | 0 | |
| output section | Rated switching voltage, current | | 0.5A at 24VDC | | |
| | Minimum switching load | | 1mA at 5VDC | | |
| | Response time | | Off→on: 10ms or less On→off: 12ms or less | | |
| | Life | | Mechanical: 20 million times or more Electrical: Rated switching voltage/ current, 100 thousand times or | | |

| Item | Specifications | Compatibility | Precautions | | |
|-----------------------------------|---|---|-------------|---|--|
| | A62PEU | R62P | | | |
| Terminal screw size | M4×0.7×6 | M4.0 (M3.5 screw for +24V, 24G terminals) | × | The wiring for the +24V and 24G terminals needs to be changed after replacement. | |
| Applicable wire size | 0.75 to 2mm² | | 0 | | |
| Applicable solderless terminal | R1.25-4, R2-4 RAV1.25-4, RAV2-4 | RAV1.25-4, RAV2-4, Thickness of 0.8mm or less, up to two solderless terminal connections per terminal (RAV1.25-3.5, RAV2-3.5, thickness 0.8mm or less for +24V and 24G terminals. Two solderless terminals can be connected to one terminal.) | 0 | For the R62P, use a solderless terminal with insulating coating. | |
| Applicable tightening torque | 78 to 118N·cm | M4 screw: 102 to 138N-cm M3.5 screw: 66 to 89N-cm | × | Tighten the screws within the applicable torque range. | |
| External dimensions | 250(H)×55(W)×121(D)mm | 106(H)×54.6(W)×110(D)mm | _ | | |
| Weight | 0.94kg | 0.45kg | _ | | |
| Accessories | Spare fuse: 1 Short chip for applied voltage select terminal: 1 | None | _ | A spare fuse is not included in the accessories of the MELSEC iQ-R series power supply module since fuses are not user-changeable, nor is the short chip since it is unnecessary to switch operating voltage. | |

A63P and R63P

| · · · · · · · · · · · · · · · · · · · | | , , , , , | 11 | | 1- |
|---------------------------------------|---|--|---|---------------|--|
| Item | | Specifications | | Compatibility | Precautions |
| | | A63P | R63P | | |
| Input power supply voltage | | 24VDC (+30%, -35%) (15.6 to 31.2VDC) | | 0 | |
| Input frequency | | _ | | 0 | |
| Input voltage factor | distortion | - | | 0 | |
| Maximum inp | ut power | 65W | 50W | 0 | |
| Inrush curren | t | 100A within 1ms | 100A within 1ms (24VDC input) | 0 | |
| Rated output | 5VDC | 8A | 6.5A | Δ | Check the power consumption of the entire system. |
| current | 24VDC | _ | | _ | |
| Overcurrent | 5VDC | 8.5A or higher | 7.1A or higher | 0 | |
| protection | 24VDC | _ | | _ | |
| Overvoltage | 5VDC | 5.5 to 6.5V | | 0 | |
| protection | 24VDC | _ | | _ | |
| Efficiency | | 65% or more | 70% or more | 0 | |
| Allowable mo | mentary | Within 1ms | Within 10ms (at 24VDC input) | 0 | |
| power failure | , | | , | | |
| Withstand vo | ltage | 500VAC for 1 minute between all DC external terminals and the ground | 510VAC rms per minute (altitude 0 to 2000m) between the primary terminal and 5VDC terminal | 0 | |
| Insulation resistance | | $5 M \Omega$ or higher by 500VDC insulation resistance tester between all DC external terminals and the ground | 10MΩ or higher by 500VDC insulation resistance tester between the combined "line input/LG terminals" and the "FG terminal and output", the line input and LG terminals, the output and FG terminals | 0 | |
| Noise immun | ity | Noise voltage 500Vp-p | Noise voltage 500Vp-p, noise width 1µs, noise frequency 25 to 60Hz (noise simulator condition) | 0 | |
| Operation inc | lication | POWER LED | POWER LED (Normal: On (green), Error: Off) | 0 | |
| Fuse | | Glass tube fuse (rated current: 6.3A, external dimensions: φ6 × 32mm, user-changeable) | Built-in (user-unchangeable) | _ | |
| Contact | Application | None | ERR. contact | 0 | |
| output section | Rated switching voltage, current | | 0.5A at 24VDC | | |
| | Minimum switching load | | 1mA at 5VDC | | |
| | Response time | | Off→on: 10ms or less On→off: 12ms or less | | |
| | Life | | Mechanical: 20 million times or more Electrical: Rated switching voltage/ current, 100 thousand times or more | | |
| Terminal screw size | | M4×0.7×6 | M4.0 | 0 | |
| Applicable wire size | | 0.75 to 2mm² | | 0 | |
| Applicable so terminal | lderless | R1.25-4, R2-4 RAV1.25-4, RAV2-4 | RAV1.25-4, RAV2-4, thickness of 0.8mm or less, up to two solderless terminal connections per terminal | 0 | For the R63P, use a solderless terminal with insulating coating. |
| Applicable tig | htening | 78 to 118N-cm | 102 to 138N-cm | × | Tighten the screws within the applicable torque range. |
| | | | | | |

| Item | Specifications | | Compatibility | Precautions |
|---------------------|-----------------------|-------------------------|---------------|--|
| | A63P R63P | | | |
| External dimensions | 250(H)×55(W)×121(D)mm | 106(H)×54.6(W)×110(D)mm | _ | |
| Weight | 0.80kg | 0.41kg | _ | |
| Accessories | Spare fuse: 1 | None | _ | A spare fuse is not included in the accessories of the MELSEC iQ-R series power supply module since fuses are not user-changeable. |

A65P and R62P

| Item | | Specifications | Compatibility | Precautions | |
|----------------------------|-------------|--|---|-------------|--|
| | | A65P | R62P | | |
| Input power supply voltage | | 100 to 120VAC (+10%, -15%) (85 to 132VAC) | 100 to 240VAC (+10%, -15%) (85 to 264VAC) | 0 | The R62P is a wide-range type applicable to 100 to 240VAC. |
| | | 200 to 240VAC (+10%, -15%) (170 to 264VAC) | | | |
| Input frequen | су | 50/60Hz±5% | | 0 | |
| Input voltage factor | distortion | Within 5% | | 0 | |
| Maximum inp power | ut apparent | 110VA 120VA | | Δ | Check the capacity of the UPS when used. |
| Inrush curren | t | 20A within 8ms | | 0 | |
| Rated | 5VDC | 2A | 3.5A | 0 | |
| output current | 24VDC | 1.5A | 0.6A | Δ | Check the power consumption of the entire system. |
| Overcurrent | 5VDC | 2.2A or higher | 3.8A or higher | 0 | |
| protection | 24VDC | 2.3A or higher | 0.66A or higher | _ | |
| Overvoltage | 5VDC | 5.5 to 6.5V | | 0 | |
| protection | 24VDC | _ | | _ | |
| Efficiency | | 65% or more 76% or more | | 0 | |
| Allowable mo power failure | , | Within 20ms | | 0 | |
| Withstand voltage | | 1500VAC for 1 minute between all AC external terminals and the ground 500VAC for 1 minute between all DC external terminals and the ground | 2300VAC rms per minute (altitude 0 to 2000m) between the combined "line input/LG terminals" and the "FG terminal and output" | 0 | |
| Insulation resistance | | $5 M \Omega$ or higher by 500VDC insulation resistance tester between all AC external terminals and the ground | 10MΩ or higher by 500VDC insulation resistance tester between the combined "line input/LG terminals" and the "FG terminal and output", the line input and LG terminals, the output and FG terminals | 0 | |
| Noise immunity | | Noise voltage 1500Vp-p | Noise voltage 1500Vp-p, noise width 1µs, noise frequency 25 to 60Hz (noise simulator condition) Noise immunity test IEC 61000-4-4: 2kV | 0 | |
| Operation indication | | POWER LED | POWER LED (Normal: On (green), Error: Off) | 0 | |
| Fuse | | Glass tube fuse (rated current: 4A, external dimensions: $\phi 6 \times 32$ mm, user-changeable) | Built-in (user-unchangeable) | _ | |

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|---|---|---|---------------|--|
| | | A65P | R62P | - | |
| Contact output | Application | None | ERR. contact | 0 | |
| section | Rated switching voltage, current | | 0.5A at 24VDC | | |
| | Minimum switching load | | 1mA at 5VDC | | |
| | Response time | | Off→on: 10ms or less On→off: 12ms or less | | |
| | Life | | Mechanical: 20 million times or more Electrical: Rated switching voltage/ current, 100 thousand times or more | | |
| Terminal scre | ew size | M4×0.7×6 | M4.0 (M3.5 screw for +24V, 24G terminals) | × | The wiring for the +24V and 24G terminals needs to be changed after replacement. |
| Applicable w | ire size | 0.75 to 2mm | | 0 | |
| Applicable solderless terminal | | R1.25-4, R2-4 RAV1.25-4, RAV2-4 | RAV1.25-4, RAV2-4, thickness of 0.8mm or less, up to two solderless terminal connections per terminal (RAV1.25-3.5, RAV2-3.5, thickness 0.8mm or less for +24V and 24G terminals. Two solderless terminals can be connected to one terminal.) | 0 | For the R62P, use a solderless terminal with insulating coating. |
| Applicable tig | htening | 78 to 118N-cm | M4 screw: 102 to 138N·cm M3.5 screw: 66 to 89N·cm | × | Tighten the screws within the applicable torque range. |
| External dim | ensions | 250(H)×55(W)×121(D)mm | 106(H)×54.6(W)×110(D)mm | _ | |
| Weight | | 0.94kg | 0.45kg | _ | |
| Accessories | | Spare fuse: 1 Short chip for applied voltage select terminal: 1 | None | _ | A spare fuse is not included in the accessories of the MELSEC iQ-R series power supply module since fuses are not user-changeable, nor is the short chip since it is unnecessary to switch operating voltage. |

A1NCPU (power supply part) and R62P

O: Compatible, △: Partly changed, ×: Incompatible, —: Not applicable

| Item | | Specifications | | Compatibility | Precautions |
|----------------------------|---|--|---|---------------|--|
| | | A1NCPU (power supply part) | R62P | | |
| Input power supply voltage | | 100 to 120VAC (+10%, -15%) (85 to 132VAC) | 100 to 240VAC (+10%, -15%) (85 to 264VAC) | 0 | The R62P is a wide-range type applicable to 100 to 240VAC. |
| | | 200 to 240VAC (+10%, -15%) (170 to 264VAC) | | | |
| Input frequen | су | 50/60Hz±5% | | 0 | |
| Input voltage factor | distortion | Within 5% | | 0 | |
| Maximum inp power | ut apparent | 110VA | 120VA | Δ | Check the capacity of the UPS when used. |
| Inrush curren | t | 20A within 8ms | | 0 | |
| Rated | 5VDC | 5A | 3.5A | Δ | Check the power consumption |
| output current | 24VDC | 0.8A | 0.6A | Δ | of the entire system. |
| Overcurrent | 5VDC | 5.5A or higher | 3.8A or higher | 0 | |
| protection | 24VDC | 1.2A or higher | 0.66A or higher | _ | |
| Overvoltage | 5VDC | 5.5 to 6.5V | | 0 | |
| protection | 24VDC | _ | | _ | |
| Efficiency | | 65% or more | 76% or more | 0 | |
| Allowable mo | • | Within 20ms | | 0 | |
| Withstand voltage | | 1500VAC for 1 minute between all AC external terminals and the ground 500VAC for 1 minute between all DC external terminals and the ground | 2300VAC rms per minute (altitude 0 to 2000m) between the combined "line input/LG terminals" and the "FG terminal and output" | 0 | |
| Insulation resistance | | $5 M \Omega$ or higher by 500VDC insulation resistance tester between all AC external terminals and the ground | 10MΩ or higher by 500VDC insulation resistance tester between the combined "line input/LG terminals" and the "FG terminal and output", the line input and LG terminals, the output and FG terminals | 0 | |
| Noise immunity | | Noise voltage 1500Vp-p | Noise voltage 1500Vp-p, noise width 1µs, noise frequency 25 to 60Hz (noise simulator condition) Noise immunity test IEC 61000-4-4: 2kV | 0 | |
| Operation ind | ication | POWER LED | POWER LED (Normal: On (green), Error: Off) | 0 | |
| Fuse | | Glass tube fuse (rated current: 4A, external dimensions: $\phi 6 \times 32$ mm, user-changeable) | Built-in (user-unchangeable) | _ | |
| Contact | Application | None | ERR. contact | 0 | |
| output section | Rated switching voltage, current | | 0.5A at 24VDC | | |
| | Minimum switching load | | 1mA at 5VDC | | |
| | Response time | | Off→on: 10ms or less On→off: 12ms or less | | |
| | Life | | Mechanical: 20 million times or more Electrical: Rated switching voltage/ current, 100 thousand times or | | |

| Item | Specifications | Compatibility | Precautions | | |
|-----------------------------------|---|---|-------------|--|--|
| | A1NCPU (power supply part) | R62P | - | | |
| Terminal screw size | M4×0.7×6 | M4.0 (M3.5 screw for +24V, 24G terminals) | × | The wiring for the +24V and 24G terminals needs to be changed after replacement. | |
| Applicable wire size | 0.75 to 2mm | | 0 | | |
| Applicable solderless terminal | R1.25-4, R2-4 RAV1.25-4, RAV2-4 | RAV1.25-4, RAV2-4, thickness of 0.8mm or less, up to two solderless terminal connections per terminal (RAV1.25-3.5, RAV2-3.5, thickness 0.8mm or less for +24V and 24G terminals. Two solderless terminals can be connected to one terminal.) | 0 | For the R62P, use a solderless terminal with insulating coating. | |
| Applicable tightening torque | 78 to 118N-cm | M4 screw: 102 to 138N-cm M3.5 screw: 66 to 89N-cm | × | Tighten the screws within the applicable torque range. | |
| External dimensions | 250(H)×135(W)×121(D)mm (including the CPU module) | 106(H)×54.6(W)×110(D)mm | _ | The R62P is the single power supply module. | |
| Weight | 1.65kg (including the CPU module) | 0.45kg | _ | The R62P is the single power supply module. | |
| Accessories | Spare fuse: 1 Short chip for applied voltage select terminal: 1 | None | _ | A spare fuse is not included in the accessories of the MELSEC iQ-R series power supply module since fuses are not user-changeable, nor is the short chip since it is unnecessary to switch operating voltage. | |

4.3 Precautions for Replacement

Rated output current

The current consumption differs between the MELSEC-iQ-R series and MELSEC-A/QnA series modules. Calculate the current consumption for the entire system before selecting a power supply module.

Input power supply voltage

The R61P and R62P are the wide-range type power supply module. They support input power supply voltages of both 100VAC and 200VAC.

Power capacity of the supply power

Select a power supply having enough power capacity for a power supply module.

(For an AC power supply module, the power capacity should be twice or more as large as the current consumption of the power supply module, and four times or more for a DC power supply module.)

Large-capacity type power supply module

The MELSEC iQ-R series power supply module, R64P, is the large-capacity type (9A). If the current capacity is not enough, consider using the R64P.



For details on these precautions, refer to the following.

MELSEC iQ-R Module Configuration Manual

5 BASE UNIT AND EXTENSION CABLE REPLACEMENT

5.1 Alternative Model Lists

This section lists alternative models of the MELSEC iQ-R series base units and extension cables in accordance with the specifications of the MELSEC-A/QnA series base units and extension cables.

Select models that best suit your application considering the specifications of the MELSEC-A/QnA series base units and extension cables currently used.

Base units

| Item | MELSEC-A/ QnA series | MELSEC iQ-R series | Specification difference |
|--|----------------------------|--------------------|---|
| Main base unit | A32B A32B-UL A32B-E | R33B | Number of I/O slots: $2 \rightarrow 3$ The base unit installation hole positions are different. An upgrade tool (base adapter) can be used.*1 |
| | A32B-S1 | R33B | Number of I/O slots: $2 \rightarrow 3$ The base unit installation hole positions are different. |
| | A35B A35B-UL A35B-E | R35B | The base unit installation hole positions are different. An upgrade tool (base adapter) can be used.*1 |
| | A38B A38B-UL | R38B | The base unit installation hole positions are different. An upgrade tool (base adapter) can be used.*1 |
| | A38B-E A38HB A38HBEU | R310B-HT | Number of I/O slots: $8 \to 10$ The base unit installation hole positions are different. An upgrade tool (base adapter) can be used.*1 Each module on the R310B-HT is 5mm away from the adjacent ones. |
| Extension base unit (type requiring a power supply | A62B | R65B | Number of I/O slots: $2 \rightarrow 5$ The base unit installation hole positions are different. |
| module) | A65B A65B-UL | R65B | The base unit installation hole positions are different. An upgrade tool (base adapter) can be used.*1 |
| | A68B A68B-UL | R68B | The base unit installation hole positions are different. An upgrade tool (base adapter) can be used.*1 |
| | | R610B-HT | Number of I/O slots: $8 \to 10$ The base unit installation hole positions are different. An upgrade tool (base adapter) can be used.*1 Each module on the R610B-HT is 5mm away from the adjacent ones. |
| Extension base unit (type not requiring power supply module) | A52B | R65B | Power supply module: Not required \rightarrow Required Number of I/O slots: $2 \rightarrow 5$ The base unit installation hole positions are different. |
| | A55B A55B-UL | R65B | Power supply module: Not required → Required The base unit installation hole positions are different. An upgrade tool (base adapter) can be used.*1 |
| | A58B A58B-UL | R68B | Power supply module: Not required → Required The base unit installation hole positions are different. An upgrade tool (base adapter) can be used.*1 |

^{*1} For an upgrade tool, please consult your local Mitsubishi Electric representative.

Extension cables

| Item | MELSEC-A/ QnA series | MELSEC iQ-R series | Specification difference |
|-----------------|-------------------------|--------------------|----------------------------|
| Extension cable | AC06B AC06B-UL | RC06B | _ |
| | AC12B AC12B-UL | RC12B | _ |
| | AC30B AC30B-UL | RC30B | _ |
| | AC50B | RC50B | _ |
| | A1SC05NB | RC06B | Cable length: 0.45m → 0.6m |
| | A1SC07NB | RC06B | Cable length: 0.7m → 0.6m |
| | A1SC30NB | RC30B | _ |
| | A1SC50NB | RC50B | _ |

5.2 Specification Comparison Tables

Base units

A32B/A32B-UL/A32B-E and R33B

○: Compatible, △: Partly changed, ×: Incompatible, —: Not applicable

| Item | Specifications | | Compatibility | Precautions |
|-------------------------------------|------------------------------------|---|---------------|--|
| | A32B/A32B-UL/A32B-E | R33B | 1 | |
| Number of mountable I/O modules | 2 | 3 | Δ | The number of slots increases. |
| Extendable | No | Yes | 0 | |
| Internal current consumption (5VDC) | _ | 0.46A | _ | |
| Installation hole size | φ6 bell-shaped hole (for M5 screw) | M4 screw hole or φ4.5 hole (for M4 screw) | × | Sizes and positions of the base unit installation holes are |
| External dimensions | 250(H)×247(W)×29(D)mm | 101(H)×189(W)×32.5(D)mm | × | different. The upgrade tool base adapter, ERNT-AQB32N + ERNT-1AR5F, can be used.*1 |
| Weight | 0.96kg | 0.31kg | _ | |
| Accessories | None | Installation screw M4 × 14 | _ | |
| DIN rail adapter | Not available | R6DIN1 | _ | |

^{*1} By using the base adapter, the existing installation holes are reusable without rework.

A32B-S1 and R33B

○: Compatible, △: Partly changed, ×: Incompatible, —: Not applicable

| Item | Specifications | Specifications | | Precautions |
|-------------------------------------|------------------------------------|---|---|---|
| | A32B-S1 | R33B | | |
| Number of mountable I/O modules | 2 | 3 | Δ | The number of slots increases. |
| Extendable | Yes | | 0 | |
| Internal current consumption (5VDC) | _ | 0.46A | _ | |
| Installation hole size | φ6 bell-shaped hole (for M5 screw) | M4 screw hole or $\phi 4.5$ hole (for M4 screw) | × | Sizes and positions of the base unit installation holes are |
| External dimensions | 250(H)×268(W)×29(D)mm | 101(H)×189(W)×32.5(D)mm | × | different. |
| Weight | 1.3kg | 0.31kg | _ | |
| Accessories | None | Installation screw M4 × 14 | _ | |
| DIN rail adapter | Not available | R6DIN1 | _ | |

A35B/A35B-UL/A35B-E and R35B

O: Compatible, △: Partly changed, ×: Incompatible, —: Not applicable

| Item | Specifications | | Compatibility | Precautions |
|-------------------------------------|------------------------------------|---|---------------|--|
| | A35B/A35B-UL/A35B-E | R35B | | |
| Number of mountable I/O modules | 5 | | 0 | |
| Extendable | Yes | | 0 | |
| Internal current consumption (5VDC) | _ | 0.58A | _ | |
| Installation hole size | φ6 bell-shaped hole (for M5 screw) | M4 screw hole or ϕ 4.5 hole (for M4 screw) | × | Sizes and positions of the base unit installation holes are |
| External dimensions | 250(H)×382(W)×29(D)mm | 101(H)×245(W)×32.5(D)mm | × | different. The upgrade tool base adapter, ERNT-AQB35N + ERNT-1AR5F, can be used.*1 |
| Weight | 1.5kg | 0.41kg | _ | |
| Accessories | None | Installation screw M4 × 14 | _ | |
| DIN rail adapter | Not available | R6DIN1 | _ | |

^{*1} By using the base adapter, the existing installation holes are reusable without rework.

A38B/A38B-UL/A38B-E/A38HB/A38HBEU and R38B

| Item | Specifications | | Compatibility | Precautions |
|-------------------------------------|---------------------------------------|---|---------------|--|
| | A38B/A38B-UL/A38B-E/ A38HB/A38HBEU | R38B | | |
| Number of mountable I/O modules | 8 | | 0 | |
| Extendable | Yes | | 0 | |
| Internal current consumption (5VDC) | _ | 0.58A | _ | |
| Installation hole size | φ6 bell-shaped hole (for M5 screw) | M4 screw hole or ϕ 4.5 hole (for M4 screw) | × | Sizes and positions of the base unit installation holes are different. The upgrade tool base adapter, ERNT-AQB38N + ERNT-1AR8F, can be used.*1 |
| External dimensions | 250(H)×480(W)×29(D)mm | 101(H)×328(W)×32.5(D)mm | × | |
| Weight | 1.9kg | 0.55kg | _ | |
| Accessories | None | Installation screw M4 × 14 | _ | |
| DIN rail adapter | Not available | R6DIN1 | _ | |

^{*1} By using the base adapter, the existing installation holes are reusable without rework.

A38B/A38B-UL/A38B-E/A38HB/A38HBEU and R310B-HT

O: Compatible, △: Partly changed, ×: Incompatible, —: Not applicable

| Item | Specifications | | Compatibility | Precautions |
|-------------------------------------|---------------------------------------|--|---------------|--|
| | A38B/A38B-UL/A38B-E/ A38HB/A38HBEU | R310B-HT | | |
| Number of mountable I/O modules | 8 | 10 | Δ | The number of slots increases. |
| Extendable | Yes | | 0 | |
| Internal current consumption (5VDC) | _ | 0.82A | _ | |
| Installation hole size | φ6 bell-shaped hole (for M5 screw) | M4 screw hole or \$\phi4.5\$ hole (for M4 screw) | × | Sizes and positions of the base unit installation holes are |
| External dimensions | 250(H)×480(W)×29(D)mm | 101(H)×439(W)×32.5(D)mm | × | different. |
| Weight | 1.9kg | 0.69kg | _ | The upgrade tool base adapter, ERNT-AQB38N + ERNT-1AR10F3, can be used.*1 |
| Accessories | None | Installation screw M4 × 14 | _ | |
| DIN rail adapter | Not available | R6DIN1 | _ | |

^{*1} By using the base adapter, the existing installation holes are reusable without rework.

A62B and R65B

| Item | Specifications | | Compatibility | Precautions |
|-------------------------------------|------------------------------------|---|---------------|---|
| | A62B | R65B | | |
| Number of mountable I/O modules | 2 | 5 | Δ | The number of slots increases. |
| Extendable | Yes | | 0 | |
| Internal current consumption (5VDC) | _ | 0.70A | _ | |
| Installation hole size | φ6 bell-shaped hole (for M5 screw) | M4 screw hole or $\phi 4.5$ hole (for M4 screw) | × | Sizes and positions of the base unit installation holes are |
| External dimensions | 250(H)×283(W)×29(D)mm | 101(H)×245(W)×32.5(D)mm | × | different. |
| Weight | 1.1kg | 0.41kg | _ | |
| Accessories | None | Installation screw M4 × 14 | _ | |
| DIN rail adapter | Not available | R6DIN1 | _ | |

A65B/A65B-UL and R65B

O: Compatible, △: Partly changed, ×: Incompatible, —: Not applicable

| Item | Specifications | Compatibility | Precautions | |
|-------------------------------------|------------------------------------|---|-------------|--|
| | A65B/A65B-UL | R65B | | |
| Number of mountable I/O modules | 5 | | 0 | |
| Extendable | Yes | | 0 | |
| Internal current consumption (5VDC) | _ | 0.70A | _ | |
| Installation hole size | φ6 bell-shaped hole (for M5 screw) | M4 screw hole or $\phi 4.5$ hole (for M4 screw) | × | Sizes and positions of the base unit installation holes are |
| External dimensions | 250(H)×352(W)×29(D)mm | 101(H)×245(W)×32.5(D)mm | × | different. The upgrade tool base adapter, ERNT-AQB65N + ERNT-1AR5F, can be used.*1 |
| Weight | 1.4kg | 0.41kg | _ | |
| Accessories | None | Installation screw M4 × 14 | _ | |
| DIN rail adapter | Not available | R6DIN1 | _ | |

^{*1} By using the base adapter, the existing installation holes are reusable without rework.

A68B/A68B-UL and R68B

| Item | Specifications | | Compatibility | Precautions |
|-------------------------------------|------------------------------------|---|---------------|--|
| | A68B/A68B-UL | R68B | | |
| Number of mountable I/O modules | 8 | | 0 | |
| Extendable | Yes | | 0 | |
| Internal current consumption (5VDC) | _ | 0.81A | _ | |
| Installation hole size | φ6 bell-shaped hole (for M5 screw) | M4 screw hole or $\phi 4.5$ hole (for M4 screw) | × | Sizes and positions of the base unit installation holes are |
| External dimensions | 250(H)×466(W)×29(D)mm | 101(H)×328(W)×32.5(D)mm | × | different. The upgrade tool base adapter, ERNT-AQB68N + ERNT-1AR8F, can be used.*1 |
| Weight | 1.9kg | 0.55kg | _ | |
| Accessories | None | Installation screw M4 × 14 | _ | |
| DIN rail adapter | Not available | R6DIN1 | _ | |

^{*1} By using the base adapter, the existing installation holes are reusable without rework.

A68B/A68B-UL and R610B-HT

O: Compatible, △: Partly changed, ×: Incompatible, —: Not applicable

| Item | Specifications | | Compatibility | Precautions |
|-------------------------------------|------------------------------------|---|---------------|--|
| | A68B/A68B-UL | R610B-HT | | |
| Number of mountable I/O modules | 8 | 10 | Δ | The number of slots increases. |
| Extendable | Yes | | 0 | |
| Internal current consumption (5VDC) | _ | 0.85A | _ | |
| Installation hole size | φ6 bell-shaped hole (for M5 screw) | M4 screw hole or φ4.5 hole (for M4 screw) | × | Sizes and positions of the base unit installation holes are |
| External dimensions | 250(H)×466(W)×29(D)mm | 101(H)×439(W)×32.5(D)mm | × | different. The upgrade tool base adapter, ERNT-AQB68N + ERNT-1AR10F6, can be used.*1 |
| Weight | 1.9kg | 0.72kg | _ | |
| Accessories | None | Installation screw M4 × 14 | _ | |
| DIN rail adapter | Not available | R6DIN1 | _ | |

^{*1} By using the base adapter, the existing installation holes are reusable without rework.

A52B and R65B

| Item | Specifications | | Compatibility | Precautions |
|-------------------------------------|------------------------------------|---|---------------|---|
| | A52B | R65B | | |
| Number of mountable I/O modules | 2 | 5 | Δ | The power supply module is required after replacement. The number of slots increases. |
| Extendable | Yes | | 0 | |
| Internal current consumption (5VDC) | _ | 0.70A | _ | |
| Installation hole size | φ6 bell-shaped hole (for M5 screw) | M4 screw hole or $\phi 4.5$ hole (for M4 screw) | × | Sizes and positions of the base unit installation holes are |
| External dimensions | 250(H)×183(W)×29(D)mm | 101(H)×245(W)×32.5(D)mm | × | different. |
| Weight | 1.0kg | 0.41kg | _ | |
| Accessories | Dustproof cover | Installation screw M4 × 14 | _ | |
| DIN rail adapter | Not available | R6DIN1 | _ | |

A55B/A55B-UL and R65B

O: Compatible, △: Partly changed, ×: Incompatible, —: Not applicable

| Item | Specifications | | Compatibility | Precautions |
|-------------------------------------|------------------------------------|---|---------------|--|
| | A55B/A55B-UL | R65B | | |
| Number of mountable I/O modules | 5 | | Δ | The power supply module is required after replacement. |
| Extendable | Yes | | 0 | |
| Internal current consumption (5VDC) | _ | 0.70A | _ | |
| Installation hole size | φ6 bell-shaped hole (for M5 screw) | M4 screw hole or ϕ 4.5 hole (for M4 screw) | × | Sizes and positions of the base unit installation holes are |
| External dimensions | 250(H)×297(W)×29(D)mm | 101(H)×245(W)×32.5(D)mm | × | different. The upgrade tool base adapter, ERNT-AQB55N + ERNT-1AR5F, can be used.*1 |
| Weight | 1.2kg | 0.41kg | _ | |
| Accessories | Dustproof cover | Installation screw M4 × 14 | _ | |
| DIN rail adapter | Not available | R6DIN1 | _ | |

^{*1} By using the base adapter, the existing installation holes are reusable without rework.

A58B/A58B-UL and R68B

| Item | Specifications | | Compatibility | Precautions |
|-------------------------------------|------------------------------------|---|---------------|--|
| | A58B/A58B-UL | R68B | | |
| Number of mountable I/O modules | 8 | | Δ | The power supply module is required after replacement. |
| Extendable | Yes | | 0 | |
| Internal current consumption (5VDC) | _ | 0.81A | _ | |
| Installation hole size | φ6 bell-shaped hole (for M5 screw) | M4 screw hole or $\phi 4.5$ hole (for M4 screw) | × | Sizes and positions of the base unit installation holes are |
| External dimensions | 250(H)×411(W)×29(D)mm | 101(H)×328(W)×32.5(D)mm | × | different. The upgrade tool base adapter, ERNT-AQB58N + ERNT-1AR8F, can be used.*1 |
| Weight | 1.7kg | 0.55kg | _ | |
| Accessories | Dustproof cover | Installation screw M4 × 14 | _ | |
| DIN rail adapter | Not available | R6DIN1 | - | |

^{*1} By using the base adapter, the existing installation holes are reusable without rework.

Extension cables

 $\bigcirc : \textbf{Compatible}, \ \triangle : \textbf{Partly changed}, \ \times : \textbf{Incompatible}, \ - : \textbf{Not applicable}$

| Item | | Model | | | Compatibility Precautions | |
|--------------|-------|----------------------|------------------------|------------|---------------------------|---|
| | | MELSEC-A/QnA series | | MELSEC iQ- | | |
| | | A main - A extension | AnS main - A extension | R series | | |
| Cable length | 0.45m | _ | A1SC05NB | RC06B | Δ | The cable length is changed from 0.45m to 0.6m. |
| | 0.6m | AC06B | _ | RC06B | 0 | _ |
| | 0.7m | _ | A1SC07NB | RC06B | Δ | The cable length is changed from 0.7m to 0.6m. |
| | 1.2m | AC12B | _ | RC12B | 0 | _ |
| | 3.0m | AC30B | A1SC30NB | RC30B | 0 | _ |
| | 5.0m | AC50B | A1SC50NB | RC50B | 0 | _ |

5.3 Precautions for Replacement

Base units

Settings of number of slots in engineering tools

In the engineering tools for the MELSEC-A/QnA series, the number of slots is fixed to eight regardless of the actual number of slots on the base unit used. In the engineering tool of the MELSEC iQ-R series, however, the actual number of slots needs to be set.

When the base unit is replaced with the one having slots other than eight, set the number of slots.

Base unit installation holes

Since the installation hole sizes differ between the MELSEC iQ-R series and MELSEC-A/QnA series, reworking installation holes to fix the base unit on the control panel is necessary.

By using the base adapter, the existing installation holes are reusable without rework.

Internal current consumption (5VDC)

MELSEC iQ-R series base units consume 5VDC internally as well as CPU modules and I/O modules.

When calculating the internal current consumption (5VDC) of the entire system, consider the current consumption of the base unit.

Extension cables

Overall extension cable distance

Extension cables can be used up to 20.0m for the MELSEC iQ-R series while they can be used up to 6.6m for the MELSEC-A/QnA series. Select optimum cables for your system.

Extension level setting

The extension level setting is not required in the MELSEC iQ-R series system while it needs to be configured with connector pins in the MELSEC-A/QnA series system.



For details on these precautions, refer to the following.

MELSEC iQ-R Module Configuration Manual

6 MEMORY AND BATTERY REPLACEMENT

6.1 Alternative Model List

This section lists alternative models of the MELSEC iQ-R series memory and batteries in accordance with the specifications of the MELSEC-A/QnA series memory and batteries. Select models that best suit your application considering the specifications of the MELSEC-A/QnA series memory and batteries currently used.

| Item | MELSEC-A/QnA series | MELSEC iQ-R series | Specification difference | |
|-----------------|---------------------|-----------------------|---|--|
| Memory cassette | A3NMCA-0 | Not required | The RCPU is equipped with built-in program memory. | |
| | A3NMCA-2 | - | Use SD memory cards and extended SRAM cassettes as required. | |
| | A3NMCA-4 | | | |
| | A3NMCA-8 | | | |
| | A3NMCA-16 | | | |
| | A3NMCA-24 | | | |
| | A3NMCA-40 | | | |
| | A3NMCA-56 | - | | |
| | A3NMCA-2-UL | | | |
| | A3NMCA-4-UL | | | |
| | A3NMCA-8-UL | | | |
| | A3NMCA-16-UL | | | |
| | A3NMCA-24-UL | - | | |
| | A3NMCA-40-UL | - - - - - | | |
| | A3AMCA-96 | | | |
| | A4UMCA-128 | | | |
| | A4UMCA-8E | | | |
| | A4UMCA-32E | | | |
| | A4UMCA-128E | | | |
| Memory card | Q1MEM-64S | Not required | Use SD memory cards and extended SRAM cassettes as required. | |
| | Q1MEM-128S | | | |
| | Q1MEM-256S | | | |
| | Q1MEM-512S | | | |
| | Q1MEM-1MS | | | |
| | Q1MEM-2MS | | | |
| | Q1MEM-64SE | | | |
| | Q1MEM-128SE | † | | |
| | Q1MEM-256SE | | | |
| | Q1MEM-512SE | | | |
| | Q1MEM-1MSE | | | |
| IC-RAM memory | 4KRAM | Not required | The RCPU is equipped with built-in program memory. Use SD memory cards and extended SRAM cassettes as required. | |
| EP-ROM memory | 4KEROM | Not required | Use SD memory cards and extended SRAM cassettes as required. | |
| | 4KROM | - | | |
| | 8KROM | - | | |
| | 16KROM | 1 | | |
| | 32KROM | 1 | | |
| | 64KROM | 1 | | |
| Battery*1*2 | A6BAT | Q6BAT | _ | |
| | A8BAT | Q7BAT |] | |
| | A10BAT | Q7BATN | | |

- *1 The R00CPU, R01CPU, and R02CPU do not require a battery. However, purchase the coin battery (FX3U-32BL) if retaining the clock data for more than 10 days is required. The clock data for five years can be retained.
- *2 For the R04CPU, R08CPU, and R16CPU, the battery-less option cassette (NZ1BLC) eliminates the need for batteries. However, the clock data is no longer retained without a battery.

6.2 Precautions for Replacement

Extended SRAM cassette

When there is not enough space on the standard RAM after replacement, for example, when multiple blocks of extended file register has been used, consider using an extended SRAM cassette.

Battery

Replace the MELSEC-A series batteries (A6BAT, A8BAT and A10BAT) with the MELSEC iQ-R series batteries (Q6BAT, Q7BAT, and Q7BATN). (The R00CPU, R01CPU, and R02CPU do not require a battery. The R04CPU, R08CPU, and R16CPU include a Q6BAT battery as standard equipment.)

The battery life varies depending on operating conditions. For details, refer to the MELSEC iQ-R Module Configuration Manual.



For details on these precautions, refer to the following.

MELSEC iQ-R Module Configuration Manual

MELSEC iQ-R CPU Module User's Manual (Startup)

7 ANALOG I/O MODULE REPLACEMENT

7.1 Alternative Model List

This section lists alternative models of the MELSEC iQ-R series analog I/O modules in accordance with the specifications and functions of the MELSEC-A/QnA series analog I/O modules.

Select models that best suit your application considering the scope of control of MELSEC-A/QnA series analog I/O modules currently used, as well as the system specifications and extensibility after replacement.

| Item | MELSEC-A/QnA series | MELSEC iQ-R series | Specification difference |
|------------------------|---------------------|--------------------|---|
| Analog input module | A616AD | R60ADV8 R60ADI8 | External wiring: Changed (An upgrade tool conversion adapter can be used.*1) Number of slots: Changed (2 modules are required.) Programs: The number of occupied I/O points is changed, I/O signals are changed, buffer memory addresses are changed, resolution (digital output value range) is changed. Specifications: 8CH/module, input signals (either V or I input, minus current not applicable), I/O characteristics are changed, resolution is changed, conversion speed is changed. Functions: Changed (direct access processing not available) |
| | A68AD | R60ADV8 R60ADI8 | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: The number of occupied I/O points is changed, I/O signals are changed, buffer memory addresses are changed, resolution (digital output value range) is changed. (4) Specifications: Input signals (either V or I input, minus current not applicable), I/O characteristics are changed, resolution is changed, conversion speed is changed. (5) Functions: Not changed |
| | A68AD-S2 | R60ADV8 R60ADI8 | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: The number of occupied I/O points is changed, I/O signals are changed, buffer memory addresses are changed, resolution (digital output value range) is changed. (4) Specifications: Input signals (either V or I input, minus current not applicable), I/O characteristics are changed, resolution is changed, conversion speed is changed. (5) Functions: Not changed |
| | A68ADN | R60ADV8 R60ADI8 | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: The number of occupied I/O points is changed, I/O signals are changed, buffer memory addresses are changed, resolution (digital output value range) is changed. (4) Specifications: Input signals (either V or I input, minus current not applicable), I/O characteristics are changed, resolution is changed, conversion speed is changed. (5) Functions: Not changed |
| Analog output module | A616DAV | R60DAV8 | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Changed (2 modules are required.) (3) Programs: The number of occupied I/O points is changed, I/O signals are changed, buffer memory addresses are changed, resolution (digital output value range) is changed. (4) Specifications: 8CH/module, I/O characteristics are changed, resolution is changed, conversion speed is changed, specifications of the external power supply is changed. (5) Functions: Not changed |
| | A616DAI | R60DAI8 | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Changed (2 modules are required.) (3) Programs: The number of occupied I/O points is changed, I/O signals are changed, buffer memory addresses are changed, resolution (digital output value range) is changed. (4) Specifications: 8CH/module, I/O characteristics are changed, resolution is changed, conversion speed is changed, specifications of the external power supply is changed. (5) Functions: Not changed |

| Item | MELSEC-A/QnA series | MELSEC iQ-R series | Specification difference |
|--------------------------|---|--------------------|--|
| Analog output module | A62DA | R60DA4 | External wiring: Changed (An upgrade tool conversion adapter can be used.*1) Number of slots: Not changed Programs: The number of occupied I/O points is changed, I/O signals are changed, buffer memory addresses are changed, resolution (digital output value range) is changed. Specifications: 4CH/module, output current (minus current not applicable), I/O characteristics are changed, resolution is changed, conversion speed is changed, specifications of the external power supply is changed. Functions: Not changed |
| | A62DA-S1 | R60DA4 | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: The number of occupied I/O points is changed, I/O signals are changed, buffer memory addresses are changed, resolution (digital output value range) is changed. (4) Specifications: 4CH/module, I/O characteristics are changed, resolution is changed, conversion speed is changed, specifications of the external power supply is changed. (5) Functions: Not changed |
| | A68DAV | R60DAV8 | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: The number of occupied I/O points is changed, I/O signals are changed, buffer memory addresses are changed, resolution (digital output value range) is changed. (4) Specifications: I/O characteristics are changed, resolution is changed, conversion speed is changed, specifications of the external power supply is changed. (5) Functions: Not changed |
| | A68DAI | R60DAI8 | (1) External wiring: Changed (An upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: The number of occupied I/O points is changed, I/O signals are changed, buffer memory addresses are changed, resolution (digital output value range) is changed. (4) Specifications: I/O characteristics are changed, resolution is changed, conversion speed is changed, specifications of the external power supply is changed. (5) Functions: Not changed |
| | A68DAI-S1 | R60DAI8 | External wiring: Changed (An upgrade tool conversion adapter can be used.*1) Number of slots: Not changed Programs: The number of occupied I/O points is changed, I/O signals are changed, buffer memory addresses are changed, resolution (digital output value range) is changed. Specifications: I/O characteristics are changed, resolution is changed, conversion speed is changed, specifications of the external power supply is changed. Functions: Not changed |
| Temperature input module | A616TD +A60MXT(N) | R60TD8-G | (1) External wiring: Changed (2) Number of slots: Changed (Multiple modules are required.) (3) Programs: The number of occupied I/O points is changed, I/O signals are changed, buffer memory addresses are changed. (4) Specifications: 8CH/module, applicable thermocouples are changed, conversion speed is changed. (5) Functions: Changed (transformer isolation between channels) |
| | A68RD3N | R60RD8-G | (1) External wiring: Changed (2) Number of slots: Not changed (3) Programs: The number of occupied I/O points is changed, I/O signals are changed, buffer memory addresses are changed. (4) Specifications: Applicable RTDs are added (Ni100 and Pt50), conversion speed is changed, resolution is changed. (5) Functions: Changed (32-bit output not available, transformer isolation between channels) |
| | A68RD4N | None | _ |
| Multiplexer | A60MX A60MXR A60MXRN A60MXT A60MXTN | None | _ |

^{*1} For an upgrade tool, please consult your local Mitsubishi Electric representative.

7.2 Specification Comparison Tables

Analog input modules

A616AD and R60ADV8/R60ADI8

O: Compatible, △: Partly changed, ×: Incompatible, —: Not applicable

| Item | Specifications | | Compatibility | Precautions |
|--|---|---|---------------|---|
| | A616AD | R60ADV8/R60ADI8 | | |
| Number of analog input channels | | | Δ | When 9 or more channels are required, use multiple pieces of the R60ADV8/R60ADI8. |
| Analog input voltage | -10 to +10VDC (input resistance: $1M\Omega$) | R60ADV8: -10 to 10VDC (input resistance: $1M\Omega$) R60ADI8: — | Δ | Use either voltage input or current input for one module. A minus current cannot be used. |
| Analog input current | -20 to +20mADC (input resistance 250 Ω) | R60ADV8: — R60ADI8: 0 to 20mADC (input resistance 250Ω) | | |
| Digital output value | 16-bit signed binary (data part: 12 bit): -48 to 4047, -2048 to 2047 The range can be set for each channel. | 16-bit signed binary: -32768 to 32767 | Δ | Use the scaling function to convert values to the same range as the A616AD. Converted values are stored in the buffer memory area 'Digital operation value'. |
| I/O characteristics, resolution | *1 | *2 | Δ | Use the scaling function to convert values to the same range as the A616AD. Converted values are stored in the buffer memory area 'Digital operation value'. |
| Overall accuracy (accuracy to full-scale) | When using the A616AD only 0 to 10V, -10 to 10V, -5 to 5V, -20 to 20mA: $\pm 0.3\%$ (± 12 digit) 0 to 5V, 1 to 5V, 0 to 20mA, 4 to 20mA: $\pm 0.6\%$ (± 24 digit) When using the A616AD combined with the A60MX, the A60MXR, or the A60MXRN: the accuracy of each range of the A616AD is $\pm 0.3\%$ (± 12 digit). | Ambient temperature 25±5°C: Within ±0.1% (±32digit) Ambient temperature 0 to 55°C: Within ±0.3% (±96digit) | 0 | The accuracy to full-scale is applied to the A616AD, while the accuracy to maximum digital output value is applied to the R60ADV8/R60ADI8. |
| Conversion speed | When using the A616AD only: 1ms/channel When using the A616AD combined with the A60MX: 1ms/channel When using the A616AD combined with the A60MXR(N): 1ms/channel (at sampling processing), 7.0ms/ channel (at direct access processing) | 80μs/channel | 0 | Comparing with the A616AD, the conversion speed of the R60ADV8/R60ADI8 is faster. Therefore, for the R60ADV8/R60ADI8, some noise may be taker in as analog signals, which is not the case with the A616AD. In this case, use the averaging processing function to eliminate noise effect. |
| Absolute maximum input | Voltage: ±15V, current: ±30mA | R60ADV8: Voltage: ±15V R60ADI8: Current: 30mA | 0 | |
| Number of writes of offset/gain values | _ | 50000 times maximum | _ | |
| Isolation method | Between the input terminal and programmable controller: Photocoupler Between channels: Non-isolation (1ΜΩ resistor isolation) | Between the I/O terminal and programmable controller power supply: Photocoupler Between input channels: Non-isolation | 0 | |
| External interface | 38-point terminal block (M3×6 screws) | 18-point terminal block (M3 screws) | × | Wiring needs to be changed after replacement. |
| Applicable wire size | 0.75 to 2mm | 0.3 to 0.75mm (22 to 18 AWG) | × | By using the upgrade tool |
| Applicable solderless terminal | V1.25-3, V1.25-YS3A, V2-S3, V2- YS3A | R1.25-3 (solderless terminal with an insulation sleeve cannot be used) | × | conversion adapter (ERNT- 1AR616AD), the existing external wiring and terminal blocks in the existing system can be used.*3 |

| Item | Specifications | | Compatibility | Precautions |
|-------------------------------------|---|--|---------------|---|
| | A616AD | R60ADV8/R60ADI8 | | |
| Number of occupied I/O points | 32 points (I/O assignment: Special 32 points) | 16 points (I/O assignment: Intelligent 16 points) | Δ | The number of occupied I/O points is changed after replacement. |
| Internal current consumption (5VDC) | 1A | R60ADV8: 0.23A R60ADI8: 0.22A | _ | |
| External dimensions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | 0.85kg | 0.12kg | _ | |

^{*1} The following table lists the I/O characteristics and maximum resolution values of the A616AD.

| Input | Analog input range | Digital output value | Maximum resolution |
|--------------|--------------------|-------------------------------|--------------------|
| Voltage (V) | 0 to +10 | 0 to 4000 | 2.5mV (1/4000) |
| | 0 to +5 | -2000 to 2000 | 1.25mV (1/4000) |
| | +1 to +5 | | 1.0mV (1/4000) |
| | -10 to +10 | | 5.0mV (1/4000) |
| | -5 to +5 | | 2.5mV (1/4000) |
| Current (mA) | 0 to +20 | 0 to 2000 -2000 to 0 | 10μA (1/2000) |
| | 0 to +20 | 0 to 4000 | 5μA (1/4000) |
| | +4 to +20 | -2000 to 2000 | 4μA (1/4000) |
| | -20 to +20 | 1000 to 3000 -1000 to 1000 | 20μA (1/2000) |
| | -20 to +20 | 0 to 4000 -2000 to 2000 | 10μA (1/4000) |

 $^{^{*}2}$ The following table lists the I/O characteristics and maximum resolution values of the R60ADV8/R60ADI8. R60ADV8

| Analog input range | | Digital output value | Resolution |
|--------------------|-------------------------|----------------------|------------|
| Voltage | 0 to 10V | 0 to 32000 | 312.5μV |
| | 0 to 5V | | 156.3μV |
| | 1 to 5V | | 125.0μV |
| | 1 to 5V (extended mode) | -8000 to 32000 | 125.0μV |
| | -10 to 10V | -32000 to 32000 | 312.5μV |
| | User range setting | | 47.7μV |

R60ADI8

| Analog input range | | Digital output value | Resolution |
|--------------------|---------------------------|----------------------|------------|
| Current | 0 to 20mA | 0 to 32000 | 625.0nA |
| | 4 to 20mA | | 500.0nA |
| | 4 to 20mA (extended mode) | -8000 to 32000 | 500.0nA |
| | User range setting | -32000 to 32000 | 190.7nA |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

A68AD and R60ADV8/R60ADI8

| Item | Specifications | | Compatibility | Precautions | |
|---|--|---|-----------------------|---|--|
| | A68AD R60ADV8/R60ADI8 | | | | |
| Number of analog input channels | 8 channels | | 0 | | |
| (input resistance: hardware version | | R60ADV8: -10 to 10VDC (input resistance: $1M\Omega$) R60ADI8: — | Δ | Use either voltage input or current input for one module. A minus current cannot be used. | |
| Analog input current | +4 to +20mADC (input resistance 250 Ω) (The range of -20 to +20mA can be used as well.) | R60ADV8: — R60ADI8: 0 to 20mADC (input resistance 250 Ω) | | | |
| Digital output value | 16-bit signed binary: -2048 to +2047 | 16-bit signed binary: -32768 to 32767 | Δ | Use the scaling function to conver values to the same range as the A68AD. Converted values are stored in the buffer memory area 'Digital operation value'. | |
| I/O characteristics, resolution | *1 | *2 | Δ | Use the scaling function to convervalues to the same range as the A68AD. Converted values are stored in the buffer memory area 'Digital operation value'. | |
| Overall accuracy (accuracy to maximum digital output value) | ±1% (±20digit) | Ambient temperature 25±5°C: Within ±0.1% (±32digit) Ambient temperature 0 to 55°C: Within ±0.3% (±96digit) | 0 | | |
| Conversion speed | 2.5ms/channel maximum | 80μs/channel | 0 | Comparing with the A68AD, the conversion speed of the R60ADV8 R60ADI8 is faster. Therefore, for the R60ADV8/R60ADI8, some noise may be take in as analog signals, which is not the case with the A68AD. In this case, use the averaging processin function to eliminate noise effect. | |
| Absolute maximum input | Voltage: ±15V, current: ±30mA | R60ADV8: Voltage: ±15V R60ADI8: Current: 30mA | 0 | | |
| Number of writes of offset/gain values | _ | 50000 times maximum | _ | | |
| Isolation method | Between the input terminal and programmable controller: Photocoupler Between channels: Non-isolation | Between the I/O terminal and programmable controller power supply: Photocoupler Between input channels: Non-isolation | 0 | | |
| External interface | 38-point terminal block (M3×6 screws) | 18-point terminal block (M3 screws) | × | Wiring needs to be changed after replacement. | |
| Applicable wire size | 0.75 to 2mm | 0.3 to 0.75mm (22 to 18 AWG) | × | By using the upgrade tool | |
| Applicable solderless terminal | V1.25-3, V1.25-YS3A, V2-S3, V2- YS3A | R1.25-3 (solderless terminal with an insulation sleeve cannot be used) | TAROOAD), the existin | | |
| Number of occupied I/O points | 32 points (I/O assignment: Special 32 points) | 16 points (I/O assignment: Intelligent 16 points) | Δ | The number of occupied I/O points is changed after replacement. | |
| Internal current consumption (5VDC) | Hardware version K or later: 0.39A, Hardware version J or earlier: 0.9A | R60ADV8: 0.23A R60ADI8: 0.22A | _ | | |
| External dimensions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | | |
| Weight | Hardware version K or later: 0.3kg, Hardware version J or earlier: 0.6kg | 0.12kg | _ | | |

*1 The following table lists the I/O characteristics and maximum resolution values of the A68AD.

| Analog input value | Digital output value | Maximum resolution |
|--------------------|----------------------|-----------------------|
| +10V | +2000 | Voltage 5mV (1/2000) |
| +5V or +20mA | +1000 | Current 20μA (1/1000) |
| 0V or +4mA | ±0 | |
| -5V or -12mA | -1000 | |
| -10V | -2000 | |

*2 The following table lists the I/O characteristics and maximum resolution values of the R60ADV8/R60ADI8.

R60ADV8

| Analog in | put range | Digital output value | Resolution |
|-----------|-------------------------|----------------------|------------|
| Voltage | 0 to 10V | 0 to 32000 | 312.5μV |
| | 0 to 5V | | 156.3μV |
| | 1 to 5V | | 125.0μV |
| | 1 to 5V (extended mode) | -8000 to 32000 | 125.0μV |
| | -10 to 10V | -32000 to 32000 | 312.5μV |
| | User range setting | | 47.7μV |

R60ADI8

| Analog input range | | Digital output value | Resolution |
|--------------------|---------------------------|----------------------|------------|
| Current | 0 to 20mA | 0 to 32000 6 | 625.0nA |
| | 4 to 20mA | | 500.0nA |
| | 4 to 20mA (extended mode) | -8000 to 32000 | 500.0nA |
| | User range setting | -32000 to 32000 | 190.7nA |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

A68AD-S2 and R60ADV8/R60ADI8

| Item | Specifications | | Compatibility | Precautions | |
|---|---|---|---------------|---|--|
| | A68AD-S2 | R60ADV8/R60ADI8 | | | |
| Number of analog input channels | 8 channels | | 0 | | |
| Analog input voltage | -10 to +10VDC (input resistance: hardware version K or later: $1M\Omega$, hardware version J or earlier: $30k\Omega$) | R60ADV8: -10 to 10VDC (input resistance: $1M\Omega$) R60ADI8: — | Δ | Use either voltage input or current input for one module. A minus current cannot be used. | |
| Analog input current | +4 to +20mADC (input resistance 250 Ω) (The range of -20 to +20mA can be used as well.) | R60ADV8: — R60ADI8: 0 to 20mADC (input resistance 250Ω) | | | |
| Digital output value | 16-bit signed binary: -2048 to +2047 | 16-bit signed binary: -32768 to 32767 | Δ | Use the scaling function to convert values to the same range as the A68AD-S2. Converted values are stored in the buffer memory area 'Digital operation value'. | |
| I/O characteristics, resolution | *1 | *2 | Δ | Use the scaling function to convert values to the same range as the A68AD-S2. Converted values are stored in the buffer memory area 'Digital operation value'. | |
| Overall accuracy (accuracy to maximum digital output value) | ±1% (±20digit) | Ambient temperature 25±5°C: Within ±0.1% (±32digit) Ambient temperature 0 to 55°C: Within ±0.3% (±96digit) | 0 | | |
| Conversion speed | 2.5ms/channel maximum | 80μs/channel | 0 | Comparing with the A68AD-S2, the conversion speed of the R60ADV8/R60ADI8 is faster. Therefore, for the R60ADV8/R60ADI8, some noise may be taken in as analog signals, which is not the case with the A68AD-S2. In this case, use the averaging processing function to eliminate noise effect. | |
| Absolute maximum input | Voltage: ±15V, current: ±30mA | R60ADV8: Voltage: ±15V R60ADI8: Current: 30mA | 0 | | |
| Number of writes of offset/gain values | _ | 50000 times maximum | _ | | |
| Isolation method | Between the input terminal and programmable controller: Photocoupler Between channels: Non-isolation | Between the I/O terminal and programmable controller power supply: Photocoupler Between input channels: Non-isolation | 0 | | |
| External interface | 38-point terminal block (M3×6 screws) | 18-point terminal block (M3 screws) | × | Wiring needs to be changed after replacement. | |
| Applicable wire size | 0.75 to 2mm | 0.3 to 0.75mm (22 to 18 AWG) | × | By using the upgrade tool | |
| Applicable solderless terminal | V1.25-3, V1.25-YS3A, V2-S3, V2- YS3A | R1.25-3 (solderless terminal with an insulation sleeve cannot be used) | × | conversion adapter (ERNT- 1AR68AD), the existing external wiring and terminal blocks in the existing system can be used.*3 | |
| Number of occupied I/O points | 32 points (I/O assignment: Special 32 points) | 16 points (I/O assignment: Intelligent 16 points) | Δ | The number of occupied I/O points is changed after replacement. | |
| Internal current consumption (5VDC) | Hardware version K or later: 0.39A, Hardware version J or earlier: 0.9A | R60ADV8: 0.23A R60ADI8: 0.22A | _ | | |
| External dimensions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | | |
| Weight | Hardware version K or later: 0.3kg, Hardware version J or earlier: 0.6kg | 0.12kg | _ | | |

*1 The following table lists the I/O characteristics and maximum resolution values of the A68AD-S2.

| Analog input value | Digital output value | Maximum resolution |
|--------------------|----------------------|-----------------------|
| +10V | +2000 | Voltage 5mV (1/2000) |
| +5V or +20mA | +1000 | Current 20μA (1/1000) |
| 0V or +4mA | ±0 | |
| -5V or -12mA | -1000 | |
| -10V | -2000 | |

*2 The following table lists the I/O characteristics and maximum resolution values of the R60ADV8/R60ADI8.

R60ADV8

| Analog in | put range | Digital output value | Resolution |
|-----------|-------------------------|----------------------|------------|
| Voltage | 0 to 10V | 0 to 32000 | 312.5μV |
| | 0 to 5V | | 156.3μV |
| | 1 to 5V | | 125.0μV |
| | 1 to 5V (extended mode) | -8000 to 32000 | 125.0μV |
| | -10 to 10V | -32000 to 32000 | 312.5μV |
| | User range setting | | 47.7μV |

R60ADI8

| Analog input range | | Digital output value | Resolution |
|--------------------|---------------------------|----------------------|------------|
| Current | 0 to 20mA | 0 to 32000 6 | 625.0nA |
| | 4 to 20mA | | 500.0nA |
| | 4 to 20mA (extended mode) | -8000 to 32000 | 500.0nA |
| | User range setting | -32000 to 32000 | 190.7nA |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

A68ADN and R60ADV8/R60ADI8

 $\bigcirc : \textbf{Compatible}, \ \triangle : \textbf{Partly changed}, \ \times : \textbf{Incompatible}, \ -\!\!\!-\!\!\!: \textbf{Not applicable}$

| Item | Specifications | | Compatibility | Precautions | |
|---|--|---|---------------|--|--|
| | A68ADN | R60ADV8/R60ADI8 | | | |
| Number of analog input channels | 8 channels | | 0 | | |
| Analog input voltage | -10 to +10VDC (input resistance: $1M\Omega$) | R60ADV8: -10 to 10VDC (input resistance: $1M\Omega$) R60ADI8: — | Δ | Use either voltage input or current input for one module. A minus current cannot be used. | |
| Analog input current | -20 to +20mADC (input resistance 250Ω) | R60ADV8: — R60ADI8: 0 to 20mADC (input resistance 250Ω) | | | |
| Digital output value | 16-bit signed binary When 1/4000 is set: -4096 to +4095 When 1/8000 is set: -8192 to +8191 When 1/12000 is set: -12288 to +12287 | 16-bit signed binary: -32768 to 32767 | Δ | Use the scaling function to convert values to the same range as the A68ADN. Converted values are stored in the buffer memory area 'Digital operation value'. | |
| I/O characteristics, resolution | *1 | *2 | Δ | Use the scaling function to convert values to the same range as the A68ADN. Converted values are stored in the buffer memory area 'Digital operation value'. | |
| Overall accuracy (accuracy to maximum digital output value) | ±1% When 1/4000 is set: ±40digit When 1/8000 is set: ±80digit When 1/12000 is set: ±120digit | Ambient temperature 25±5°C: Within ±0.1% (±32digit) Ambient temperature 0 to 55°C: Within ±0.3% (±96digit) | 0 | | |
| Conversion speed | 20ms/channel | 80μs/channel | 0 | Comparing with the A68ADN, the conversion speed of the R60ADV8/R60ADI8 is faster. Therefore, for the R60ADV8/R60ADI8, some noise may be taken in as analog signals, which is not the case with the A68ADN. In this case, use the averaging processing function to eliminate noise effect. | |
| Absolute maximum input | Voltage: ±15V, current: ±30mA | R60ADV8: Voltage: ±15V R60ADI8: Current: 30mA | 0 | | |
| Number of writes of offset/gain values | _ | 50000 times maximum | _ | | |
| Isolation method | Between the input terminal and programmable controller: Photocoupler Between channels: Non-isolation | Between the I/O terminal and programmable controller power supply: Photocoupler Between input channels: Non-isolation | 0 | | |
| Withstand voltage | Between the I/O terminal and programmable controller power supply: 500VAC for 1 minute | Between the I/O terminal and programmable controller power supply: 500VAC rms for 1 minute | 0 | | |
| Isolation resistance | Between the I/O terminal and programmable controller power supply: $500 \text{VDC } 5\text{M}\Omega \text{ or more}$ | Between the I/O terminal and programmable controller power supply: 500VDC 10MΩ or more | 0 | | |
| External interface | 38-point terminal block (M3×6 screws) | 18-point terminal block (M3 screws) | × | Wiring needs to be changed after replacement. | |
| Applicable wire size | 0.75 to 2mm² | 0.3 to 0.75mm (22 to 18 AWG) | × | By using the upgrade tool | |
| Applicable solderless terminal | V1.25-3, V1.25-YS3A, V2-S3, V2- YS3A | R1.25-3 (solderless terminal with an insulation sleeve cannot be used) | × | conversion adapter (ERNT- 1AR68AN), the existing external wiring and terminal blocks in the existing system can be used.*3 | |
| Number of occupied I/O points | 32 points (I/O assignment: Special 32 points) | 16 points (I/O assignment: Intelligent 16 points) | Δ | The number of occupied I/O points is changed after replacement. | |

| Item | Specifications | | Compatibility | Precautions |
|-------------------------------------|-------------------------|----------------------------------|---------------|-------------|
| | A68ADN | R60ADV8/R60ADI8 | | |
| Internal current consumption (5VDC) | 0.4A | R60ADV8: 0.23A R60ADI8: 0.22A | _ | |
| External dimensions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | 0.51kg | 0.12kg | _ | |

^{*1} The following table lists the I/O characteristics and maximum resolution values of the A68ADN.

I/O characteristics

When a gain value is 5V/20mA and an offset value is 0V/0mA

(The factory default settings of a gain value and an offset value are 5V and 0V respectively.)

| Analog input value | Digital output value | | | Maximum resolution | |
|--------------------|----------------------|--------------------|---------------------|-----------------------------------|--------------------------------|
| | When 1/4000 is set | When 1/8000 is set | When 1/12000 is set | Voltage | Current |
| +10V | +4000 | +8000 | +12000 | 1/4000: 2.5mV | 1/4000: 10μΑ |
| +5V or +20mA | +2000 | +4000 | +6000 | 1/8000: 1.25mV 1/12000: 0.83mV | 1/8000: 5μA 1/12000: 3.33μA |
| 0V or 20mA | 0 | 0 | 0 | | |
| -5V or -20mA | -2000 | -4000 | -6000 | | |
| -10V | -4000 | -8000 | -12000 | | |

*2 The following table lists the I/O characteristics and maximum resolution values of the R60ADV8/R60ADI8. R60ADV8

| Analog in | put range | Digital output value | Resolution |
|-----------|-------------------------|----------------------|------------|
| Voltage | 0 to 10V | 0 to 32000 | 312.5μV |
| | 0 to 5V | | 156.3μV |
| | 1 to 5V | | 125.0μV |
| | 1 to 5V (extended mode) | -8000 to 32000 | 125.0μV |
| | -10 to 10V | -32000 to 32000 | 312.5μV |
| | User range setting | | 47.7μV |

R60ADI8

| Analog input range | | Digital output value | Resolution |
|--------------------|---------------------------|----------------------|------------|
| Current | 0 to 20mA | 0 to 32000 | 625.0nA |
| | 4 to 20mA | | 500.0nA |
| | 4 to 20mA (extended mode) | -8000 to 32000 | 500.0nA |
| | User range setting | -32000 to 32000 | 190.7nA |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

Analog output modules

A616DAV and R60DAV8

| Item | Specifications | | Compatibility | Precautions |
|--|--|---|---------------|---|
| | A616DAV | R60DAV8 | - | |
| Number of analog output channels | 16 channels | 8 channels | Δ | When 9 or more channels are required, use two pieces of the R60DAV8. |
| Digital input | 16-bit signed binary (data part: 12 bit): -4096 to 4095 | 16-bit signed binary: -32768 to 32767 | Δ | Use the scaling function to convert values to the same range as the A616DAV. |
| Analog output | When the output voltage range setting is 10V -10 to +10VDC (external load resistance value: 2k to 1MΩ) When the output voltage range setting is 5V -5 to +5VDC (external load resistance value: 2k to 1MΩ) | -10 to 10VDC (External load resistance value: $1k\Omega$ or more) 0 to 5VDC (External load resistance value: 500Ω or more) | 0 | |
| I/O characteristics, resolution | *1 | *2 | Δ | Use the scaling function to convert values to the same range as the A616DAV. |
| Overall accuracy (accuracy to maximum analog output value) | When the output voltage range setting is 10V Ambient temperature 25°C: Within ±0.3% (±30mV) Ambient temperature 0 to 55°C: Within ±0.6% (±60mV) When the output voltage range setting is 5V Ambient temperature 25°C: Within ±0.3% (±15mV) Ambient temperature 0 to 55°C: Within ±0.6% (±30mV) | Ambient temperature 25±5°C: Within ±0.1% (±10mV) Ambient temperature 0 to 55°C: Within ±0.3% (±30mV) | 0 | |
| Conversion speed | Sampling period: 1.5 + 0.5 × (Number of D/A conversion enabled channels) ms Conversion time: 0.5ms | 80μs/channel | 0 | |
| Absolute maximum output | 15V | _ | _ | |
| Number of writes of offset/gain values | _ | 50000 times maximum | _ | |
| Output short circuit protection | _ | Available | _ | |
| Isolation method | Between the input terminal and programmable controller: Photocoupler Between channels: Non-isolation | Between the I/O terminal and programmable controller power supply: Photocoupler Between output channels: Non-isolation | 0 | |
| External power supply | Voltage: ±15VDC Current consumption: 0.2A at +15VDC, 0.17A at -15VDC | Voltage: 24VDC +20%, -15% Ripple, spike 500mVp-p or less Inrush current: 5.0A, within 670µs Current consumption: 0.16A | × | The external power supply needs to be changed after replacement. |
| External interface | 38-point terminal block (M3×6 screws) | 18-point terminal block (M3 screws) | × | Wiring needs to be changed after replacement. |
| Applicable wire size | 0.75 to 2mm² | 0.3 to 0.75mm (22 to 18 AWG) | × | By using the upgrade tool conversion adapter (ERNT- |
| Applicable solderless terminal | V1.25-3, V1.25-YS3A, V2-S3, V2- YS3A | R1.25-3 (solderless terminal with an insulation sleeve cannot be used) | × | 1AR616DA), the existing external wiring and terminal blocks in the existing system can be used.*3 |
| Number of occupied I/O points | 32 points (I/O assignment: Special 32 points) | 16 points (I/O assignment: Intelligent 16 points) | Δ | The number of occupied I/O points is changed after replacement. |

| Item | Specifications | | Compatibility | Precautions |
|-------------------------------------|-------------------------|-------------------------|---------------|-------------|
| | A616DAV | R60DAV8 | | |
| Internal current consumption (5VDC) | 0.38A | 0.16A | _ | |
| External dimensions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | 0.38kg | 0.14kg | _ | |

^{*1} The following table lists the I/O characteristics and maximum resolution values of the A616DAV.

| Analog output | | Digital input | Digital value resolution |
|----------------|-----------------|---------------|--------------------------|
| When 5V is set | When 10V is set | | |
| +5V | +10V | +4000 | 1/4000 |
| +2.5V | +5V | +2000 | |
| 0V | 0V | 0 | |
| -2.5V | -5V | -2000 | |
| -5V | -10V | -4000 | |

^{*2} The following table lists the I/O characteristics and maximum resolution values of the R60DAV8.

| Analog ou | itput range | Digital input value | Resolution |
|-----------|--------------------|---------------------|------------|
| Voltage | 0 to 5V | 0 to 32000 | 156.3μV |
| | 1 to 5V | | 125.0μV |
| | -10 to 10V | -32000 to 32000 | 312.5μV |
| | User range setting | | 312.5μV |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

A616DAI and R60DAI8

| Item | Specifications | | Compatibility | Precautions |
|--|---|---|---------------|---|
| | A616DAI | R60DAI8 | - | |
| Number of analog output channels | 16 channels | 8 channels | Δ | When 9 or more channels are required, use two pieces of the R60DAI8. |
| Digital input | 16-bit signed binary (data part: 12 bit): 0 to 4095 | 16-bit signed binary: -32768 to 32767 | Δ | Use the scaling function to convert values to the same range as the A616DAI. |
| Analog output | 0 to 20mADC (External load resistance value: 0 to | 600Ω) | 0 | |
| I/O characteristics, resolution | *1 | *2 | Δ | Use the scaling function to convert values to the same range as the A616DAI. |
| Overall accuracy (accuracy to maximum analog output value) | 0.6% (±120μA) Ambient temperature 25°C: ±0.3% (±60μA) | Ambient temperature 25 \pm 5°C: Within \pm 0.1% (\pm 20 μ A) Ambient temperature 0 to 55°C: Within \pm 0.3% (\pm 60 μ A) | 0 | |
| Conversion speed | Sampling period: 1.5 + 0.5 × (Number of D/A conversion enabled channels) ms Conversion time: 0.5ms | 80μs/channel | 0 | |
| Absolute maximum output | _ | _ | _ | |
| Number of writes of offset/gain values | _ | 50000 times maximum | _ | |
| Output short circuit protection | _ | Available | _ | |
| Isolation method | Between the input terminal and programmable controller: Photocoupler Between channels: Non-isolation | Between the I/O terminal and programmable controller power supply: Photocoupler Between output channels: Non-isolation | 0 | |
| External power supply | Voltage: ±15VDC Current consumption: 0.53A at +15VDC, 0.125A at -15VDC | Voltage: 24VDC +20%, -15% Ripple, spike 500mVp-p or less Inrush current: 5.0A, within 700µs Current consumption: 0.26A | × | The external power supply needs to be changed after replacement. |
| External interface | 38-point terminal block (M3×6 screws) | 18-point terminal block (M3 screws) | × | Wiring needs to be changed after replacement. |
| Applicable wire size | 0.75 to 2mm | 0.3 to 0.75mm (22 to 18 AWG) | × | By using the upgrade tool conversion adapter (ERNT- |
| Applicable solderless V1.25-3, V1.25-YS3A, V2-S3, V2-YS3A | | R1.25-3 (solderless terminal with an insulation sleeve cannot be used) | × | 1AR616DA), the existing external wiring and terminal blocks in the existing system can be used.*3 |
| Number of occupied I/O points | 32 points (I/O assignment: Special 32 points) | 16 points (I/O assignment: Intelligent 16 points) | Δ | The number of occupied I/O points is changed after replacement. |
| Internal current consumption (5VDC) | 0.38A | 0.16A | _ | |
| External dimensions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | 0.38kg | 0.14kg | _ | |

*1 The following table lists the I/O characteristics and maximum resolution values of the A616DAI.

| Analog output | Digital input | Digital value resolution |
|---------------|---------------|--------------------------|
| +20mA | +4000 | 1/4000 |
| +12mA | +2000 | |
| 4mA | 0 | |

*2 The following table lists the I/O characteristics and maximum resolution values of the R60DAI8.

| Analog ou | tput range | Digital input value | Resolution |
|-----------|--------------------|---------------------|------------|
| Current | 0 to 20mA | 0 to 32000 | 625.0nA |
| | 4 to 20mA | | 500.0nA |
| | User range setting | -32000 to 32000 | 350.9nA |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

A62DA and R60DA4

| Item | Specifications | | Compatibility | Precautions |
|--|--|--|---------------|--|
| | A62DA | R60DA4 | | |
| Number of analog output channels | 2 channels | 4 channels | 0 | |
| Digital input | Voltage: -2000 to +2000 Current: -1000 to +1000 | 16-bit signed binary: -32768 to 32767 | Δ | Use the scaling function to convert values to the same range as the A62DA. |
| Analog output | Voltage: -10 to +10VDC (external load resistance value: 500 to 1MΩ) Current: +4 to +20mADC (external load resistance value: 1kΩ or more), 0 to 5VDC (external load resistance value: $0 \text{ to } 600\Omega$) (The range of -20 to +20mA can be used as well.) Voltage: -10 to 10VDC (external load resistance value: $0 \text{ to } 200\Omega$) Current: $0 \text{ to } 200\Omega$ or more) Current: $0 \text{ to } 200\Omega$ (external load resistance value: $0 \text{ to } 600\Omega$) | | Δ | A minus current cannot be output. |
| I/O characteristics, resolution | *1 | *2 | Δ | Use the scaling function to convert values to the same range as the A62DA. |
| Overall accuracy (accuracy to maximum analog output value) | ±1% (Voltage: ±0.1V, Current: ±0.2mA) | Ambient temperature 25±5°C: Within ±0.1% (Voltage: ±20mV, Current: ±20μA) Ambient temperature 0 to 55°C: Within ±0.3% (Voltage: ±30mV, Current: ±60μA) | 0 | |
| Conversion speed | Up to 15ms/2 channels (the same duration even for 1 channel) | 80μs/channel | 0 | |
| Absolute maximum output | Voltage: ±12V, Current: ±28mA | _ | _ | |
| Number of writes of offset/gain values | _ | 50000 times maximum | _ | |
| Output short circuit protection | _ | Available | _ | |
| Isolation method | Between the input terminal and programmable controller: Photocoupler Between channels: Non-isolation | Between the I/O terminal and programmable controller power supply: Photocoupler Between output channels: Non-isolation | 0 | |
| External power supply | Voltage: 21.6 to 26.4VDC Inrush current: 0.35A Current consumption: 2.4A | Voltage: 24VDC +20%, -15% Ripple, spike 500mVp-p or less Inrush current: 5.0A, within 690µs Current consumption: 0.14A | Δ | Refer to the specifications of the external power supply. |
| External interface | 20-point terminal block (M3×6 screws) | 18-point terminal block (M3 screws) | × | Wiring needs to be changed after replacement. |
| Applicable wire size | 0.75 to 2mm | 0.3 to 0.75mm (22 to 18 AWG) | × | By using the upgrade tool conversion adapter (ERNT- |
| Applicable solderless terminal | V1.25-3, V1.25-YS3A, V2-S3, V2- YS3A | R1.25-3 (solderless terminal with an insulation sleeve cannot be used) | × | AQT62DA), the existing external wiring and terminal blocks in the existing system can be used.*3 |
| Number of occupied I/O points | 32 points (I/O assignment: Special 32 points) | 16 points (I/O assignment: Intelligent 16 points) | Δ | The number of occupied I/O points is changed after replacement. |
| Internal current consumption (5VDC) | 0.6A | 0.16A | _ | |
| External dimensions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | 0.50kg | 0.14kg | | |

*1 The following table lists the I/O characteristics and maximum resolution values of the A62DA.

| Analog output | | Digital input | Maximum resolution |
|---------------|---------|---------------|-----------------------|
| Voltage | Current | | |
| +10V | _ | +2000 | Voltage 5mV (1/2000) |
| +5V | +20mA | +1000 | Current 20μA (1/1000) |
| 0V | +4mA | 0 | |
| -5V | -12mA | -1000 | |
| -10V | _ | -2000 | |

*2 The following table lists the I/O characteristics and maximum resolution values of the R60DA4.

| Analog o | utput range | Digital input value | Resolution |
|----------|--------------------|---------------------|------------|
| Voltage | 0 to 5V | 0 to 32000 | 156.3μV |
| | 1 to 5V | | 125.0μV |
| | -10 to 10V | -32000 to 32000 | 312.5μV |
| | User range setting | | 312.5μV |
| Current | 0 to 20mA | 0 to 32000 | 625.0nA |
| | 4 to 20mA | | 500.0nA |
| | User range setting | -32000 to 32000 | 350.9nA |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

A62DA-S1 and R60DA4

| Item | Specifications | | Compatibility | Precautions |
|--|---|--|---------------|---|
| | A62DA-S1 | R60DA4 | | |
| Number of analog output channels | 2 channels | 4 channels | 0 | |
| Digital input | 0 to +4000 | 16-bit signed binary: -32768 to 32767 | Δ | Use the scaling function to convert values to the same range as the A62DA-S1. |
| Analog output | Voltage: 0 to +10VDC (external load resistance value: 500 to $1M\Omega$) Current: +4 to +20mADC (external load resistance value: 0 to 600Ω) (The range of 0 to +20mA can be used as well.) | Voltage: -10 to 10VDC (external load resistance value: $1k\Omega$ or more), 0 to 5VDC (external load resistance value: 500Ω or more) Current: 0 to 20mADC (external load resistance value: 0 to 600Ω) | 0 | |
| I/O characteristics, resolution | *1 | *2 | Δ | Use the scaling function to convert values to the same range as the A62DA-S1. |
| Overall accuracy (accuracy to maximum analog output value) | *3 | Ambient temperature $25\pm5^{\circ}$ C: Within $\pm 0.1\%$ (Voltage: ± 20 mV, Current: $\pm 20\mu$ A) Ambient temperature 0 to 55° C: Within $\pm 0.3\%$ (Voltage: ± 30 mV, Current: $\pm 60\mu$ A) | 0 | |
| Conversion speed | Up to 15ms/2 channels (the same duration even for 1 channel) | 80μs/channel | 0 | |
| Absolute maximum output | Voltage: 0 to +12V, Current: 0 to 28mA | _ | _ | |
| Number of writes of offset/gain values | _ | 50000 times maximum | _ | |
| Output short circuit protection | _ | Available | _ | |
| Isolation method | Between the input terminal and programmable controller: Photocoupler Between channels: Non-isolation | Between the I/O terminal and programmable controller power supply: Photocoupler Between output channels: Non-isolation | 0 | |
| External power supply | Voltage: 21.6 to 26.4VDC Inrush current: 0.35A Current consumption: 2.4A | Voltage: 24VDC +20%, -15% Ripple, spike 500mVp-p or less Inrush current: 5.0A, within 690µs Current consumption: 0.14A | Δ | Refer to the specifications of the external power supply. |
| External interface | 20-point terminal block (M3×6 screws) | 18-point terminal block (M3 screws) | × | Wiring needs to be changed after replacement. |
| Applicable wire size | 0.75 to 2mm | 0.3 to 0.75mm (22 to 18 AWG) | × | By using the upgrade tool |
| Applicable solderless terminal | V1.25-3, V1.25-YS3A, V2-S3, V2- YS3A | R1.25-3 (solderless terminal with an insulation sleeve cannot be used) | × | conversion adapter (ERNT- AQT62DA), the existing external wiring and terminal blocks in the existing system can be used.*4 |
| Number of occupied I/O points | 32 points (I/O assignment: Special 32 points) | 16 points (I/O assignment: Intelligent 16 points) | Δ | The number of occupied I/O points is changed after replacement. |
| Internal current consumption (5VDC) | 0.6A | 0.16A | _ | |
| External dimensions | 250(H)×37.5(W)×121(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | 0.50kg | 0.14kg | | |

*1 The following table lists the I/O characteristics and maximum resolution values of the A62DA-S1.

| Output range | Analog output | output Digital input Maximum | | ximum resolution | |
|----------------------|---------------|------------------------------|---|-------------------------|--|
| | | | Voltage | Current | |
| 0 to 10V | +10V | +4000 | 1 to 5V: 1mV (1/4000) | 4 to 20mA: 4μA (1/4000) | |
| | 0V | 0 | 0 to 5V: 1.25mV (1/4000) 0 to 20mA: 5μA (1/ 0 to 10V: 2.5mV (1/4000) | 0 to 20mA: 5μA (1/4000) | |
| 0 to 5V | +5V or +20mA | +4000 | 0 to 10 v. 2.5111v (1/4000) | | |
| 0 to 20mA | 0V or 0mA | 0 | | | |
| 1 to 5V 4 to 20mA | +5V or +20mA | +4000 | | | |
| | +1V or +4mA | 0 | | | |

*2 The following table lists the I/O characteristics and maximum resolution values of the R60DA4.

| Analog o | utput range | Digital input value | Resolution |
|----------|--------------------|---------------------|------------|
| Voltage | 0 to 5V | 0 to 32000 | 156.3μV |
| | 1 to 5V | | 125.0μV |
| | -10 to 10V | -32000 to 32000 | 312.5μV |
| | User range setting | | 312.5μV |
| Current | 0 to 20mA | 0 to 32000 | 625.0nA |
| | 4 to 20mA | | 500.0nA |
| | User range setting | -32000 to 32000 | 350.9nA |

^{*3} The following table lists the accuracy of the A62DA-S1.

| Item | | Output range | | | | | |
|-------------|-----------------------|--------------|---------|----------|-----------|-----------|--|
| | | 1 to 5V | 0 to 5V | 0 to 10V | 4 to 20mA | 0 to 20mA | |
| Temperature | 25℃ (within ±0.5%) | ±25mV | ±25mV | ±50mV | ±0.1mA | ±0.1mA | |
| range | 0 to 55℃ (within ±1%) | ±50mV | ±50mV | ±100mV | ±0.2mA | ±0.2mA | |

^{*4} For an upgrade tool, please consult your local Mitsubishi Electric representative.

A68DAV and R60DAV8

| Item | Specifications | | Compatibility | Precautions | |
|--|--|---|---------------|---|--|
| | A68DAV | R60DAV8 | | | |
| Number of analog output channels | 8 channels | | 0 | | |
| Digital input | 16-bit signed binary When 1/4000 is set: -4000 to +4000 When 1/8000 is set: -8000 to +8000 When 1/12000 is set: -12000 to +12000 | 16-bit signed binary: -32768 to 32767 | Δ | Use the scaling function to convert values to the same range as the A68DAV. | |
| Analog output | -10 to +10VDC (external load resistance value: 2k to 1MΩ) | -10 to 10VDC (External load resistance value: $1k\Omega$ or more) 0 to 5VDC (External load resistance value: 500Ω or more) | 0 | | |
| I/O characteristics, resolution | *1 | *2 | Δ | Use the scaling function to convert values to the same range as the A68DAV. | |
| Overall accuracy (accuracy to maximum analog output value) | ±1.0% (±100mV) | Ambient temperature 25±5°C: Within ±0.1% (±10mV) Ambient temperature 0 to 55°C: Within ±0.3% (±30mV) | 0 | | |
| Conversion speed | Up to 40ms/8 channels (the same duration even for 1 channel) | 80μs/channel | 0 | | |
| Absolute maximum output | -12 to +12V | _ | _ | | |
| Number of writes of offset/gain values | _ | 50000 times maximum | _ | | |
| Output short circuit protection | _ | Available | _ | | |
| Isolation method | Between the input terminal and programmable controller: Photocoupler Between channels: Non-isolation | Between the I/O terminal and programmable controller power supply: Photocoupler Between output channels: Nonisolation | 0 | | |
| External power supply | Voltage: 21.6 to 26.4VDC Current consumption: 0.2A | Voltage: 24VDC +20%, -15% Ripple, spike 500mVp-p or less Inrush current: 5.0A, within 670μs Current consumption: 0.16A | Δ | Refer to the specifications of the external power supply. | |
| External interface | 38-point terminal block (M3×6 screws) | 18-point terminal block (M3 screws) | × | Wiring needs to be changed after replacement. | |
| Applicable wire size | 0.75 to 2mm | 0.3 to 0.75mm (22 to 18 AWG) | × | By using the upgrade tool | |
| Applicable solderless terminal | V1.25-3, V1.25-YS3A, V2-S3, V2- YS3A | R1.25-3 (solderless terminal with an insulation sleeve cannot be used) | × | conversion adapter (ERNT-AQT68DA), the existing external wiring and terminal blocks in the existing system can be used.*3 | |
| Number of occupied I/O points | 32 points (I/O assignment: Special 32 points) | 16 points (I/O assignment: Intelligent 16 points) | Δ | The number of occupied I/O points is changed after replacement. | |
| Internal current consumption (5VDC) | 0.15A | 0.16A | _ | | |
| External dimensions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | | |
| Weight | 0.60kg | 0.14kg | _ | | |

*1 The following table lists the I/O characteristics and maximum resolution values of the A68DAV. I/O characteristics

When an offset value is set to 0V and a gain value is set to 10V

| Item | Analog output | Digital value resolution | | | Maximum |
|---------------------|---------------|--------------------------|--------|---------|-----------------------------------|
| | value | 1/4000 | 1/8000 | 1/12000 | resolution of analog value |
| Digital input value | +10V | 4000 | 8000 | 12000 | 1/4000: 2.5mV |
| | +5V | 2000 | 4000 | 6000 | 1/8000: 1.25mV 1/12000: 0.83mV |
| | 0V | 0 | 0 | 0 | 1/12000. 0.031110 |
| | -5V | -2000 | -4000 | -6000 | |
| | -10V | -4000 | -8000 | -12000 | |

*2 The following table lists the I/O characteristics and maximum resolution values of the R60DAV8.

| Analog ou | ıtput range | Digital input value | Resolution |
|-----------|--------------------|---------------------|------------|
| Voltage | 0 to 5V | 0 to 32000 | 156.3μV |
| | 1 to 5V | | 125.0μV |
| | -10 to 10V | -32000 to 32000 | 312.5μV |
| | User range setting | | 312.5μV |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

A68DAI and R60DAI8

| Item | Specifications | | Compatibility | Precautions |
|--|--|---|---------------|---|
| | A68DAI | R60DAI8 | | |
| Number of analog output channels | 8 channels | | 0 | |
| Digital input | 16-bit signed binary When 1/4000 is set: -4000 to +4000 When 1/8000 is set: -8000 to +8000 When 1/12000 is set: -12000 to +12000 | 16-bit signed binary: -32768 to 32767 | Δ | Use the scaling function to convert values to the same range as the A68DAI. |
| Analog output | 0 to 20mADC (External load resistan | ce value: 0 to 600Ω) | 0 | |
| I/O characteristics, resolution | *1 | *2 | Δ | Use the scaling function to convert values to the same range as the A68DAI. |
| Overall accuracy (accuracy to maximum analog output value) | ±1.0% (±200μA) | Ambient temperature 25 \pm 5°C: Within \pm 0.1% (\pm 20 μ A) Ambient temperature 0 to 55°C: Within \pm 0.3% (\pm 60 μ A) | 0 | |
| Conversion speed | Up to 40ms/8 channels (the same duration even for 1 channel) | 80μs/channel | 0 | |
| Absolute maximum output | 0 to +28mA | _ | _ | |
| Number of writes of offset/gain values | _ | 50000 times maximum | _ | |
| Output short circuit protection | _ | Available | _ | |
| Isolation method | Between the input terminal and programmable controller: Photocoupler Between channels: Non-isolation | Between the I/O terminal and programmable controller power supply: Photocoupler Between output channels: Non-isolation | 0 | |
| External power supply | Voltage: 21.6 to 26.4VDC Current consumption: 0.4A | Voltage: 24VDC +20%, -15% Ripple, spike 500mVp-p or less Inrush current: 5.0A, within 700µs Current consumption: 0.26A | Δ | Refer to the specifications of the external power supply. |
| External interface | 38-point terminal block (M3×6 screws) | 18-point terminal block (M3 screws) | × | Wiring needs to be changed after replacement. |
| Applicable wire size | 0.75 to 2mm | 0.3 to 0.75mm² (22 to 18 AWG) | × | By using the upgrade tool |
| Applicable solderless terminal | V1.25-3, V1.25-YS3A, V2-S3, V2- YS3A | R1.25-3 (solderless terminal with an insulation sleeve cannot be used) | × | conversion adapter (ERNT-AQT68DA), the existing external wiring and terminal blocks in the existing system can be used.*3 |
| Number of occupied I/O points | 32 points (I/O assignment: Special 32 points) | 16 points (I/O assignment: Intelligent 16 points) | Δ | The number of occupied I/O points is changed after replacement. |
| Internal current consumption (5VDC) | 0.15A | 0.16A | _ | |
| External dimensions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | |
| Weight | 0.65kg | 0.14kg | _ | |

*1 The following table lists the I/O characteristics and maximum resolution values of the A68DAI. I/O characteristics

When an offset value is set to 4mA and a gain value is set to 20mA

| Item | Analog output | Digital value resolution | | | Maximum |
|---------------------|---------------|--------------------------|--------|---------|---------------------------------|
| | value | 1/4000 | 1/8000 | 1/12000 | resolution of analog value |
| Digital input value | +20mA | 4000 | 8000 | 12000 | 1/4000: 5.0μΑ |
| | +12mA | 2000 | 4000 | 6000 | 1/8000: 2.5μA 1/12000: 1.6μA |
| | +4mA | 0 | 0 | 0 | 1/12000. 1.0μΑ |

*2 The following table lists the I/O characteristics and maximum resolution values of the R60DAI8.

| Analog output range | | Digital input value | Resolution |
|---------------------|--------------------|---------------------|------------|
| Current | 0 to 20mA | 0 to 32000 | 625.0nA |
| | 4 to 20mA | | 500.0nA |
| | User range setting | -32000 to 32000 | 350.9nA |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

A68DAI-S1 and R60DAI8

| Item | Specifications | | Compatibility | Precautions | |
|--|--|---|---------------|---|--|
| | A68DAI-S1 | R60DAI8 | | | |
| Number of analog output channels | 8 channels | | 0 | | |
| Digital input | 16-bit signed binary When 1/4000 is set: -4000 to +4000 When 1/8000 is set: -8000 to +8000 When 1/12000 is set: -12000 to +12000 | 16-bit signed binary: -32768 to 32767 | Δ | Use the scaling function to convert values to the same range as the A68DAI-S1. | |
| Analog output | 0 to 20mADC (External load resistan | ce value: 0 to 600Ω) | 0 | | |
| I/O characteristics, resolution | *1 | *2 | Δ | Use the scaling function to convert values to the same range as the A68DAI-S1. | |
| Overall accuracy (accuracy to maximum analog output value) | ±1.0% (±200μA) | Ambient temperature 25 \pm 5°C: Within \pm 0.1% (\pm 20 μ A) Ambient temperature 0 to 55°C: Within \pm 0.3% (\pm 60 μ A) | 0 | | |
| Conversion speed | Up to 40ms/8 channels (the same duration even for 1 channel) | 80μs/channel | 0 | | |
| Absolute maximum output | 0 to +28mA | _ | _ | | |
| Number of writes of offset/gain values | _ | 50000 times maximum | _ | | |
| Output short circuit protection | _ | Available | _ | | |
| Isolation method | Between the input terminal and programmable controller: Photocoupler Between channels: Non-isolation | Between the I/O terminal and programmable controller power supply: Photocoupler Between output channels: Non-isolation | 0 | | |
| External power supply | Voltage: 21.6 to 26.4VDC Current consumption: 0.4A | Voltage: 24VDC +20%, -15% Ripple, spike 500mVp-p or less Inrush current: 5.0A, within 700μs Current consumption: 0.26A | Δ | Refer to the specifications of the external power supply. | |
| External interface | 38-point terminal block (M3×6 screws) | 18-point terminal block (M3 screws) | × | Wiring needs to be changed after replacement. | |
| Applicable wire size | 0.75 to 2mm | 0.3 to 0.75mm (22 to 18 AWG) | × | By using the upgrade tool | |
| Applicable solderless terminal | V1.25-3, V1.25-YS3A, V2-S3, V2- YS3A | R1.25-3 (solderless terminal with an insulation sleeve cannot be used) | × | conversion adapter (ERNT-AQT68DA), the existing external wiring and terminal blocks in the existing system can be used.*3 | |
| Number of occupied I/O points | 32 points (I/O assignment: Special 32 points) | 16 points (I/O assignment: Intelligent 16 points) | Δ | The number of occupied I/O points is changed after replacement. | |
| Internal current consumption (5VDC) | 0.15A | 0.16A | _ | | |
| External dimensions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | | |
| Weight | 0.65kg | 0.14kg | _ | | |

*1 The following table lists the I/O characteristics and maximum resolution values of the A68DAI-S1. I/O characteristics

When an offset value is set to 4mA and a gain value is set to 20mA

| Item | Analog output | Digital value resolution | | | Maximum |
|---------------------|---------------|--------------------------|--------|---------|-------------------------------|
| | value | 1/4000 | 1/8000 | 1/12000 | resolution of analog value |
| Digital input value | +20mA | 4000 | 8000 | 12000 | 1/4000: 5.0μA |
| | +12mA | 2000 | 4000 | 6000 | 1/8000: 2.5μA |
| | +4mA | 0 | 0 | 0 | 1/12000: 1.6μΑ |

*2 The following table lists the I/O characteristics and maximum resolution values of the R60DAI8.

| Analog output range | | Digital input value | Resolution |
|---------------------|--------------------|---------------------|------------|
| Current | 0 to 20mA | 0 to 32000 | 625.0nA |
| | 4 to 20mA | | 500.0nA |
| | User range setting | -32000 to 32000 | 350.9nA |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

Temperature input modules

A616TD + A60MXT(N) and R60TD8-G

| Item | | Specifications | | Compatibility | Precautions |
|---------------------------------|----------------------------|--|--|---------------|--|
| | | A616TD + A60MXT(N) | R60TD8-G | - | |
| Number of analog input channels | | 16 channels (for A616TD only), 105 channels (when extended by using the A60MXT(N)) 15 channels/1 piece of the A60MXT(N) (Up to 7 pieces of the A60MXT(N) can be connected to 1 piece of the A616TD.) | 8 channels + Cold junction compensation channels/1 module | Δ | When 9 or more channels are required, use multiple pieces of the R60TD8-G. |
| Temperature sensor input | | -200 to 1800℃ | -270 to 1820℃ | 0 | |
| Output | Digital output value | 16-bit signed binary (data part: 12 bit): 0 to 4000 | 16-bit signed binary (scaling value) | 0 | |
| | Detected temperature value | 16-bit signed binary: -2000 to 18000 | 16-bit signed binary: -2700 to 18200 | 0 | |
| Applicable thermocouple | | JIS: B, R, S, K, E, J, T ANSI: B, R, S, K, E, J, T DIN: PtRh-Pt, NiCr-Ni, Fe-CuNi, Cu-CuNi BS: PtRh30-PtRh6, PtRh13-Pt, PtRh10-Pt, NiCr-NiAl, NiCr-CuNi, Fe-CuNi, Cu-CuNi | IEC 60584-1 (1995), IEC 60584-2 (1982), JIS C 1602-1995 | Δ | Applicable thermocouples and thermocouple compliance standards vary between the A616TD + A60MXT(N) and the R60TD8-G. |
| Accuracy | | (Conversion accuracy) + (Temperature characteristics) × (Operating ambient temperature variation) + (Cold junction compensation accuracy) | | 0 | |
| Conversion | n speed | 50ms/channel | 30ms/channel | 0 | |
| Isolation method | | Between the input terminal and programmable controller: Photocoupler Between channels: Non-isolation (1MΩ resistor isolation) | Between thermocouple input channel and programmable controller power supply: Transformer Between thermocouple input channels: Transformer Between cold junction compensation channel and programmable controller power supply: Non-isolation | 0 | |
| Disconnect | tion detection | Available | | 0 | |
| External int | terface | 38-point terminal block (M3×6 screws) | 40-pin connector (A6CON1/2/4) | × | Wiring needs to be changed after replacement. |
| Applicable | wire size | 0.75 to 2mm ² | 0.088 to 0.3mm² | × | |
| Applicable terminal | solderless | V1.25-3, V1.25-YS3A, V2-S3, V2- YS3A | _ | _ | |
| Number of occupied I/O points | | 32 points (I/O assignment: Special 32 points) | 16 points (I/O assignment: Intelligent 16 points) | Δ | The number of occupied I/O points is changed after replacement. |
| Internal cur consumptio | | 1.00A (A616TD only) | 0.36A | _ | |
| External dir | mensions | 250(H)×37.5(W)×131(D)mm (A616TD only) | 106(H)×27.8(W)×131(D)mm | _ | |
| | | 0.85kg (A616TD only) | 0.19kg | _ | |

A68RD3N and R60RD8-G

| Item | | Specifications | | Compatibility | Precautions | |
|------------------------------------|-----------|---|--|---------------|---|--|
| | | A68RD3N R60RD8-G | | | | |
| Number of ana channels | log input | 8 channels | | 0 | | |
| Measurement method | | 3-wire type | | 0 | | |
| Output (temper conversion value | | 16-bit signed binary: -1800 to 6000 32-bit signed binary: -180000 to 600000 | 16-bit signed binary: -2000 to 8500 | Δ | 32-bit output cannot be used. | |
| Applicable RTD |) | Pt100 (JIS C 1604-1997, IEC 751- am2, JIS C 1604-1989, DIN 43760- 1980), JPt100 (JIS C 1604-1981) | Pt100 (JIS C 1604-2013, IEC 751 1983) JPt100 (JIS C 1604-1981) Ni100 (DIN 43760 1987) Pt50 (JIS C 1604-1981) | Δ | Applicable RTDs and RTD compliance standards vary between the A68RD3N and the R60RD8-G. | |
| Temperature | Pt100 | -180 to 600°C (27.10 to 313.71Ω) | -200 to 850℃ | 0 | | |
| measurement range | JPt100 | -180 to 600°C (25.80 to 317.28Ω) | -180 to 600°C | | | |
| | Ni100 | _ | -60 to 250℃ | | | |
| | Pt50 | _ | -200 to 650°C | | | |
| Temperature de output current | etecting | 1.0mA | 1.0mA or lower | 0 | | |
| Accuracy | | ±1% (accuracy to full-scale) | *1 | 0 | | |
| Resolution | | 0.025℃ | 0.1℃ | Δ | Comparing with the A68RD3N, the resolution for the R60RD8-G is lower. | |
| Conversion spe | eed | 40ms/channel | 10ms/channel | 0 | | |
| Isolation method | | Between the platinum resistance thermometer input and programmable controller power supply: Photocoupler Between the platinum resistance thermometer input and channel: Non-isolation | Between RTD input channel and programmable controller power supply: Transformer Between RTD input channels: Transformer | 0 | | |
| Withstand volta | age | Between the platinum resistance thermometer input and programmable controller power supply: 500VAC for 1 minute | Between RTD input channel and programmable controller power supply: 500VAC rms for 1 minute Between RTD input channels: 1000VAC rms for 1 minute | 0 | | |
| Disconnection | detection | Available (Channels are independent of each other.) | Available | 0 | | |
| External interfa | ice | 38-point terminal block (M3×6 screws) | 40-pin connector (A6CON1/2/4) | × | Wiring needs to be changed after replacement. | |
| Applicable wire | size | 0.75 to 2mm | 0.088 to 0.3mm ² | × | Ţ | |
| Applicable solderless terminal | | V1.25-3, V1.25-YS3A, V2-S3, V2- YS3A | _ | _ | | |
| Number of occupied I/O points | | 32 points (I/O assignment: Special 32 points) | 16 points (I/O assignment: Intelligent 16 points) | Δ | The number of occupied I/O points is changed after replacement. | |
| Internal current consumption (5 | | 0.94A | 0.35A | _ | | |
| External dimen | sions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×131(D)mm | _ | | |
| Weight | | 0.43kg | 0.19kg | _ | | |

*1 The following table lists the accuracy of the R60RD8-G.

| Item | | Specifications | |
|--------|--|---|--|
| Pt100 | -200 to 850℃ | ±0.8°C (Ambient temperature: 25±5°C), ±2.4°C (Ambient temperature: 0 to 55°C) | |
| | -20 to 120℃ | ±0.3°C (Ambient temperature: 25±5°C), ±1.1°C (Ambient temperature: 0 to 55°C) | |
| | 0 to 200℃ | ±0.4°C (Ambient temperature: 25±5°C), ±1.2°C (Ambient temperature: 0 to 55°C) | |
| JPt100 | -180 to 600℃ | ±0.8°C (Ambient temperature: 25±5°C), ±2.4°C (Ambient temperature: 0 to 55°C) | |
| | -20 to 120℃ | ±0.3°C (Ambient temperature: 25±5°C), ±1.1°C (Ambient temperature: 0 to 55°C) | |
| | 0 to 200℃ | ±0.4°C (Ambient temperature: 25±5°C), ±1.2°C (Ambient temperature: 0 to 55°C) | |
| Ni100 | -60 to 250°C ±0.4°C (Ambient temperature: 25±5°C), ±1.2°C (Ambient temperature: 0 to 55°C) | | |
| Pt50 | -200 to 650℃ | ±0.8°C (Ambient temperature: 25±5°C), ±2.4°C (Ambient temperature: 0 to 55°C) | |

7.3 Function Comparison Tables

Analog input modules

A616AD/A68AD/A68AD-S2/A68ADN and R60ADV8/R60ADI8

○: Compatible/function available, △: Partly changed, ×: Incompatible/function not available, —: Not applicable

| Function | | MELSEC-A/QnA series | | MELSEC iQ-R series | Precautions |
|--|---|---------------------|-----------------------------|--------------------|---|
| | | A616AD | A68AD A68AD-S2 A68ADN | R60ADV8 R60ADI8 | |
| Direct access processing | Apart from using the sampling processing, A/D conversion is performed for a target channel by taking the following steps (direct access processing): specifying a channel targeted for A/D conversion by using a sequence program; outputting the direct access request. When a target channel is simultaneously specified by both the sampling processing and the direct access processing, the direct access request is prioritized. | 0 | × | × | The direct access processing function cannot be used for the MELSEC iQ-R series modules. |
| A/D conversion enable/disable function | Whether to enable or disable A/D conversion is set with this function. Disabling the conversion on unused channels reduces the sampling time. | × | 0 | 0 | |
| Sampling processing | The A/D conversion for analog input values is performed successively for each channel, and a digital output value is output upon each conversion. | 0 | 0 | 0 | |
| Averaging processing | For each channel, A/D conversion values are averaged for the set number of times or set amount of time, and the average value is output as a digital value. | × | 0 | 0 | The setting ranges of time average and count average vary between the MELSEC-A/QnA series modules and the MELSEC iQ-R series modules. |

Analog output modules

A616DAV/A616DAI/A68DAV/A68DAI(-S1)/A62DA(-S1) and R60DA4/R60DAV8/R60DAI8

○: Compatible/function available, △: Partly changed, ×: Incompatible/function not available, —: Not applicable

| Function | | MELSEC-A/QnA series | | MELSEC iQ-R series | Precautions |
|--|---|---|-------------------------|------------------------------|--|
| | | A616DAV A616DAI A68DAV A68DAI A68DAI-S1 | A62DA A62DA-S1 | R60DA4 R60DAV8 R60DAI8 | |
| D/A conversion enable/disable function | Whether to enable or disable D/A conversion is set for each channel with this function. Disabling the conversion on unused channels shortens the conversion speed. | 0 | × | 0 | |
| D/A output enable/disable function | Whether to output the D/A conversion value or offset value is set for each channel with this function. The conversion speed is constant regardless of whether the output is enabled/disabled. | 0 | 0 | 0 | |
| Analog output HOLD/CLEAR function | The analog value output is held when the programmable controller CPU is in the STOP status or when an error occurs. | 0 | A62DA: × A62DA-S1: ○ | 0 | |
| Resolution mode | The resolution mode is switched with this function, according to the application. The resolution is selectable between 1/4000 and 1/12000. The resolution mode is batch-set for all channels. | A616DAV/ A616DAI: × A68DAV/ A68DAI(-S1): | × | Δ | When the resolution mode is not available, use the scaling function instead. |

Temperature input modules

A616TD and R60TD8-G

○: Compatible/function available, △: Partly changed, ×: Incompatible/function not available, —: Not applicable

| Function | | MELSEC-A/ QnA series | MELSEC iQ-R series | Precautions |
|--|--|-------------------------|-----------------------|-------------|
| | | A616TD | R60TD8-G | |
| Temperature conversion function | Obtains temperature data. | 0 | 0 | |
| Conversion enable/ disable function | Sets whether to enable or disable the conversion for each channel. | 0 | 0 | |
| Disconnection detection function | Detects a disconnection of connected thermocouples for each channel. | 0 | 0 | |
| Temperature conversion value storage | Stores obtained temperature data in the buffer memory. | 0 | 0 | |
| Input type selection function | Sets an input type for each channel. | 0 | 0 | |

A68RD3N and R60RD8-G

 \bigcirc : Compatible/function available, \triangle : Partly changed, \times : Incompatible/function not available, -: Not applicable

| Function | Function | | | Precautions | |
|--|---|---------|----------|--|--|
| | | A68RD3N | R60RD8-G | | |
| Conversion enable/ disable specification of each channel | Enables/disables a detection of temperature. | 0 | 0 | | |
| Sampling/averaging processing selection | Processes the detected temperature by specified method. | 0 | 0 | | |
| Detected temperature value storage | Stores temperature data in the buffer memory. | 0 | 0 | | |
| Disconnection detection | Detects a disconnection of connected RTDs or cables. | 0 | 0 | | |
| Specification of RTD type | Specifies an RTD type to be used. | 0 | 0 | | |
| Error correction function | Corrects an error in temperature conversion values. | 0 | 0 | Correct the error using the offset/ gain setting of the R60RD8-G. | |

7.4 Precautions for Replacement

Wiring

The sizes of wires or solderless terminals that can be used for terminal blocks vary between MELSEC iQ-R series and MELSEC-A/QnA series, since modules and terminal blocks of the MELSEC iQ-R series are smaller than those of the MELSEC-A/QnA series.

When replacing MELSEC-A/QnA series modules with MELSEC iQ-R series modules, use wires and solderless terminals that meet the specifications of MELSEC iQ-R series modules.

The wiring change is not required when the upgrade tool conversion adapter is used for replacement.

Dedicated instructions

Dedicated instructions vary between the MELSEC-A/QnA series and the MELSEC iQ-R series.

If a dedicated instruction is used in a MELSEC-A/QnA series program, the program needs to be corrected for MELSEC iQ-R series.

I/O signals and buffer memory areas

The layouts of I/O signals and buffer memory areas vary between the MELSEC-A/QnA series and the MELSEC iQ-R series. If an I/O signal or a buffer memory area is used in a MELSEC-A/QnA series program, the program needs to be corrected for the MELSEC iQ-R series.

Resolution mode switching function

The MELSEC iQ-R series modules do not support the resolution mode switching function because the resolution has already been enhanced.

Values are converted to the range equivalent to that of MELSEC-A/QnA series by using the scaling function.

Temperature conversion system

For the MELSEC iQ-R series, setting values of the averaging processing in the temperature conversion system are changed because the conversion speed is enhanced. When the averaging processing is used in a MELSEC-A/QnA series program, the program needs to be corrected for the MELSEC iQ-R series.

Disconnection detection function

When the analog output range of a MELSEC iQ-R series analog output module is 4 to 20mA, this function operates all the time.

When disconnection detection is not required, set another analog output range.



| For details on these precautions, refer to the following. |
|---|
| MELSEC iQ-R Module Configuration Manual |
| □ MELSEC iQ-R Analog-Digital Converter Module User's Manual (Startup) |
| □ MELSEC iQ-R Analog-Digital Converter Module User's Manual (Application) |
| □ MELSEC iQ-R Digital-Analog Converter Module User's Manual (Startup) |
| □ MELSEC iQ-R Digital-Analog Converter Module User's Manual (Application) |
| MELSEC iQ-R Channel Isolated Thermocouple Input Module/Channel Isolated RTD Input Module User's |
| Manual (Startup) |
| MELSEC iQ-R Channel Isolated Thermocouple Input Module/Channel Isolated RTD Input Module User's |
| Manual (Application) |

8 POSITIONING MODULE AND PULSE I/O MODULE REPLACEMENT

8.1 Alternative Model List

This section lists alternative models of the MELSEC iQ-R series positioning modules and pulse I/O modules in accordance with the specifications and functions of the MELSEC-A/QnA series positioning modules and pulse I/O modules.

Select models that best suit your application considering the scope of control of MELSEC-A/QnA series positioning modules and pulse I/O modules that are currently used, as well as the system specifications and extensibility after replacement.

| Item | MELSEC-A/ QnA series | MELSEC iQ-R series | Specification difference |
|---------------------------|---|--------------------------------------|--|
| Positioning module | AD70 AD70D AD71(S1/S2/S7) AD72 | No alternative models | _ |
| | AD75M1 AD75M2 AD75M3 | RD77MS2 RD77MS4 | Consider replacing the existing modules with Simple Motion modules (RD77MS2/RD77MS4). When replacing servo amplifiers and servo motors, please consult your local Mitsubishi Electric representative. For replacement of the MR-J2S□-B, refer to "Transition from MELSERVO-J2-Super/J2M Series to J4 Series Handbook" (L(NA)03093). |
| | AD75P1-S3 AD75P2-S3 AD75P3-S3 | RD75P2 RD75P4 RD75D2 RD75D4 | (1) External wiring: Changed (SCSI connector → 40-pin connector, applicable wire size) (2) Number of slots: Not changed (3) Programs: I/O signals are changed, buffer memory addresses are changed. (4) Specifications: Number of control axes is changed (1/2/3 axes → 2/4 axes), starting time is changed, command pulse output system is changed (either differential driver or open collector), maximum output pulse. (5) Functions: Changed (Stepping motor mode is not available, indirect designation is not available, LED indication is not available.) |
| High-speed counter module | AD61 | RD62P2 | (1) External wiring: Changed (Screw terminal block → 40-pin connector, an upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: The number of occupied I/O points is changed, I/O signals are changed, buffer memory addresses are changed. (4) Specifications: Counting speed (maximum) is changed, counting range is changed (24-bit unsigned binary → 32-bit signed binary), external input/output is changed. (5) Functions: Not changed |
| | AD61S1 | RD62P2 | (1) External wiring: Changed (Screw terminal block → 40-pin connector, an upgrade tool conversion adapter can be used.*1) (2) Number of slots: Not changed (3) Programs: The number of occupied I/O points is changed, I/O signals are changed, buffer memory addresses are changed. (4) Specifications: Counting speed (maximum) is changed, counting range is changed (24-bit unsigned binary → 32-bit signed binary), external input/output is changed. (5) Functions: Not changed |
| Position detection module | A61LS A62LS A62LS-S5 A63LS | No alternative models | |

^{*1} For an upgrade tool, please consult your local Mitsubishi Electric representative.

8.2 Specification Comparison Tables

Positioning modules

AD75P1-S3/AD75P2-S3/AD75P3-S3 and RD75P2/RD75P4/RD75D2/RD75D4

O: Compatible, △: Partly changed, ×: Incompatible, —: Not applicable

| Item | Specifications | | Compatibility | Precautions |
|---------------------------|---|--|---------------|----------------------------|
| | AD75P1-S3/AD75P2-S3/ AD75P3-S3 | RD75P2/RD75P4/RD75D2/ RD75D4 | | |
| Number of controlled axes | AD75P1-S3: 1 AD75P2-S3: 2 AD75P3-S3: 3 | RD75P2/RD75D2: 2 RD75P4/RD75D4: 4 | 0 | The number of axes varies. |
| Interpolation function | AD75P1-S3: Not available AD75P2-S3/AD75P3-S3: 2-axis linear interpolation, 2-axis circular interpolation | RD75P2/RD75D2: 2-axis linear interpolation, 2-axis circular interpolation RD75P4/RD75D4: 2-, 3-, or 4-axis linear interpolation, 2-axis circular interpolation, 3-axis helical interpolation | 0 | |
| Control system | PTP (Point To Point) control, path control (all of linear and circular can be set), speed control, speed-position switching control | PTP (Point To Point) control, path control (all of linear and circular can be set), speed control, speed-position switching control, position-speed switching control | 0 | |
| Control unit | mm, inch, degree, pulse | | 0 | |
| Positioning data | When set by a peripheral: 600 data/ axis When set by a sequence program: 100 data/axis | 600 data/axis | 0 | |
| Backup | Parameters and positioning data are saved on flash ROM (battery-less backup). | Positioning data and block start data can be saved on flash ROM (battery-less backup). | 0 | |

| Item | | Specifications | | Compatibility | Precautions |
|-------------|--|---|---|---------------|-------------|
| | | AD75P1-S3/AD75P2-S3/ AD75P3-S3 | RD75P2/RD75P4/RD75D2/ RD75D4 | | |
| Positioning | Positioning system | PTP control: Incremental system/absorphic Speed-position switching control: Incremental system | Speed-position switching control: Incremental system/absolute system Position-speed switching control: | 0 | |
| | | Path control: Incremental system/abso | Incremental system | | |
| | Positioning range | In absolute system: Standard mode -214748364.8 to 214748364.7 μm, -21474.83648 to 21474.83647 inch, 0 to 359.99999 degree, -2147483648 to 2147483647 pulse Stepping motor mode -13421772.8 to 13421772.7 μm, -1342.17728 to 1342.17727 inch, 0 to 359.99999 degree, -134217728 to 134217727 pulse | In absolute system: -214748364.8 to 214748364.7 μm, -21474.83648 to 21474.83647 inch, 0 to 359.99999 degree, -2147483648 to 2147483647 pulse | 0 | |
| | | In incremental system: Standard mode -214748364.8 to 214748364.7 μm, -21474.83648 to 21474.83647 inch, -21474.83648 to 21474.83647 degree, -2147483648 to 2147483647 pulse Stepping motor mode -13421772.8 to 13421772.7 μm, -1342.17728 to 1342.17727 degree, -134217728 to 134217727 pulse | In incremental system: -214748364.8 to 214748364.7 μm, -21474.83648 to 21474.83647 inch, -21474.83648 to 21474.83647 degree, -2147483648 to 2147483647 pulse | | |
| | | In position-speed switching control: Standard mode 0 to 214748364.7 μm, 0 to 21474.83647 inch, 0 to 21474.83647 degree, 0 to 2147483647 pulse Stepping motor mode 0 to 13421772.7 μm, 0 to 1342.17727 inch, 0 to 134217727 degree, 0 to 134217727 pulse | In speed-position switching control (INC mode)/position-speed switching control: 0 to 214748364.7 μm, 0 to 21474.83647 inch, 0 to 21474.83647 degree, 0 to 2147483647 pulse In speed-position switching control (ABS mode): 0 to 359.99999 degree | | |
| | Speed command | Standard mode 0.01 to 600000.00mm/min, 0.001 to 600000.000 inch/min, 0.001 to 600000.000 degree/min, 1 to 1000000 pulse/s Stepping motor mode 0.01 to 375000.00 mm/min, 0.001 to 37500.000 inch/min, 0.001 to 37500.000 degree/min, 1 to 62500 pulse/s | 0.01 to 20000000.00 mm/min, 0.001 to 2000000.000 inch/min, 0.001 to 3000000.000 degree/min, 1 to 5000000 pulse/s | 0 | |
| | Acceleration/ deceleration process | Automatic trapezoidal acceleration/de deceleration | celeration, S-pattern acceleration/ | 0 | |
| | Acceleration/ deceleration time | The range is selectable between 1 to 65535ms and 1 to 8388608ms. Four patterns can be set for each of acceleration time and deceleration time. | 1 to 8388608ms Four patterns can be set for each of acceleration time and deceleration time. | 0 | |
| | Sudden stop deceleration time | The range is selectable between 1 to 65535ms and 1 to 8388608ms. | 1 to 8388608ms | 0 | |

| Item | Specifications | | Compatibility | Precautions |
|--|--|---|---------------|--|
| | AD75P1-S3/AD75P2-S3/ AD75P3-S3 | RD75P2/RD75P4/RD75D2/ RD75D4 | | |
| Starting time | 20ms | 1-axis linear control: 0.3ms 1-axis speed control: 0.3ms 2-axis linear interpolation control (composite speed): 0.45ms 2-axis linear interpolation control (reference axis speed): 0.45ms 2-axis circular interpolation control: 0.63ms 2-axis speed control: 0.63ms 3-axis linear interpolation control (composite speed): 0.93ms 3-axis linear interpolation control (reference axis speed): 0.93ms 3-axis helical interpolation control: 1.8ms 3-axis speed control: 0.93ms 4-axis linear interpolation control: 1.08ms 4-axis speed control: 1.08ms | Δ | Because the performance such as the starting time and refreshing cycle of data is enhanced, modify each program as needed while checking the timing of the processing. |
| Command pulse output system | Open collector, differential driver | RD75P2/RD75P4: Open collector RD75D2/RD75D4: Differential driver | Δ | MELSEC iQ-R series modules support either an open collector or a differential driver, but not both of them. |
| Maximum output pulse | When connected to the open collector: 200kpps When connected to the differential driver: 400kpps | RD75P2/RD75P4: 200000 pulse/s RD75D2/RD75D4: 5000000 pulse/s | 0 | |
| Maximum connection distance between servos | When connected to the open collector: 2m When connected to the differential driver: 10m | RD75P2/RD75P4: 2m RD75D2/RD75D4: 10m | 0 | |
| Flash ROM write count | 100000 times maximum | | 0 | |
| External interface | 10136-3000VE, 10136-6000EL | 40-pin connector (A6CON1/2/4) | × | Wiring needs to be |
| Applicable wire size | 10136-3000V: 0.05 to 0.2mm² 10136-6000EL: 0.08mm² | 0.088 to 0.3mm | × | changed after replacement. |
| Number of occupied I/O points | 32 points (I/O assignment: Special 32 points) | 32 points (I/O assignment: Intelligent 32 points) | 0 | |
| Internal current consumption (5VDC) | 0.70A or lower | RD75P2: 0.38A RD75P4: 0.42A RD75D2: 0.54A RD75D4: 0.78A | _ | |
| External dimensions | 250(H)×37.5(W)×106(D)mm | 106(H)×27.8(W)×110(D)mm | _ | |
| Weight | 0.35kg | RD75P2: 0.14kg RD75P4/RD75D2/RD75D4: 0.15kg | _ | |

High-speed counter modules

AD61 and RD62P2

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|---|--|--|---------------|--|
| | | AD61 | D61 RD62P2 | | |
| Number of char | nnels | 2 channels | | 0 | |
| Counting speed | switch setting | _ | 200kpps (100k to 200kpps), 100kpps (10k to 100kpps), 10kpps (10kpps or less) | 0 | Set the counting speed switch setting of parameters to 100kpps. |
| Count input Phase signal | | 1-phase input, 2-phase input | 1-phase input (1 multiple/2 multiples), 2-phase input (1 multiple/ 2 multiples/4 multiples), CW/CCW input | 0 | |
| | Signal level (φA, φB) | 5/12/24VDC, 2 to 5mA | | 0 | |
| Counter | Counting speed (maximum) | 1-phase input: 50KPPS 2-phase input: 50KPPS | When 200k is set: 200kpps When 100k is set: 100kpps When 10k is set: 10kpps | Δ | *1 |
| | Counting range | 24-bit unsigned binary: 0 to 16777215 | 32-bit signed binary: -2147483648 to 2147483647 | Δ | Data is changed from 24-bit unsigned binary to 32-bit signed binary. |
| | Туре | UP/DOWN preset counter + ring cour | | 0 | |
| | Minimum count pulse width (duty ratio: 50%) | 20μs (10μs for each ON/OFF) | *2 | 0 | |
| Magnitude comparison | Comparison range | 24-bit unsigned binary | 32-bit signed binary | Δ | Data is changed from 24-bit unsigned binary to 32-bit signed binary. |
| | Comparison result | Set value < Count value, Set value = | Count value, Set value > Count value | 0 | |
| External input | Preset | 5VDC 5mA, 12/24VDC 3/6mA | 5/12/24VDC, 7 to 10mA | Δ | The external input |
| | Count disable | 5VDC 5mA, 12/24VDC 3/6mA | _ | | specifications are different. Check the |
| | Function start | _ | 5/12/24VDC, 7 to 10mA | | specifications of external devices. |
| External output | Coincidence output | Transistor (open collector) output 12/24VDC 0.5A | Transistor (sink type) output 2 points/channel 12/24VDC, 0.5A/point, 2A/common Current consumption of the external auxiliary power supply: 43mA (TYP., 24VDC and all points ON/common) | Δ | The external output specifications are different. Check the specifications of external devices. |
| External interfa | ce | 38-point terminal block (M3×6 screws) | 40-pin connector (A6CON1/2/4) | × | Wiring needs to be changed after |
| Applicable wire | size | 0.75 to 2mm³ | 0.088 to 0.3mm² | × | replacement. By using the upgrade |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | _ | _ | tool conversion adapter (ERNT- 1AR61D), the existing external wiring and terminal blocks in the existing system can be used.*3 |
| Number of occupied I/O points | | 32 points (I/O assignment: Special 32 points) | 16 points (I/O assignment: Intelligent 16 points) | Δ | The number of occupied I/O points is changed after replacement. |
| Internal current (5VDC) | consumption | 0.30A (TYP. all points ON) | 0.11A (TYP. all points ON) | _ | |
| External dimens | sions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×111(D)mm | _ | |
| Weight | | 0.50kg | 0.11kg | - | |


*1 The counting speed is affected by the rise/fall time of pulses. A count can be performed with the following counting speed. AD61

| Rise/fall time | Common to 1-phase input and 2-phase input | | |
|----------------|---|--|--|
| $t = 5\mu s$ | 50KPPS | | |
| t = 50μs | 5KPPS | | |



RD62P2

| Counting speed switch setting | 200kpps | 100kpps | 10kpps |
|--|---------|---------|--------|
| Rise/fall time Common to 1-phase input and 2-phase | | input | |
| t = 1.25μs or less | 200kpps | 100kpps | 10kpps |
| t = 2.5μs or less | 100kpps | 100kpps | 10kpps |
| t = 25μs or less | _ | 10kpps | 10kpps |
| t = 500μs or less | _ | _ | 500pps |

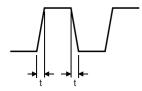

*2 The following table shows the minimum count pulse width for the RD62P2.

| Pulse input mode | Waveform (in up count, duty ratio: 50%) | Minimum count | | ase difference, t (μs), at |
|-----------------------|---|-------------------|-------------------|----------------------------|
| | | 200kpps | 100kpps | 10kpps |
| 1-phase multiple of 1 | ΦA ΦB and CH1 Down count command (Y3) | T = 5 | T = 10 | T = 100 |
| 1-phase multiple of 2 | ΦA ΦB and CH1 Down count command (Y3) | T = 10 | T = 20 | T = 200 |
| CW/CCW | ФА | T = 5 | T = 10 | T = 100 |
| 2-phase multiple of 1 | ФВ | T = 5 t = 1.25 | T = 10 t = 2.5 | T = 100 t = 25 |
| 2-phase multiple of 2 | ФВ | T = 10 t = 2.5 | T = 20 t = 5 | T = 200 t = 50 |

| Pulse input mode | Waveform (in up count, duty ratio: 50%) | Minimum count pulse cycle, T, and phase difference, t (μ s), at each counting speed | | |
|-----------------------|---|--|------------------|--------------------|
| | | 200kpps | 100kpps | 10kpps |
| 2-phase multiple of 4 | ΦA | T = 20 t = 5 | T = 40 t = 10 | T = 400 t = 100 |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.


AD61S1 and RD62P2

| Item | | Specifications | | Compatibility | Precautions |
|--------------------------------|---|---|--|---------------|--|
| | | AD61S1 | RD62P2 | - | |
| Number of cha | nnels | 2 channels | | 0 | |
| Counting speed | d switch setting | _ | 200kpps (100k to 200kpps), 100kpps (10k to 100kpps), 10kpps (10kpps or less) | 0 | Set the counting speed switch setting of parameters to 10kpps. |
| Count input signal | Phase | 1-phase input, 2-phase input | 1-phase input (1 multiple/2 multiples), 2-phase input (1 multiple/2 multiples/4 multiples), CW/CCW input | 0 | |
| | Signal level (φA, φB) | 5/12/24VDC, 2 to 5mA | | 0 | |
| Counter | Counting speed (maximum) | 1-phase input: 10KPPS 2-phase input: 7KPPS | When 200k is set: 200kpps When 100k is set: 100kpps When 10k is set: 10kpps | Δ | *1 |
| | Counting range | 24-bit unsigned binary : 0 to 16777215 | 32-bit signed binary : -2147483648 to 2147483647 | Δ | Data is changed from 24-bit unsigned binary to 32-bit signed binary. |
| | Туре | UP/DOWN preset counter + ring coun | ter function | 0 | |
| | Minimum count pulse width (duty ratio: 50%) | 1-phase input: 100μs (50μs for each ON/OFF) 2-phase input: 142μs (71μs for each ON/OFF) | *2 | 0 | |
| Magnitude comparison | Comparison range | 24-bit unsigned binary | 32-bit signed binary | Δ | Data is changed from 24-bit unsigned binary to 32-bit signed binary. |
| | Comparison result | Set value < Count value, Set value = 0 | Count value, Set value > Count value | 0 | |
| External input | Preset | 5VDC 5mA, 12/24VDC 3/6mA | 5/12/24VDC, 7 to 10mA | Δ | The external input specifications are different. Check the specifications of external devices. |
| | Count disable | 5VDC 5mA, 12/24VDC 3/6mA | _ | | |
| | Function start | _ | 5/12/24VDC, 7 to 10mA | | |
| External output | Coincidence output | Transistor (open collector) output 12/24VDC 0.5A | Transistor (sink type) output 2 points/channel 12/24VDC, 0.5A/point, 2A/common Current consumption of the external auxiliary power supply: 43mA (TYP., 24VDC and all points ON/common) | Δ | The external output specifications are different. Check the specifications of external devices. |
| External interfa | ice | 38-point terminal block (M3×6 screws) | 40-pin connector (A6CON1/2/4) | × | Wiring needs to be changed after |
| Applicable wire | size | 0.75 to 2mm² | 0.088 to 0.3mm² | × | replacement. |
| Applicable solderless terminal | | R1.25-3, R2-3, RAV1.25-3, RAV2-3 | _ | _ | By using the upgrade tool conversion adapter (ERNT-1AR61D), the existing external wiring and terminal blocks in the existing system can be used.*3 |
| Number of occ | upied I/O points | 32 points (I/O assignment: Special 32 points) | 16 points (I/O assignment: Intelligent 16 points) | Δ | The number of occupied I/O points is changed after replacement. |
| Internal current (5VDC) | t consumption | 0.30A (TYP. all points ON) | 0.11A (TYP. all points ON) | _ | |
| External dimen | sions | 250(H)×37.5(W)×131(D)mm | 106(H)×27.8(W)×111(D)mm | _ | |
| Weight | | 0.50kg | 0.11kg | _ | |

*1 The counting speed is affected by the rise/fall time of pulses. A count can be performed with the following counting speed.


AD61S1

| Rise/fall time | 1-phase input | 2-phase input |
|----------------|---------------|---------------|
| t = 5μs | 10KPPS | 7KPPS |
| t = 500μs | 500PPS | 250PPS |

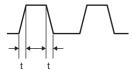

RD62P2

| Counting speed switch setting | 200kpps | 100kpps | 10kpps | |
|-------------------------------|---|---------|--------|--|
| Rise/fall time | Common to 1-phase input and 2-phase input | | | |
| t = 1.25μs or less | 200kpps | 100kpps | 10kpps | |
| t = 2.5μs or less | 100kpps | 100kpps | 10kpps | |
| t = 25μs or less | _ | 10kpps | 10kpps | |
| t = 500μs or less | _ | _ | 500pps | |

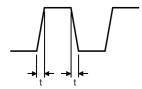

*2 The following table shows the minimum count pulse width for the RD62P2.

| Pulse input mode | Waveform (in up count, duty ratio: 50%) | Minimum count p | | ase difference, t (μs), at |
|-----------------------|---|-------------------|-------------------|----------------------------|
| | | 200kpps | 100kpps | 10kpps |
| 1-phase multiple of 1 | ΦA ΦB and CH1 Down count command (Y3) | T = 5 | T = 10 | T = 100 |
| 1-phase multiple of 2 | ΦA ΦB and CH1 Down count command (Y3) | T = 10 | T = 20 | T = 200 |
| CW/CCW | ΦA — ΦB — — — | T = 5 | T = 10 | T = 100 |
| 2-phase multiple of 1 | ФВ | T = 5 t = 1.25 | T = 10 t = 2.5 | T = 100 t = 25 |
| 2-phase multiple of 2 | ФВ | T = 10 t = 2.5 | T = 20 t = 5 | T = 200 t = 50 |

| Pulse input mode | Waveform (in up count, duty ratio: 50%) | Minimum count pulse cycle, T, and phase difference, t (μ s), at each counting speed | | |
|-----------------------|---|--|------------------|--------------------|
| | | 200kpps | 100kpps | 10kpps |
| 2-phase multiple of 4 | ΦA ΦB t | T = 20 t = 5 | T = 40 t = 10 | T = 400 t = 100 |

^{*3} For an upgrade tool, please consult your local Mitsubishi Electric representative.

8.3 Function Comparison Tables

Positioning modules

AD75P1-S3/AD75P2-S3/AD75P3-S3 and RD75P2/RD75P4/RD75D2/RD75D4

■Main functions

O: Compatible/function available, △: Partly changed, ×: Incompatible/function not available, —: Not applicable

| Function | | MELSEC-A/ QnA series | MELSEC iQ-R series | Precautions |
|----------------------------------|--|-------------------------------------|--------------------------------------|-------------|
| | | AD75P1-S3 AD75P2-S3 AD75P3-S3 | RD75P2 RD75P4 RD75D2 RD75D4 | |
| OPR control | Machine OPR control Mechanically establishes the positioning start point using a near-point dog or stopper. (Positioning start No.9001) Fast OPR control Positions a target to the OP address (Md.43) stored in the module using machine OPR. (Positioning start No.9002) | 0 | 0 | |
| Position control | Linear control (1-axis linear control, 2-axis linear interpolation control) Positions a target using a linear path to the address set in the positioning data or to the position specified with the movement amount. Fixed-feed control (1-axis fixed-feed control, 2-axis fixed-feed control) Positions a target by the movement amount using the amount set in the positioning data. (With the fixed-feed control, [Md.29] Current feed value is set to 0 when the control is started. In the 2-axis fixed-feed control, the fixed-feed is performed along a linear path obtained by interpolation.) 2-axis circular interpolation control Positions a target using an arc path to the address set in the positioning data, or to the position specified with the movement amount, sub point, or center point. | 0 | 0 | |
| Speed control | Continuously outputs the pulses corresponding to the command speed set in the positioning data. | 0 | 0 | |
| Speed-position switching control | Performs the speed control, and position control (positioning with the specified movement amount) immediately after that by turning on Speed-position switching signal. | 0 | 0 | |
| Current value changing | Changes [Md.29] Current feed value to the address set in the positioning data. The following two methods can be used. (Machine feed value cannot be changed.) • Current value changing using positioning data • Current value changing using the current value changing start No. (No.9003) | 0 | 0 | |
| JUMP instruction | Unconditionally or conditionally jumps to the specified positioning data No. | 0 | 0 | |
| Block start (normal start) | With one start, executes the positioning data in a random block with the set order. | 0 | 0 | |
| Condition start | Judges the condition set in Condition data for the specified positioning data, and executes Block start data. When the condition is established, Block start data is executed. When not established, that block start data is ignored, and the next point's block start data is executed. | 0 | 0 | |
| Wait start | Judges the condition set in Condition data for the specified positioning data, and executes Block start data. When the condition is established, Block start data is executed. When not established, the control stops (waits) until the condition is established. | 0 | 0 | |

| Function | | MELSEC-A/ QnA series AD75P1-S3 AD75P2-S3 AD75P3-S3 | MELSEC iQ-R series RD75P2 RD75P4 RD75D2 RD75D4 | Precautions |
|----------------------------------|--|--|---|-------------|
| Simultaneous start | Simultaneously executes the positioning data having the number for the axis specified with Condition data (Outputs pulses at the same timing). | 0 | 0 | |
| Stop | Stops positioning operation. | 0 | 0 | |
| Repeated start (FOR loop) | Repeats the program from the block start data set with FOR loop to the block start data set in NEXT for the specified number of times. | 0 | 0 | |
| Repeated start (FOR condition) | Repeats the program from the block start data set with FOR condition to the block start data set in NEXT until the conditions set in Condition data are established. | 0 | 0 | |
| JOG operation | Outputs pulses to the drive unit while JOG start signal is on. | 0 | 0 | |
| Manual pulse generator operation | Outputs pulses commanded with the manual pulse generator to the drive unit. (Performs the fine adjustment and others at the pulse level.) | 0 | 0 | |

■Sub functions

 \bigcirc : Compatible/function available, \triangle : Partly changed, \times : Incompatible/function not available, -: Not applicable

| Function | | MELSEC-A/ QnA series | MELSEC iQ-R series | Precautions |
|--------------------------------------|---|-------------------------------------|--------------------------------------|-------------|
| | | AD75P1-S3 AD75P2-S3 AD75P3-S3 | RD75P2 RD75P4 RD75D2 RD75D4 | |
| OPR retry function | Retries the machine OPR with the upper/lower limit switches during the machine OPR. This allows the machine OPR to be performed even if the axis is not returned to a position before the near-point dog with operations such as the JOG operation. | 0 | 0 | |
| OP shift function | After the machine OPR, this function compensates the position by the specified distance from the machine OP position and sets that position as the OP address. | 0 | 0 | |
| Backlash compensation function | Compensates the backlash amount of the machine system. Feed pulses equivalent to the set backlash amount are output each time the movement direction changes. | 0 | 0 | |
| Electronic gear function | By setting the movement amount per pulse, this function can freely change the machine movement amount per commanded pulse. A flexible positioning system that matches the machine system can be structured by setting the movement amount per pulse. | 0 | 0 | |
| Near pass mode function | Suppresses the machine vibration when the speed is changed during continuous path control in the interpolation control. | 0 | 0 | |
| Speed limit function | If the command speed exceeds [Pr.7] Speed limit value during the control, this function limits the command speed to within the setting range of [Pr.7] Speed limit value. | 0 | 0 | |
| Torque limit function | If the torque generated in the servo motor exceeds [Pr.18] Torque limit setting value during the control, this function limits the generated torque to within the setting range of [Pr.18] Torque limit setting value. | 0 | 0 | |
| Software stroke limit function | If a command outside of the upper/lower limit stroke limit setting range, set in the parameters, is issued, this function will not execute the positioning for that command. | 0 | 0 | |
| Hardware stroke limit function | Performs the deceleration stop with the limit switch connected to the connector for external devices. | 0 | 0 | |
| Speed change function | Changes the speed during positioning. Set the new speed in [Cd.16] New speed value, the speed change buffer memory area, and change the speed with [Cd.17] Speed change request. | 0 | 0 | |
| Override function | Changes the speed during positioning within a percentage of 1 to 300%. Execute this function using [Cd.18] Positioning operation speed override. | 0 | 0 | |

| Function | | MELSEC-A/ QnA series AD75P1-S3 AD75P2-S3 AD75P3-S3 | MELSEC iQ-R series RD75P2 RD75P4 RD75D2 RD75D4 | Precautions |
|---|---|--|---|---|
| Acceleration/ deceleration time change function | Changes the acceleration/deceleration time at the speed change. | 0 | 0 | |
| Torque change function | Changes the torque limit value during the control. | 0 | 0 | |
| Step function | Temporarily stops the operation to check the positioning operation during debugging and other operation. The operation can be stopped for each Automatic deceleration or Positioning data. | 0 | 0 | |
| Skip function | Pauses (decelerates to stop) the positioning being executed when Skip signal is input, and performs the next positioning. | 0 | 0 | |
| M code output function | Issues a command for a subsidiary work (such as stopping clamps or drills and changing tools) corresponding to each code number (0 to 32767) that can be set to each positioning data. | 0 | 0 | |
| Teaching function | Stores the address positioned with the manual control into the positioning address of the specified positioning data No. ([Cd.5]). | 0 | 0 | |
| Command in- position function | At each automatic deceleration, this function calculates the remaining distance for the module to reach the positioning stop position, and sets Command in-position flag to 1 when the value is less than or equal to the set value. When performing another subsidiary work before the control ends, use this function as a trigger for the subsidiary work. | 0 | 0 | |
| Stepping motor mode function | Sets data required to use a stepping motor. | 0 | × | The stepping motor mode function is not available. |
| Acceleration/ deceleration process function | Adjusts acceleration/deceleration of the control. | 0 | 0 | |
| Indirect designation function | Specifies positioning data No. indirectly and starts positioning operation. | 0 | × | The indirect designation function is not available. |

■Common functions

 $\bigcirc : \textbf{Compatible/function available}, \ \triangle : \textbf{Partly changed}, \ \times : \textbf{Incompatible/function not available}, \ - : \textbf{Not applicable}$

| Function | | MELSEC-A/ QnA series AD75P1-S3 AD75P2-S3 AD75P3-S3 | MELSEC iQ-R series RD75P2 RD75P4 RD75D2 RD75D4 | Precautions |
|-----------------------------------|---|--|---|--|
| Parameter initialization function | Resets the setting data stored in the flash ROM of the module to the factory default values. The following two methods can be used. (1) Method using a sequence program (2) Method using software package | 0 | Δ | For the RD75P□/D□, use the module data initialization function instead. Only the method using a sequence program is supported. |
| Execution data backup function | Stores the setting data currently being executed into the flash ROM. The following two methods can be used. (1) Method using a sequence program (2) Method using software package | 0 | Δ | For the RD75P□/D□, use the module data backup function instead. Only the method using a sequence program is supported. |
| LED indication function | Indicates the module operating status, signal status, or error status with a 17-segment LED on the front of the module. What status the LED indicates is switched using the mode switch on the front of the module. | 0 | × | The LED indication function is not available. |
| Clock data function | Sets the clock data of the programmable controller CPU to the module. The set clock data are used for history data. | 0 | 0 | |

High-speed counter modules

AD61/AD61S1 and RD62P2

○: Compatible/function available, △: Partly changed, ×: Incompatible/function not available, —: Not applicable

| Function | MELSEC-A/ QnA series | MELSEC iQ-R series | Precautions | |
|-----------------------------|--|-----------------------|-------------|--|
| | | AD61 AD61S1 | RD62P2*1 | |
| Preset function | Overwrites the present counter value with any numerical value. | 0 | 0 | |
| Disable function | Stops counting. | 0 | 0 | |
| Ring counter function | Repeats counting between any set values. | 0 | 0 | |
| Coincidence output function | Outputs signals when a set value and a present value match. | 0 | 0 | |

^{*1} The counter operation mode for the RD62P2 is pulse count mode.

8.4 Precautions for Replacement

Wiring

For positioning modules, the external wiring connectors to be used differ between the MELSEC-A/QnA series and the MELSEC iQ-R series. And wire sizes applicable to the connectors differ accordingly.

For high-speed counter modules, MELSEC-A/QnA series uses a terminal block while MELSEC iQ-R series uses a connector. When using a MELSEC iQ-R series high-speed counter module, use connectors for wiring instead of terminal blocks, or use an upgrade tool conversion adapter.

External interface specifications

The external interface specifications differ between the MELSEC-A/QnA series and the MELSEC iQ-R series. Check that connections to external devices meet the specifications.

Dedicated instructions

The dedicated instructions differ between the MELSEC-A/QnA series and the MELSEC iQ-R series.

If a dedicated instruction is used in a MELSEC-A/QnA series program, the program needs to be corrected for MELSEC iQ-R series.

I/O signals and buffer memory areas

The layouts of I/O signals and buffer memory areas differ between the MELSEC-A/QnA series and the MELSEC iQ-R series. If an I/O signal or a buffer memory area is used in a MELSEC-A/QnA series program, the program needs to be corrected for the MELSEC iQ-R series.



For details on these precautions, refer to the following.

MELSEC iQ-R Module Configuration Manual

MELSEC iQ-R Positioning Module User's Manual (Startup)

MELSEC iQ-R Positioning Module User's Manual (Application)

MELSEC iQ-R High-Speed Counter Module User's Manual (Startup)

MELSEC iQ-R High-Speed Counter Module User's Manual (Application)

9 CONTROL NETWORK MODULE REPLACEMENT

9.1 Alternative Model List

This section lists alternative models of the MELSEC iQ-R series control network modules in accordance with the specifications and functions of the MELSEC-A/QnA series control network modules.

Select models that best suit your application considering the scope of control of MELSEC-A/QnA series control network modules currently used, as well as the system specifications and extensibility after replacement.

| Item | MELSEC-A/ QnA series | MELSEC iQ-R series | Specification difference |
|-------------------|--|--------------------|--|
| | | | |
| CC-Link | AJ61BT11 AJ61QBT11 | RJ61BT11 | (1) External wiring: Changed (2) Number of slots: Not changed (3) Programs: I/O signals are changed, and buffer memory addresses are changed. (4) Specifications: Connection cables are changed (for Ver.1.10-compatible CC-Link dedicated cable) (5) Functions: Changed |
| MELSECNET(II) | AJ71AP21 AJ71AP21-S3 AJ71AR21 AJ71P22-S3 AJ71AP22-S3 AJ72P25 AJ72P25-S1 AJ72P25-S3 AJ72R25 AJ72R25-S1 | None | Connect the RQ extension base unit (R6□B) and consider replacing the existing system with a system on MELSECNET/H. |
| MELSECNET/B | AJ71AT21B AJ72T25B | None | Connect the RQ extension base unit (R6□B) and consider replacing the existing system with a system on MELSECNET/H. |
| MELSECNET/10 | AJ71LP21G AJ71LR21 AJ71QLP21S AJ71QLP21G AJ71QLR21 AJ72LP25 AJ72LP25G AJ72LR25 AJ72BR15 AJ72QLP25 AJ72QLP25 AJ72QLP25 AJ72QLR25 AJ72QLR25 | None | Connect the RQ extension base unit (R6□B) and consider replacing the existing system with a system on MELSECNET/H. |
| MELSECNET/10 | AJ71LP21 AJ71QLP21 | RJ71LP21-25 | (1) External wiring: Not changed (2) Number of slots: Not changed (3) Programs: Setting parameters of the station number and the station type is required. (4) Specifications: Not changed (5) Functions: Changed (No remote I/O network and simple redundancy) |
| MELSECNET/10 | AJ71BR11 AJ71QBR11 | RJ71BR11 | (1) External wiring: Not changed (2) Number of slots: Not changed (3) Programs: Setting parameters of the station number and the station type is required. (4) Specifications: Not changed (5) Functions: Changed (No remote I/O network, redundancy, and simple redundancy) |
| MELSECNET/MINI-S3 | AJ71PT32-S3 AJ71T32-S3 AJ71T32-S4 AJ72PT35 AJ72T35 | None | Consider replacing the existing system with a system on CC-Link. |
| MELSECNET-I/OLINK | AJ51T64 | None | Connect the RQ extension base unit (R6□B) and consider replacing the existing system with AnyWire DB A20. |
| JEMANET (OPCN-1) | AJ71J92-S3 AJ72J95 | None | Consider replacing the existing system with a system on other networks. |
| ME-NET | AJ71ME81 | None | Consider replacing the existing system with a system on other networks. |

| Item | MELSEC-A/ QnA series | MELSEC iQ-R series | Specification difference |
|-------|-------------------------|-----------------------|---|
| B/NET | AJ71B62-S3 | None | Consider replacing the existing system with a system on other networks. |

9.2 Specification Comparison Tables

CC-Link system master/local modules

AJ61BT11/AJ61QBT11 and RJ61BT11

| Item | Specifications | | Compatibility | Precautions |
|--|--|--|---------------|---|
| | AJ61BT11/AJ61QBT11 | RJ61BT11 | | |
| Transmission speed | Selected from 156kbps, 625kbps, 2.5M | lbps, 5Mbps, and 10Mbps. | 0 | |
| Maximum number of connected modules (master station) | 64 | 0 | | |
| Number of occupied stations (local station) | 1 to 4 | 1 to 4 | | |
| Maximum number of link points per system | Remote I/O (RX, RY): 2048 Remote register (RWw): 256 Remote register (RWr): 256 | | 0 | |
| Link points per station | Remote I/O (RX, RY): 32 (30 for a local Remote register (RWw): 4 Remote register (RWr): 4 | I station) | 0 | |
| Communication method | Broadcast polling method | | 0 | |
| Synchronization method | Frame synchronization method | | 0 | |
| Encoding method | NRZI method | | 0 | |
| Transmission method | Bus (RS-485) | | 0 | |
| Transmission format | HDLC standards | | 0 | |
| Error control system | CRC (X ¹⁶ + X ¹² + X ⁵ + 1) | | 0 | |
| Connection cable | Ver.1.10-compatible CC-Link dedicated cable CC-Link dedicated cable (Ver.1.00-compatible) CC-Link dedicated high-performance cable (Ver.1.00-compatible) | Ver.1.10-compatible CC-Link dedicated cable | Δ | Only Ver.1.10-compatible CC-Link dedicated cable can be used. |
| Maximum overall cable distance (maximum transmission distance) | Depends on the transmission speed. For | or details, refer to the relevant manuals. | 0 | |
| RAS function | Standby master function, automatic rete function, Error detection using link special relay a areas (SW) | | 0 | |
| Number of parameter registrations to E ² PROM | 10,000 times | _ | Δ | Set parameters using by GX Works3. |
| External interface | 10-point terminal block (M3 screws) | 7-point terminal block (M3) | × | Wiring needs to be changed |
| Applicable wire size | 0.3 to 1.25mm | | 0 | after replacement. |
| Applicable solderless terminal | R1.25-3 (solderless terminal with an insulation sleeve cannot be used.) | | 0 | |
| Number of occupied I/O points | 32 (I/O assignment: special 32 points) | 32 (I/O assignment: Intelligent 32 points) | 0 | |
| Internal current consumption (5VDC) | 0.45A | 0.34A | _ | |
| | | 400(11) 07.0(11) 40.1(7) | | |
| External dimensions | 250(H) × 37.5(W) × 129.1(D)mm | 106(H) × 27.8(W) × 131(D)mm | - | |

MELSECNET/10 network modules

AJ71LP21/AJ71QLP21 and RJ71LP21-25

O: Compatible, △: Partly changed, ×: Incompatible, —: Not applicable

| Item | | Specifications | Compatibility | Precautions | |
|---|----------------|---|--|-------------|---|
| | | AJ71LP21/AJ71QLP21 RJ71LP21-25 (MELSECNET/10 mode) | | | |
| Maximum number of link points per | LB LW | 8192 | | 0 | |
| network | LX LY | 8192 | | 0 | |
| Maximum number of link points per station | LB LW LX | {(LY + LB) ÷ 8 + (2 × LW)} ≤ 2000 bytes | | 0 | |
| Communication spe | | 10Mbps | | 0 | |
| Number of connecte stations per network | ed | 64 (control station: 1, normal station: 63 | 3) | 0 | |
| Connection cable | | Optical fiber cable (Obtained by user) | | 0 | |
| Overall distance | | 30km | | 0 | |
| Station-to-station dis | stance | SI optical cable: 500m H-PCF optical cable: 1km Broad-band H-PCF optical cable: 1km QSI optical cable: 1km | | 0 | |
| Maximum number o networks | f | AJ71LP21: 255 (The sum total of PLC to PLC network and remote I/O network) AJ71QLP21: 239 (The sum total of PLC to PLC network and remote I/O network) | 239 | Δ | Network numbers 240 to 250 cannot be set after replacement. Set other unused network numbers instead. |
| Maximum number o groups | f | 9 | | 0 | |
| Transmission route | format | Duplex loop | | 0 | |
| Communication met | thod | Token ring | | 0 | |
| Error control system | 1 | Retry by CRC (X ¹⁶ + X ¹² + X ⁵ + 1) and | overtime | 0 | |
| RAS function | | Loop back function due to abnormalit Diagnostic function for local link circu Prevention of system down due to sh Abnormality detection by link special | uit check iifting to control station | 0 | |
| Transient transmission | | N:N communication (Monitor, program upload/download, etc.) Link dedicated instructions (ZNRD, ZNWR) | N:N communication (Monitor, program upload/download, etc.) Send/receive instructions to/from a sequence program (ZNRD/ZNWR, SEND/RECV, RECVS, READ/WRITE, SREAD/SWRITE, REQ, RRUN/RSTOP, RTMRD/RTMWR) Function for sending message to channel numbers 1 to 8 | 0 | |
| Number of occupied points | I I/O | 32 (I/O assignment: special 32 points) 32 (I/O assignment: Intelligent 32 points) | | 0 | |
| Internal current consumption (5VDC | ;) | 0.65A | 0.48A | _ | |
| Weight | | 0.31kg ^{*1} | 0.15kg | _ | |

^{*1} For the AJ71LP21 with the hardware version P or earlier and the AJ71QLP21 with the hardware version M or earlier, the weight is 0.45kg.

AJ71BR11/AJ71QBR11 and RJ71BR11

| Item | | Specifications | Compatibility | Precautions | | |
|---|-----------|--|--|-------------|---|--|
| | | AJ71BR11/AJ71QBR11 | RJ71BR11 (MELSECNET/10 mode) | | | |
| Maximum number of link points per | LB LW | 8192 | | 0 | | |
| network | LX | 8192 | | 0 | | |
| Maximum number of link points per | LB LW | {(LY + LB) ÷ 8 + (2 × LW)} ≤ 2000 bytes | 3 | 0 | | |
| station | LX | | | | | |
| Communication spe | | 10Mbps | | 0 | | |
| Number of connecte stations per network | ed | 32 (control station: 1, normal station: 3 | 1) | 0 | | |
| Connection cable | | Coaxial cable (Obtained by user) | | 0 | | |
| Overall distance | 3C-2V | 300m | | 0 | | |
| | 5C-2V | 500m | 500m | | | |
| | 5C-FB | 500m | | | | |
| Station-to-station | 3C-2V | 300m | 0 | | | |
| distance | 5C-2V | 500m | | | | |
| | 5C-FB | 500m | | | | |
| Maximum number of networks | | AJ71BR11: 255 (The sum total of PLC to PLC network and remote I/O network) AJ71QBR11: 239 (The sum total of PLC to PLC network and remote I/O network) | 239 | Δ | Network numbers 240 to 250 cannot be set after replacement. Set other unused network numbers instead. | |
| Maximum number of | of groups | 9 | | 0 | | |
| Transmission route | format | Single bus | | 0 | | |
| Communication me | thod | Token bus | | 0 | | |
| Error control system | n | Retry by CRC (X ¹⁶ + X ¹² + X ⁵ + 1) and | overtime | 0 | | |
| RAS function | | Diagnostic function for local link circu Prevention of system down due to sh Abnormality detection by link special | nifting to control station | 0 | | |
| Transient transmission | | N:N communication (Monitor, program upload/download, etc.) Link dedicated instructions (ZNRD, ZNWR) | N:N communication (Monitor, program upload/download, etc.) Send/receive instructions to/from a sequence program (ZNRD/ZNWR, SEND/RECV, RECVS, READ/WRITE, SREAD/SWRITE, REQ, RRUN/RSTOP, RTMRD/RTMWR) Function for sending message to channel numbers 1 to 8 | 0 | | |
| Number of occupied points | d I/O | 32 (I/O assignment: special 32 points) 32 (I/O assignment: Intelligent 32 points) | | 0 | | |
| Internal current con (5VDC) | sumption | 0.80A | 0.62A | _ | | |
| Weight | | AJ71BR11: 0.45kg AJ71QBR11: 0.33kg | 0.14kg | _ | | |

9.3 Function Comparison Tables

CC-Link system master/local modules

AJ61BT11/AJ61QBT11 and RJ61BT11

○: Compatible/function available, △: Partly changed, ×: Incompatible/function not available, —: Not applicable

| Function | | MELSEC-A/0 | QnA series | MELSEC iQ-R series | Precautions |
|---|--|------------|------------|--------------------|---|
| | | AJ61BT11 | AJ61QBT11 | RJ61BT11 | |
| Communication between master station and remote I/O station | Communicates ON/OFF information with a remote I/O station. | 0 | 0 | 0 | |
| Communication between master and remote device stations | Communicates ON/OFF information and numerical data with a remote device station. | 0 | 0 | 0 | |
| Communication between master station and local station | Communicates ON/OFF information and numerical data with a local station. | 0 | 0 | 0 | |
| Communication between master and intelligent device stations | Communicates with intelligent device station using cyclic transmission and transient transmission. | 0 | 0 | 0 | |
| Reserved station function | By setting a remote station and local station, which are to be connected in the future, as reserved stations, these stations are not treated as data link faulty stations. If a connected module is specified, no data link is available. | 0 | 0 | 0 | |
| Error invalid station setting function | Prevents the remote stations and local stations that cannot perform data link due to reasons such as power-off from detecting as data link faulty stations. | 0 | 0 | 0 | |
| Data link status setting at master station programmable controller CPU error | Sets the data link status when an operation continuation error occurs programmable controller CPU of the master station. | 0 | 0 | 0 | |
| Parameter registration to E ² PROM | Parameter writing is not required at each startup of master module by registering parameters to E ² PROM of master module. | 0 | 0 | Δ | Set parameters using by GX Works3. |
| Data link faulty station input data status setting | Sets the input (received) data status (cleared/ held) from the station that has data link error caused by reasons such as power-off. | 0 | 0 | 0 | |
| Module reset function by sequence program | Resets the module by the sequence program without resetting programmable controller CPU when the switch setting is changed or an error has occurred in a module. | 0 | 0 | × | The module reset function by sequence program cannot be used. |
| Data link stop/restart | Stops and restarts a data link during the data link execution. | 0 | 0 | 0 | |
| Automatic return function | When a module that has been disconnected from data link due to reasons such as power-off returns to the normal status, data link is automatically restarted. | 0 | 0 | 0 | |
| Local station cut-off function | Data link can be continued in a normal module by disconnecting a module that cannot perform data link due to reasons such as power-off. | 0 | 0 | 0 | |
| Data link status check (SB/SW) | Data link status can be checked. Checking the status such as the interlock of sequence program can be used. | 0 | 0 | 0 | |

| Function | | MELSEC-A/Q | MELSEC-A/QnA series | | Precautions |
|--|---|------------|---------------------|----------|--|
| | | AJ61BT11 | AJ61QBT11 | RJ61BT11 | |
| Offline test | Hardware test: Module operation check Line test: Module connection status check Parameter check test: Parameter setting check | 0 | 0 | Δ | The parameter check test cannot be used. |
| Scan synchronous function | Synchronous mode: Data link with scan synchronized with sequence program is available. Asynchronous mode: Data link not synchronized with sequence program is available. | 0 | 0 | 0 | |
| Standby master function | Data link can be continued by switching to the standby master station when an error occurs in the master station. | 0 | 0 | 0 | |
| Dedicated instruction (RIRD, RIWT, RIRCV, RISEND, RIFR, RITO) | Enables transient transmission to an intelligent device station and a local station using dedicated instructions. | 0 | 0 | Δ | The instruction formats are different. |
| Send/receive instruction (SEND, RECV, READ, SREAD, WRITE, SWRITE, REQ) | Enables data sending/receiving to/from other stations on CC-Link. Reading/writing data from/ to other stations is also available. | × | 0 | 0 | |
| Remote I/O net mode | Enables communications between the master station and a remote I/O station only. | 0 | 0 | Δ | Set parameters using by GX Works3. |
| Temporary error invalid station specify function | Enables module replacement without detecting an error of the faulty remote station during online. | 0 | 0 | 0 | |
| Online test function | Enables line test, link start/stop, and other operations by GX Developer. | × | 0 | 0 | |
| Monitoring and diagnostics | Enables monitoring and diagnosing by GX Developer. | × | 0 | 0 | |

MELSECNET/10 network modules

AJ71LP21 and RJ71LP21-25

○: Compatible/function available, △: Partly changed, ×: Incompatible/function not available, —: Not applicable

| Function | | MELSEC-A series | MELSEC iQ-R series | Precautions |
|---|---|--------------------|--|--|
| | | AJ71LP21 | RJ71LP21-25 (MELSECNET /10 mode) | |
| ■Cyclic transmission | | | | |
| Communications with B/W (1:N communication) | Allows data transmission to all the stations using the link relay and the link register. (Communications using B/W) | 0 | 0 | |
| Communications with X/Y (1:1 communication) | Allows data communications between the I/O master station and one of the other stations (one-to-one communications). (Communications using X/Y) | 0 | 0 | |
| Constant link scan function | Maintains the link scan time at a constant value. | 0 | 0 | |
| Data link/stop/restart function | Stops the cyclic transmission temporarily from the engineering tool. | 0 | 0 | |
| Data link transfer function | Transfers the link data to another network at a time using parameters when more than one network module is connected to one programmable controller. | 0 | 0 | |
| ■Transient transmission | | | | |
| Transient transmission function | Allows communications between specific stations only when a communication request is made. (Communications using link dedicated instructions or the engineering tool) | 0 | 0 | The LRDP and LWTP instructions cannot be used after replacement. Use the ZNRD, ZNWR, READ, or WRITE instruction instead. |
| Routing function | Performs the transient transmission to a station in another network number. | 0 | 0 | |
| Group function | Performs the transient transmission to all the stations in a group with a single execution of an instruction. | 0 | 0 | |
| ■RAS function | | • | | |
| Automatic on-line return function | Automatically returns a disconnected station to the network and restarts the data link when the station has recovered from an error. | 0 | 0 | |
| Loopback function | Disconnects the erroneous or faulty station when an error or a fault such as a cable disconnection occurs and maintains the data link with the available stations. | 0 | 0 | |
| Station separation function | Maintains the data link between the available stations even when some stations are down or powered off. | 0 | 0 | |
| Diagnosis function | Checks the network line status and module settings. | 0 | 0 | In the RJ71LP21-25, use the "Network Diagnostics" function of the engineering tool. |
| Data link condition detection function | Detects faulty areas using the data in the link special relay and link special register. | 0 | 0 | In the RJ71LP21-25, use the "Network Diagnostics" function of the engineering tool. |
| Control station shift function | Maintains the data link with another normal station that serves as a sub-control station even if the control station goes down. | 0 | 0 | |
| ■Others | | | | |
| Multiplex transmission function | Allows a high-speed transmission using a duplex transmission path (toward and reverse loops). | 0 | Δ | The RJ71LP21-25 cannot operate as a master station that executes the multiplex transmission function. |
| Reserve station function | Reserves unconnected stations for future use. By using this function, those stations are not detected as faulty stations and no communication error occurs. | 0 | 0 | |

| Function | | MELSEC-A series | MELSEC iQ-R series | Precautions |
|-----------------------------|---|--------------------|--|---|
| | | AJ71LP21 | RJ71LP21-25 (MELSECNET /10 mode) | |
| Station specific parameters | Used to rearrange the transmission range of each station (LB and LW) for a specific station. Setting these parameters eliminates the need for changing programs even when the link device range has been extended during the operation. This also avoids unnecessary transmission ranges. | 0 | × | Reassign the station specific parameters to the refresh parameters.*1 |

^{*1} For details, refer to the following.

MELSEC iQ-R MELSECNET/H Network Module User's Manual (Application)

AJ71QLP21 and RJ71LP21-25

 \bigcirc : Compatible/function available, \triangle : Partly changed, \times : Incompatible/function not available, -: Not applicable

| Function | | MELSEC-QnA series | MELSEC iQ-R series | Precautions |
|---|---|-------------------|--|---|
| | | AJ71QLP21 | RJ71LP21-25 (MELSECNET /10 mode) | |
| ■Cyclic transmission | | I | | |
| Communication with B/W | Allows data transmission to all the stations using the link relay and the link register. (Communications using B/W) | 0 | 0 | |
| Communication with X/Y | Allows data communications between the I/O master station and one of the other stations (one-to-one communications). (Communications using X/Y) | 0 | 0 | |
| Stopping/restarting cyclic transmission | Stops the cyclic transmission temporarily from the engineering tool. | 0 | 0 | |
| Inter data link transfer function | Transfers the link data to another network at a time using parameters when more than one network module is connected to one programmable controller. | 0 | 0 | |
| Direct access to the link device | Reads/writes link devices of the network module from/to a sequence program. | 0 | 0 | |
| Increasing the send points by installing multiple modules of the same network No. | Increases the number of send points per station up to 8000 bytes by connecting multiple network modules of the same network number to one programmable controller. | 0 | 0 | |
| Default values of network refresh parameters | Eliminates the need for setting parameters by using the default values of refresh parameters. | 0 | × | |
| ■Transient transmission | | • | | |
| Transient transmission function | Allows communications between specific stations only when a communication request is made. (Communications using link dedicated instructions or the engineering tool) | 0 | 0 | |
| Routing function | Performs the transient transmission to a station in another network number. | 0 | 0 | |
| Group function | Performs the transient transmission to all the stations in a group with a single execution of an instruction. | 0 | 0 | |
| Link dedicated instructions | Allows communications with other stations at desired timing. | 0 | 0 | |
| Specifying default network | Processes the requests that cannot specify the destination network number. | 0 | × | |
| Clock setting at stations in the network from peripheral devices | Configures the clock setting to the CPU modules on the network from the engineering tool. | 0 | 0 | |
| ■RAS function | | | | |
| Automatic recovery function | Automatically returns a disconnected station to the network and restarts the data link when the station has recovered from an error. | 0 | 0 | |
| Loop back function | Disconnects the erroneous or faulty station when an error or a fault such as a cable disconnection occurs and maintains the data link with the available stations. | 0 | 0 | |
| Station detachment function | Maintains the data link between the available stations even when some stations are down or powered off. | 0 | 0 | |
| Transient transmission is possible when the programmable controller CPU is in fault | Allows users to check error details from the engineering tool via network when a stop error has occurred in a CPU module. | 0 | 0 | In the RJ71LP21-25, use the "Network Diagnostics" function of the engineering tool. |
| Confirming the transient transmission error detection time | Checks the time when the transient transmission was completed with an error, and the network number and the station number in which the error was detected. | 0 | 0 | In the RJ71LP21-25, use the "Network Diagnostics" function of the engineering tool. |

| Function | | MELSEC-QnA series | MELSEC iQ-R series | Precautions |
|---|---|-------------------|--|---|
| | | AJ71QLP21 | RJ71LP21-25 (MELSECNET /10 mode) | |
| Diagnostic function | Checks the network line status and module settings. | 0 | 0 | In the RJ71LP21-25, use the "Network Diagnostics" function of the engineering tool. |
| Control station transfer function | Maintains the data link with another normal station that serves as a sub-control station even if the control station goes down. | 0 | 0 | |
| ■Others | | | | |
| Multiplex transmission function | Allows a high-speed transmission using a duplex transmission path (toward and reverse loops). | 0 | Δ | The RJ71LP21-25 cannot operate as a master station that executes the multiplex transmission function. |
| Reserve station function | Reserves unconnected stations for future use. By using this function, those stations are not detected as faulty stations and no communication error occurs. | 0 | 0 | |
| Simplified network duplexing | Maintains the data link by switching the link data refresh target to the standby network if an error such as cable disconnection has occurred in the normal network. | 0 | × | The simplified duplex system is not available to the RJ71LP21-25. Configure a single-network system. |
| SB/SW can be used as you like (user flags) | Sends the desired control information to all the stations using the user flags (SW01F0 to SW01F3) instead of the link device. | 0 | x | Change a program using the UFSET, UFRST, UFOUT instructions to a sequence program using the link relay and link register after replacement. |
| Station specific parameters | Used to rearrange the transmission range of each station (LB and LW) for a specific station. Setting these parameters eliminates the need for changing programs even when the link device range has been extended during the operation. This also avoids unnecessary transmission ranges. | 0 | × | Reassign the station specific parameters to the refresh parameters.*1 |

^{*1} For details, refer to the following.

MELSEC iQ-R MELSECNET/H Network Module User's Manual (Application)

AJ71BR11 and RJ71LP21-25

 $\bigcirc : Compatible/function \ available, \ \triangle : Partly \ changed, \ \times : Incompatible/function \ not \ available, \ - : Not \ applicable$

| Function | | MELSEC-A series | MELSEC iQ-R series | Precautions |
|---|---|--------------------|-------------------------------------|--|
| | | AJ71BR11 | RJ71BR11 (MELSECNET /10 mode) | |
| ■Cyclic transmission | | | | |
| Communications with B/W (1:N communication) | Allows data transmission to all the stations using the link relay and the link register. (Communications using B/W) | 0 | 0 | |
| Communications with X/Y (1:1 communication) | Allows data communications between the I/O master station and one of the other stations (one-to-one communications). (Communications using X/Y) | 0 | 0 | |
| Constant link scan function | Maintains the link scan time at a constant value. | 0 | 0 | |
| Data link/stop/restart function | Stops the cyclic transmission temporarily from the engineering tool. | 0 | 0 | |
| Data link transfer function | Transfers the link data to another network at a time using parameters when more than one network module is connected to one programmable controller. | 0 | 0 | |
| ■Transient transmission | | • | | |
| Transient transmission function | Allows communications between specific stations only when a communication request is made. (Communications using link dedicated instructions or the engineering tool) | 0 | 0 | The LRDP and LWTP instructions cannot be used after replacement. Use the ZNRD, ZNWR, READ, or WRITE instruction instead. |
| Routing function | Performs the transient transmission to a station in another network number. | 0 | 0 | |
| Group function | Performs the transient transmission to all the stations in a group with a single execution of an instruction. | 0 | 0 | |
| ■RAS function | | • | | |
| Automatic on-line return function | Automatically returns a disconnected station to the network and restarts the data link when the station has recovered from an error. | 0 | 0 | |
| Station separation function | Maintains the data link between the available stations even when some stations are down or powered off. | 0 | 0 | |
| Diagnosis function | Checks the network line status and module settings. | 0 | 0 | In the RJ71BR11, use the "Network Diagnostics" function of the engineering tool. |
| Data link condition detection function | Detects faulty areas using the data in the link special relay and link special register. | 0 | 0 | In the RJ71BR11, use the "Network Diagnostics" function of the engineering tool. |
| Control station shift function | Maintains the data link with another normal station that serves as a sub-control station even if the control station goes down. | 0 | 0 | |
| ■Others | | | | |
| Reserve station function | Reserves unconnected stations for future use. By using this function, those stations are not detected as faulty stations and no communication error occurs. | 0 | 0 | |
| Station specific parameters | Used to rearrange the transmission range of each station (LB and LW) for a specific station. Setting these parameters eliminates the need for changing programs even when the link device range has been extended during the operation. This also avoids unnecessary transmission ranges. | 0 | × | Reassign the station specific parameters to the refresh parameters.*1 |

^{*1} For details, refer to the following.

MELSEC iQ-R MELSECNET/H Network Module User's Manual (Application)

AJ71QBR11 and RJ71LP21-25

 \bigcirc : Compatible/function available, \triangle : Partly changed, \times : Incompatible/function not available, -: Not applicable

| Function | | MELSEC-QnA series AJ71QBR11 | MELSEC iQ-R series RJ71BR11 (MELSECNET /10 mode) | Precautions - |
|--|---|-----------------------------------|--|--|
| | | | | |
| ■Cyclic transmission | | | | |
| Communication with B/W | Allows data transmission to all the stations using the link relay and the link register. (Communications using B/W) | 0 | 0 | |
| Communication with X/Y | Allows data communications between the I/O master station and one of the other stations (one-to-one communications). (Communications using X/Y) | 0 | 0 | |
| Stopping/restarting cyclic transmission | Stops the cyclic transmission temporarily from the engineering tool. | 0 | 0 | |
| Inter data link transfer function | Transfers the link data to another network at a time using parameters when more than one network module is connected to one programmable controller. | 0 | 0 | |
| Direct access to the link device | Reads/writes link devices of the network module from/to a sequence program. | 0 | 0 | |
| Increasing the send points by installing multiple modules of the same network No. | Increases the number of send points per station up to 8000 bytes by connecting multiple network modules of the same network number to one programmable controller. | 0 | 0 | |
| Default values of network refresh parameters | Eliminates the need for setting parameters by using the default values of refresh parameters. | 0 | × | |
| ■Transient transmission | | | · | |
| Transient transmission function | Allows communications between specific stations only when a communication request is made. (Communications using link dedicated instructions or the engineering tool) | 0 | 0 | |
| Routing function | Performs the transient transmission to a station in another network number. | 0 | 0 | |
| Group function | Performs the transient transmission to all the stations in a group with a single execution of an instruction. | 0 | 0 | |
| Link dedicated instructions | Allows communications with other stations at desired timing. | 0 | 0 | |
| Specifying default network | Processes the requests that cannot specify the destination network number. | 0 | × | |
| Clock setting at stations in the network from peripheral devices | Configures the clock setting to the CPU modules on the network from the engineering tool. | 0 | 0 | |
| ■RAS function | | | | |
| Automatic recovery function | Automatically returns a disconnected station to the network and restarts the data link when the station has recovered from an error. | 0 | 0 | |
| Station separation function | Maintains the data link between the available stations even when some stations are down or powered off. | 0 | 0 | |
| Transient transmission is possible when the programmable controller CPU is in fault | Allows users to check error details from the engineering tool via network when a stop error has occurred in a CPU module. | 0 | 0 | In the RJ71BR11, use the "Network Diagnostics" function of the engineering tool. |
| Confirming the transient transmission error detection time | Checks the time when the transient transmission was completed with an error, and the network number and the station number in which the error was detected. | 0 | 0 | In the RJ71BR11, use the "Network Diagnostics" function of the engineering tool. |
| Diagnostic function | Checks the network line status and module settings. | 0 | 0 | In the RJ71BR11, use the "Network Diagnostics" function of the engineering tool. |

| Function | | MELSEC-QnA series | MELSEC iQ-R series | Precautions |
|--|---|-------------------|-------------------------------------|---|
| | | AJ71QBR11 | RJ71BR11 (MELSECNET /10 mode) | |
| Control station shift function | Maintains the data link with another normal station that serves as a sub-control station even if the control station goes down. | 0 | 0 | |
| ■Others | | | | |
| Reserve station function | Reserves unconnected stations for future use. By using this function, those stations are not detected as faulty stations and no communication error occurs. | 0 | 0 | |
| Simplified network duplexing | Maintains the data link by switching the link data refresh target to the standby network if an error such as cable disconnection has occurred in the normal network. | 0 | × | The simplified duplex system is not available to the RJ71BR11. Configure a single-network system. |
| SB/SW can be used as you like (user flags) | Sends the desired control information to all the stations using the user flags (SW01F0 to SW01F3) instead of the link device. | 0 | × | Change a program using the UFSET, UFRST, UFOUT instructions to a sequence program using the link relay and link register after replacement. |
| Station specific parameters | Used to rearrange the transmission range of each station (LB and LW) for a specific station. Setting these parameters eliminates the need for changing programs even when the link device range has been extended during the operation. This also avoids unnecessary transmission ranges. | 0 | × | Reassign the station specific parameters to the refresh parameters.*1 |

^{*1} For details, refer to the following.

MELSEC iQ-R MELSECNET/H Network Module User's Manual (Application)

9.4 Precautions for Replacement

CC-Link system master/local modules

Dedicated instructions

The dedicated instructions differ between the MELSEC-A/QnA series and the MELSEC iQ-R series.

If the dedicated instruction is used in the MELSEC-A/QnA series program, the program needs to be corrected for MELSEC iQ-R series.

I/O signals and buffer memory areas

The layouts of I/O signals and buffer memory areas differ between the MELSEC-A/QnA series and the MELSEC iQ-R series. If the I/O signals and buffer memory areas are used in the MELSEC-A/QnA series program, the program needs to be corrected for the MELSEC iQ-R series.

Link special relay (SB) and link special register (SW)

The link special relay (SB)/link special register (SW) number assignments differ between the MELSEC-Q series and MELSEC iQ-R series modules. If the SB/SW is used in the MELSEC-A/QnA series program, the program needs to be corrected for the MELSEC iQ-R series.

Peripheral connection module

If the AJ65BT-G4/AJ65BT-G4-S3 peripheral connection module is used, replace it with the AJ65BT-R2N CC-Link system RS-232C interface module (MELSOFT connection setting).

Processing time

The time such as sequence scan time or link refresh time differs between the MELSEC-A/QnA series and the MELSEC iQ-R series.

For details on the processing time, refer to the manual for the module used.

Parameter registration to E²PROM

The MELSEC iQ-R series CC-Link system master/local module does not have E^2PROM . Delete the sequence program corresponding to the parameter registration to E^2PROM .

Models that do not support CC-Link Ver.1.10

Models that do not support CC-Link Ver.1.10 are not available for the MELSEC iQ-R series.

There is a "CC-Link" logo on the rating plate of the Ver.1.10-compatible modules.

MELSECNET/10 network modules

Dedicated instructions

The dedicated instructions differ between the MELSEC-A/QnA series and the MELSEC iQ-R series.

If the dedicated instruction is used in the MELSEC-A/QnA series program, the program needs to be corrected for MELSEC iQ-R series.

I/O signals and buffer memory areas

The layouts of I/O signals and buffer memory areas differ between the MELSEC-A/QnA series and the MELSEC iQ-R series. If the I/O signals and buffer memory areas are used in the MELSEC-A/QnA series program, the program needs to be corrected for the MELSEC iQ-R series.

Link special relay (SB) and link special register (SW)

The link special relay (SB)/link special register (SW) number assignments differ between the MELSEC-Q series and MELSEC iQ-R series modules. If the SB/SW is used in the MELSEC-A/QnA series program, the program needs to be corrected for the MELSEC iQ-R series.

Processing time

The time such as sequence scan time or link refresh time differs between the MELSEC-A/QnA series and the MELSEC iQ-R series.

For details on the processing time, refer to the manual for the module used.

Module parameters for normal stations

In the MELSEC iQ-R series, normal stations require network parameters. Set them after replacement.

Simplified duplex system

The MELSECNET/H simplified duplex system cannot be used in the MELSEC iQ-R series. Configure a single-network system after replacement.

Remote I/O network

Remote I/O network is not available to the MELSEC iQ-R series. Consider replacing the existing system with a system on CC-Link IE Field Network.



| For details on these precautions, refer to the following. | |
|--|--|
| □ MELSEC iQ-R Module Configuration Manual | |
| MELSEC iQ-R CC-Link System Master/Local Module User's Manual (Startup) | |
| MELSEC iQ-R CC-Link System Master/Local Module User's Manual (Application) | |
| □ MELSEC iQ-R MELSECNET/H Network Module User's Manual (Startup) | |
| ☐MELSEC iQ-R MELSECNET/H Network Module User's Manual (Application) | |
| | |

10 INFORMATION MODULE REPLACEMENT

10.1 Alternative Model List

This section lists alternative models of the MELSEC iQ-R series information modules in accordance with the specifications and functions of the MELSEC-A/QnA series information modules.

Select models that best suit your application considering the scope of control of MELSEC-A/QnA series information modules currently used, as well as the system specifications and extensibility after replacement.

| Item | MELSEC-A/ | MELSEC iQ-R | Specification difference |
|------------------------------------|-----------------------------|-------------|--|
| | QnA series | series | |
| Computer link/serial communication | AJ71UC24 AJ71QC24N | RJ71C24 | External wiring: Changed Number of slots: Not changed Programs: I/O signals are changed and buffer memory addresses are changed. Specifications: Transmission speed is changed. Functions: Changed (No printer function and multidrop link function for the AJ71UC24/No link dedicated instructions for the AJ71QC24N) |
| | AJ71QC24N-R2 | RJ71C24-R2 | (1) External wiring: Changed (2) Number of slots: Not changed (3) Programs: I/O signals are changed and buffer memory addresses are changed. (4) Specifications: Transmission speed is changed. (5) Functions: Changed (No link dedicated instructions) |
| | AJ71QC24N-R4 | RJ71C24-R4 | (1) External wiring: Changed (2) Number of slots: Not changed (3) Programs: I/O signals are changed and buffer memory addresses are changed. (4) Specifications: Transmission speed is changed. (5) Functions: Changed (No link dedicated instructions) |
| Ethernet interface | AJ71E71N3-T AJ71QE71N3-T | RJ71EN71 | (1) External wiring: Not changed (2) Number of slots: Not changed (3) Programs: I/O signals are changed and buffer memory addresses are changed. (4) Specifications: Not changed (5) Functions: Changed (MC protocol 1E frame cannot be used.) |
| | AJ71E71N-B5 AJ71QE71N-B5 | RJ71EN71 | (1) External wiring: Changed (15-pin D-sub connector → RJ45) (2) Number of slots: Not changed (3) Programs: I/O signals are changed and buffer memory addresses are changed. (4) Specifications: Changed (10BASE5 → 10BASE-T) (5) Functions: Changed (MC protocol 1E frame cannot be used.) |
| | AJ71E71N-B2 AJ71QE71N-B2 | RJ71EN71 | (1) External wiring: Changed (BNC connector → RJ45) (2) Number of slots: Not changed (3) Programs: I/O signals are changed and buffer memory addresses are changed. (4) Specifications: Changed (10BASE2 → 10BASE-T) (5) Functions: Changed (MC protocol 1E frame cannot be used.) |
| Intelligent communication | AD51-S3 AD51H-S3 | None | Consider replacing the existing system with a system on other networks. |
| Modem interface | A6TEL Q6TEL | None | Consider replacing the existing system with a system on other networks. |
| Memory card interface | AD59 | None | Consider replacing the current communication method with other communication method such as RS-232. Consider replacing the memory card used with an SD memory card. |
| ID interface | AD35ID1 AD35ID2 | None | Consider replacing the existing system with a system on other networks. |
| CRT/LCD controller module | AD57 AD57S1 AD58 | None | Consider replacing the module with a GOT. |

10.2 Specification Comparison Tables

Serial communication modules

AJ71UC24/AJ71QC24N and RJ71C24

| Item | | Specifications | | Compatibility | Precautions |
|-----------------------------------|---|--|--|---------------|--|
| | | AJ71UC24/AJ71QC24N RJ71C24 | | | |
| Interface | CH1 | RS-232 compliant (D-Sub 25P) | RS-232-compliance (D-sub 9 pin) | Δ | Wiring needs to be |
| | CH2 | RS-422/485 compliant AJ71UC24: Terminal block AJ71QC24N: 2-piece terminal block | RS-422/485-compliance (2-piece terminal block) | Δ | changed after replacement. |
| Communication method | MC protocol communication | Half-duplex communication | | 0 | |
| | Non-procedural communication | Full-duplex communication/Half-duplex | communication | 0 | |
| | Bidirectional protocol communication | Full-duplex communication/Half-duplex | communication | 0 | |
| Synchronization i | method | Start-stop synchronization (asynchron | ous method) | 0 | |
| Transmission spe | eed | AJ71UC24: 300, 600, 1200, 2400, 4800, 9600, 19200bps AJ71QC24N: 300, 600, 1200, 2400, 4800, 9600, 14400, 19200, 28800, 38400, 57600, 115200bps | 1200, 2400, 4800, 9600, 14400, 19200, 28800, 38400, 57600, 115200, 230400bps | Δ | The transmission speed which can be set differs depending on the specifications. |
| Data format | Start bit | 1 | | 0 | |
| | Data bit | 7/8 | | 0 | |
| | Parity bit | 1 (vertical parity)/none | | 0 | |
| | Stop bit | 1/2 | | 0 | |
| Access cycle | MC protocol communication | One request is processed during the END processing of the CPU module of the mounted station. | | 0 | |
| | Non-procedural/ bidirectional communication | Transmission can be performed at each send request, and reception is available at any time. | | 0 | |
| Error detection | Parity check | Performed (odd/even)/none | | 0 | |
| | Sum check | Performed (MC protocol/Bidirectional)/ | none | 0 | |
| Transmission cor | ntrol | *1 | | 0 | |
| Line | RS-232 | 1: 1 | | 0 | |
| configuration (connection) | RS-422/485 | 1: 1, 1: n, m: n | 1: 1, 1: n, n: 1, m: n | 0 | |
| Line configuration | MC protocol communication | 1: 1 | 1:1 | | |
| (data communication) RS-232 | Non-procedural communication | 1:1 | | 0 | |
| 1.3-202 | Bidirectional protocol communication | 1: 1 | | 0 | |
| Line configuration | MC protocol communication | 1: 1, 1: n, m: n | | 0 | |
| (data communication) | Non-procedural communication | 1: 1, 1: n | 1: 1, 1: n, n: 1 | 0 | |
| RS-422/485 | Bidirectional protocol communication | 1:1 | | 0 | |

| Item | | Specifications | | Compatibility | Precautions |
|---|------------------|---|---|---------------|-------------|
| | | AJ71UC24/AJ71QC24N | RJ71C24 | | |
| Transmission | RS-232 | Max.15m | | 0 | |
| distance (Overall distance) | RS-422/485 | AJ71UC24: 500m maximum (overall distance) AJ71QC24N: 1200m maximum (overall distance) | 1200m maximum (overall distance) | 0 | |
| Number of E ² PF ROM writes | ROM writes/flash | Maximum 100000 times to the same area | | 0 | |
| Number of occup | pied I/O points | 32 points (I/O assignment: special 32 points) | 32 points (I/O assignment: Intelligent 32 points) | 0 | |
| Internal current consumption (5VDC) | | AJ71UC24: 0.30A AJ71QC24N: 0.40A | 0.31A | _ | |
| External dimensions | | AJ71UC24: 250(H) × 37.5(W) × 120(D)mm AJ71QC24N: 250(H) × 37.5(W) × 113.5(D)mm | 106(H) × 27.8(W) × 110(D)mm | _ | |
| Weight | | AJ71UC24: 0.63kg AJ71QC24N: 0.39kg | 0.16kg | _ | |

^{*1} The following table lists the transmission controls.

AJ71UC24

| Item | RS-232 | RS-422/485 |
|---|--------|------------|
| DTR/DSR (ER/DR) control | 0 | × |
| CD signal control | 0 | × |
| DC1/DC3 (Xon/Xoff) control DC2/DC4 control | 0 | 0 |

AJ71QC24N

| Item | RS-232 | RS-422/485 |
|---|--------|------------|
| DTR/DSR (ER/DR) control | 0 | × |
| RS/CS control | 0 | × |
| CD signal control | 0 | × |
| DC1/DC3 (Xon/Xoff) control DC2/DC4 control | 0 | 0 |

RJ71C24

| Item | RS-232 | RS-422/485 |
|---|--------|------------|
| DTR/DSR control | 0 | × |
| RS/CS control | 0 | × |
| CD (DCD) signal control | 0 | × |
| DC1/DC3 (Xon/Xoff) control DC2/DC4 control | 0 | 0 |

DTR/DSR signal control and DC code control are selected by the user.

AJ71QC24N-R2 and RJ71C24-R2

| Item | | Specifications | | Compatibility | Precautions |
|--|---|--|--|---------------|--|
| | | AJ71QC24N-R2 RJ71C24-R2 | | | |
| Interface | CH1 | RS-232 compliant (D-Sub 25P) | RS-232-compliance (D-sub 9 pin) | Δ | Wiring needs to be |
| | CH2 | RS-232 compliant (D-Sub 25P) | RS-232-compliance (D-sub 9 pin) | Δ | changed after replacement. |
| Communication method | MC protocol communication | Half-duplex communication | | 0 | |
| | Non-procedural protocol communication | Full-duplex communication/Half-duple | ex communication | 0 | |
| | Bidirectional protocol communication | Full-duplex communication/Half-duplex communication | | 0 | |
| Synchronization r | nethod | Start-stop synchronization (asynchron | nous method) | 0 | |
| Transmission spe | eed | 300, 600, 1200, 2400, 4800, 9600, 14400, 19200, 28800, 38400, 57600, 115200bps | 1200, 2400, 4800, 9600, 14400, 19200, 28800, 38400, 57600, 115200, 230400bps | Δ | The transmission speed which can be set differs depending on the specifications. |
| Data format | Start bit | 1 | • | 0 | |
| | Data bit | 7/8 | | 0 | |
| | Parity bit | 1 (vertical parity)/none | | 0 | |
| | Stop bit | 1/2 | | 0 | |
| Access cycle | MC protocol communication | One request is processed during the END processing of the CPU module of the mounted station. | | 0 | |
| | Non-procedural/ bidirectional communication | Transmission can be performed at ea available at any time. | 0 | | |
| Error detection | Parity check | Performed (odd/even)/none | | 0 | |
| | Sum check | Performed (MC protocol/Bidirectional |)/none | 0 | |
| Transmission con | ntrol | *1 | | 0 | |
| Line configuration (connection) | RS-232 | 1: 1 | | 0 | |
| Line configuration | MC protocol communication | 1: 1 | | 0 | |
| (data communication) | Non-procedural communication | 1: 1 | | | |
| RS-232 | Bidirectional protocol communication | 1:1 | | | |
| Transmission | RS-232 | 15m maximum | | 0 | |
| distance (Overall distance) | RS-422/485 | _ | | _ | |
| Number of E ² PROM writes/flash ROM writes | | Maximum 100000 times to the same | area | 0 | |
| Number of occupied I/O points | | 32 points (I/O assignment: special 32 points) | 32 points (I/O assignment: Intelligent 32 points) | 0 | |
| Internal current co | onsumption | 0.30A | 0.20A | _ | |
| External dimension | ons | 250(H) × 37.5(W) × 113.5(D)mm | 106(H) × 27.8(W) × 110(D)mm | - | |
| Weight | | 0.37kg | 0.14kg | _ | |

*1 The following table lists the transmission controls.

AJ71QC24N-R2

| Item | RS-232 |
|---|--------|
| DTR/DSR (ER/DR) control | 0 |
| RS/CS control | 0 |
| CD signal control | 0 |
| DC1/DC3 (Xon/Xoff) control DC2/DC4 control | 0 |

RJ71C24-R2

| Item | RS-232 |
|---|--------|
| DTR/DSR control | 0 |
| RS/CS control | 0 |
| CD (DCD) signal control | 0 |
| DC1/DC3 (Xon/Xoff) control DC2/DC4 control | 0 |

DTR/DSR signal control and DC code control are selected by the user.

AJ71QC24N-R4 and RJ71C24-R4

| Item | | Specifications | | Compatibility | Precautions |
|--|---|---|--|---------------|---|
| | | AJ71QC24N-R4 RJ71C24-R4 | | | |
| Interface | CH1 | RS-422 compliant (D-Sub 25P) | RS-422/485-compliance (2-piece plug-in connector socket block) | × | Wiring needs to be changed after |
| | CH2 | RS-422/485 compliant (2-piece terminal block) | RS-422/485-compliance (2-piece plug-in connector socket block) | Δ | replacement. |
| Communication method | MC protocol communication | Half-duplex communication | Half-duplex communication (| | |
| | Non-procedural communication | Full-duplex communication/Half-dupl | ex communication | 0 | |
| | Bidirectional protocol communication | Full-duplex communication/Half-dupl | ex communication | 0 | |
| Synchronization r | method | Start-stop synchronization (asynchro | nous method) | 0 | |
| Transmission spe | eed | 300, 600, 1200, 2400, 4800, 9600, 14400, 19200, 28800, 38400, 57600, 115200bps | 1200, 2400, 4800, 9600, 14400, 19200, 28800, 38400, 57600, 115200, 230400bps | Δ | The transmission speed which can be set differs depending on the specifications |
| Data format | Start bit | 1 | | 0 | |
| | Data bit | 7/8 | | 0 | |
| | Parity bit | 1 (vertical parity)/none | | 0 | |
| | Stop bit | 1/2 | | 0 | |
| Access cycle | MC protocol | | END processing of the CPU module of | 0 | |
| . 100000 0,010 | communication | the mounted station. | | | |
| | Non-procedural/ bidirectional communication | Transmission can be performed at each send request, and reception is available at any time. | | 0 | |
| Error detection Parity check | | Performed (odd/even)/none | | 0 | |
| | Sum check | Performed (MC protocol/Bidirectiona | Performed (MC protocol/Bidirectional)/none | | |
| Transmission con | itrol | *1 | | 0 | |
| Line | RS-422 | 1: 1 | _ | _ | |
| configuration (connection) | RS-422/485 | 1: 1, 1: n, m: n | 1: 1, 1: n, n: 1, m: n | 0 | |
| Line configuration | MC protocol communication | 1: 1 | _ | _ | |
| (data communication) RS-422 | Non-procedural protocol communication | 1: 1 | _ | _ | |
| | Bidirectional protocol communication | 1:1 | _ | _ | |
| Line configuration | MC protocol communication | 1: 1, 1: n, m: n | | 0 | |
| (data communication) RS-422/485 | Non-procedural protocol communication | 1: 1, 1: n | 1: 1, 1: n, n: 1 | 0 | |
| | Bidirectional protocol communication | 1: 1 | 1 | 0 | |
| Transmission | RS-422 | 1200m maximum | _ | _ | |
| distance (Overall distance) RS-422/485 1200m maximum (overall distance) | | 1 | 0 | | |
| Number of E ² PR0 ROM writes | OM writes/flash | Maximum 100000 times to the same | area | 0 | |
| Number of occupied I/O points | | 32 points (I/O assignment: special 32 points) | 32 points (I/O assignment: Intelligent 32 points) | 0 | |

| Item | Specifications | Compatibility | Precautions | |
|-------------------------------------|-------------------------------|-----------------------------|-------------|--|
| | AJ71QC24N-R4 | RJ71C24-R4 | | |
| Internal current consumption (5VDC) | 0.60A | 0.42A | _ | |
| External dimensions | 250(H) × 37.5(W) × 113.5(D)mm | 106(H) × 27.8(W) × 110(D)mm | _ | |
| Weight | 0.39kg | 0.13kg | _ | |

^{*1} The following table lists the transmission controls.

AJ71QC24N-R4

| Item | RS-422 | RS-422/485 |
|---|--------|------------|
| DTR/DSR (ER/DR) control | 0 | × |
| RS/CS control | × | × |
| CD signal control | × | × |
| DC1/DC3 (Xon/Xoff) control DC2/DC4 control | 0 | 0 |

RJ71C24-R4

| Item | RS-422/485 |
|---|------------|
| DTR/DSR control | x |
| RS/CS control | x |
| CD (DCD) signal control | × |
| DC1/DC3 (Xon/Xoff) control DC2/DC4 control | 0 |

DTR/DSR signal control and DC code control are selected by the user.

Ethernet interface modules

AJ71E71N3-T/AJ71QE71N3-T and RJ71EN71 (Q-compatible Ethernet)

| Item | | Specifications | | Compatibility | Precautions |
|-----------------------------------|---|---|--|---------------|-------------|
| | | AJ71E71N3-T/ RJ71EN71 (Q-compatible AJ71QE71N3-T Ethernet) | | | |
| Transmission specifications | Туре | 10BASE-T | 1000BASE-T, 100BASE-TX, 10BASE-T | 0 | |
| | Transmission speed | 10Mbps (half-duplex) | 1Gbps 100Mbps (full-duplex/half-duplex) 10Mbps (full-duplex/half-duplex) | 0 | |
| | Interface | RJ45 | RJ45 (AUTO MDI/MDI-X) | 0 | |
| | Transmission method | Base band | | 0 | |
| | Maximum segment 100m (length between a hub and a node) length | | 0 | | |
| | Maximum number of nodes/connection | Cascade connection: Up to 4 | Cascade connection: 1000BASE-T: Depends on the switching hub used. 100BASE-TX: 2 levels maximum 10BASE-T: 4 levels maximum | 0 | |
| Transfer data storage memory | Number of allowable simultaneously open connections | 8 connections | 16 connections | 0 | |
| | Fixed buffer | 1K words × 8 | 1K words × 16 | 0 | |
| | Random access buffer | AJ71E71N3-T: 3K words × 2 AJ71QE71N3-T: 6K words × 1 | 6K words × 1 | 0 | |
| Number of occupied I/O points | | 32 points (I/O assignment: special 32 points) | 32 points (I/O assignment: Intelligent 32 points) | 0 | |
| 5VDC internal current consumption | | AJ71E71N3-T: 0.69A AJ71QE71N3-T: 0.53A | 0.82A | _ | |
| External dimension | ons | 250(H) × 37.5(W) × 106(D)mm | 106(H) × 27.8(W) × 110(D)mm | _ | |
| Weight | | 0.30kg | 0.17kg | _ | |

AJ71E71N-B5/AJ71QE71N-B5 and RJ71EN71 (Q-compatible Ethernet)

| Item | | Specifications | | Compatibility | Precautions |
|------------------------------|---|---|--|---------------|--|
| | | AJ71E71N-B5/AJ71QE71N- B5 | RJ71EN71 (Q-compatible Ethernet) | | |
| Transmission specifications | Туре | 10BASE5 | 1000BASE-T, 100BASE-TX, 10BASE-T | × | Convert 10BASE5 to 10BASE-T. |
| | Transmission speed | 10Mbps (half-duplex) | 1Gbps 100Mbps (full-duplex/half-duplex) 10Mbps (full-duplex/half-duplex) | 0 | |
| | Interface | 15-pin D-sub connector (AUI) | RJ45 (AUTO MDI/MDI-X) | × | Wiring needs to be changed after replacement. |
| | Transmission method | Base band | | 0 | |
| | Maximum node-to- node distance | 2500m | _ | _ | |
| | Maximum segment length | 500m | 100m (length between a hub and a node) | × | Connect another hub if the segment length is 100 meters or longer. |
| | Maximum number of nodes/connection | 100/segment | Cascade connection: 1000BASE-T: Depends on the switching hub used. 100BASE-TX: 2 levels maximum 10BASE-T: 4 levels maximum | _ | |
| | Minimum node interval | 2.5m | _ | _ | |
| Transfer data storage memory | Number of allowable simultaneously open connections | 8 connections | 16 connections | 0 | |
| | Fixed buffer | 1K words × 8 | 1K words × 16 | 0 | |
| | Random access buffer | AJ71E71N-B5: 3K words × 2 AJ71QE71N-B5: 6K words × 1 | 6K words × 1 | 0 | |
| Number of occup | ied I/O points | 32 points (I/O assignment: special 32 points) | 32 points (I/O assignment: Intelligent 32 points) | 0 | |
| 5VDC internal cu | rrent consumption | AJ71E71N-B5: 0.55A AJ71QE71N-B5: 0.40A | 0.82A | _ | |
| External dimension | ons | 250(H) × 37.5(W) × 106(D)mm | 106(H) × 27.8(W) × 110(D)mm | _ | |
| Weight | | 0.33kg | 0.17kg | _ | |

AJ71E71N-B2/AJ71QE71N-B2 and RJ71EN71 (Q-compatible Ethernet)

| Item | | Specifications | | Compatibility | Precautions | |
|------------------------------|---|---|--|---------------|--|--|
| | | AJ71E71N-B2/AJ71QE71N- B2 | RJ71EN71 (Q-compatible Ethernet) | | | |
| Transmission specifications | Туре | 10BASE2 | 1000BASE-T, 100BASE-TX, 10BASE-T | × | Convert 10BASE2 to 10BASE-T. | |
| | Transmission speed | 10Mbps (half-duplex) | 1Gbps 100Mbps (full-duplex/half-duplex) 10Mbps (full-duplex/half-duplex) | 0 | | |
| | Interface | BNC connector | RJ45 (AUTO MDI/MDI-X) | × | Wiring needs to be changed after replacement. | |
| | Transmission method | Base band | | 0 | | |
| | Maximum node-to- node distance | 925m | _ | _ | | |
| | Maximum segment length | 185m | 100m (length between a hub and a node) | × | Connect another hub if the segment length is 100 meters or longer. | |
| | Maximum number of nodes/connection | 30/segment | Cascade connection: 1000BASE-T: Depends on the switching hub used. 100BASE-TX: 2 levels maximum 10BASE-T: 4 levels maximum | _ | | |
| | Minimum node interval | 0.5m | _ | _ | | |
| Transfer data storage memory | Number of allowable simultaneously open connections | 8 connections | 16 connections | 0 | | |
| | Fixed buffer | 1K words × 8 | 1K words × 16 | 0 | | |
| | Random access buffer | AJ71E71N-B5: 3K words × 2 AJ71QE71N-B5: 6K words × 1 | 6K words × 1 | 0 | | |
| Number of occup | ied I/O points | 32 points (I/O assignment: special 32 points) | 32 points (I/O assignment: Intelligent 32 points) | 0 | | |
| 5VDC internal cu | rrent consumption | AJ71E71N-B5: 0.67A AJ71QE71N-B5: 0.56A | 0.82A | _ | | |
| External dimension | ons | 250(H) × 37.5(W) × 106(D)mm | 106(H) × 27.8(W) × 110(D)mm | _ | | |
| Weight | | 0.35kg | 0.17kg | _ | | |

10.3 Function Comparison Tables

Computer link/serial communication modules

AJ71UC24 and RJ71C24/RJ71C24-R2/RJ71C24-R4

○: Compatible/function available, △: Partly changed, ×: Incompatible/function not available, —: Not applicable

| Function | | | MELSEC-A/ QnA series | MELSEC iQ-R series | Precautions |
|--|---|---|-------------------------|-------------------------------------|---|
| | | | AJ71UC24 | RJ71C24 RJ71C24-R2 RJ71C24-R4 | |
| Communication using dedicated protocol*1 | Device memory read/write | Reads/writes data on the programmable controller CPU from/to the external devices. | 0 | Δ | Command to be used, accessible device ranges, and accessing to other stations are restricted. The program on the external device needs to be changed. |
| | On-demand | Transmits data from the programmable controller CPU to external devices. | 0 | Δ | Change it to a sequence program that uses the dedicated instruction (ONDEMAND). |
| Non-procedural communication | Data transmission Programmable controller → External device | Transmits data from the programmable controller CPU to external devices. | 0 | Δ | Change it to a sequence program that uses the dedicated instruction (OUTPUT/INPUT). |
| | Data reception Programmable controller ← External device | Receives data from external devices. | 0 | Δ | |
| Bidirectional communication | Data transmission Programmable controller → External device | Transmits data from the programmable controller CPU to external devices. | 0 | Δ | Change it to a sequence program that uses the dedicated instruction (BIDOUT/BIDIN). |
| | Data reception Programmable controller ← External device | Receives data from external devices. | 0 | Δ | |
| Transmission usi | ng printer function | Transmits messages (character strings) from the programmable controller CPU to the printer. | 0 | × | Change it to a sequence program that uses the dedicated instruction (PRR). (Messages are transmitted by nonprocedural protocol using user frames.) |
| Multidrop link function | | Data communication system via RS-422/485 interface. Data can be exchanged between the master station and a local station or a remote station. Maximum eight local stations or remote stations can be connected to the master station. | 0 | × | The multidrop link function cannot be used. Consider replacing the existing system with a system on CC-Link. |
| Transmission control | DTR/DSR control, CD signal control | Controls data transmission/reception with external devices by RS-232 control signals. | 0 | 0 | |
| | DC code control | Sends/receives DC codes (including Xon/Xoff) to control data transmission/reception with external devices. | 0 | 0 | |

^{*1} In the MELSEC iQ-R series, this function name is "MC protocol communication (MELSEC communication protocol)".

AJ71QC24N/AJ71QC24N-R2/AJ71QC24N-R4 and RJ71C24/RJ71C24-R2/RJ71C24-R4

○: Compatible/function available, △: Partly changed, ×: Incompatible/function not available, —: Not applicable

| Function | | | MELSEC-A/ QnA series | MELSEC iQ-R series | Precautions |
|---|--|---|---|-------------------------------------|--|
| | | | AJ71QC24N AJ71QC24N-R2 AJ71QC24N-R4 | RJ71C24 RJ71C24-R2 RJ71C24-R4 | |
| Communication using dedicated protocol*1 | Communications in ASCII mode | Communicates in dedicated protocol using ASCII data. (Communications with QnA compatible 2C/3C/4C frame (format 1/2/3/4), communications with A compatible 1C frame (format 1/2/3/4)) | 0 | 0 | |
| | Communications in binary mode | Communicates in dedicated protocol using binary data. (Communications with QnA compatible 4C frame (format 5)) | 0 | 0 | |
| | Device memory read/write | Reads/writes data on the programmable controller CPU from/to the external devices. | 0 | 0 | |
| | Access to another station | Reads/writes data from/to programmable controller CPU of another station on the network system. | 0 | Δ | The program on the personal computer side may be required to change it depending on the network used. |
| | On-demand | Transmits data from the programmable controller CPU to external devices. | 0 | 0 | |
| Non-procedural protocol communication | Data transmission/ reception Programmable controller ↔ External device | Transmits/receives data between the programmable controller CPU and external devices. | 0 | 0 | |
| | Data transmission/ reception in user frames | Transmits/receives data using the data (user frames) registered to the serial communication module. | 0 | 0 | |
| | Data transmission/ reception by ASCII binary conversion | Converts binary data to ASCII data to transmit the data. Received ASCII data is also converted to binary data. | 0 | 0 | |
| Bidirectional protocol communication | Data transmission/ reception Programmable controller ↔ External device | Transmits/receives data between the programmable controller CPU and external devices. | 0 | 0 | |
| | Data transmission/ reception by ASCII binary conversion | Converts binary data to ASCII data to transmit the data. Received ASCII data is also converted to binary data. | 0 | 0 | |
| Communication be instruction (SEND, RECV, R | by dedicated link EAD, RITE, REQ) | Transmits/receives data with programmable controller CPU of another station on a multidrop connection by link dedicated instructions. | 0 | × | In the MELSEC iQ-R series, the function that communicates data with programmable controller CPU of another station on a multidrop connection by link dedicated instructions is not supported. Communication method needs to be changed. Delete data communication program by link dedicated instruction. |
| Transmission control | DTR/DSR control, RS/CS control, CD signal control | Controls data transmission/reception with external devices by RS-232 control signals. | 0 | 0 | |
| | DC code control | Sends/receives DC codes (including Xon/Xoff) to control data transmission/ reception with external devices. | 0 | 0 | |

^{*1} In the MELSEC iQ-R series, this function name is "MC protocol communication (MELSEC communication protocol)".

Ethernet interface modules

AJ71E71N3-T/AJ71E71N-B5/AJ71E71N-B2 and RJ71EN71

○: Compatible/function available, △: Partly changed, ×: Incompatible/function not available, —: Not applicable

| Function | | MELSEC-A/ QnA series | MELSEC iQ-R series | Precautions |
|--|---|---|---|--|
| | | AJ71E71N3-T AJ71E71N-B5 AJ71E71N-B2 | RJ71EN71 (Q- compatible Ethernet) | |
| Initial processing | Enables data communications with an external device. | 0 | Δ | Delete the processing by the sequence program when using the network parameter. |
| Open processing | Connects the communication line to enable data communications with external devices. | 0 | Δ | When the open processing/ close processing by the dedicated instruction (OPEN/ CLOSE) is used, delete the processing by the I/O signals. |
| Communications using fixed buffer (procedural/nonprocedural) | Sends/receives any data between the programmable controller CPU and external devices using the fixed buffer on the Ethernet interface module. | 0 | Δ | When communications using a fixed buffer by the dedicated instruction (BUFSND/BUFRCV/BUFRCVS) are used, delete communications by the I/O signals. |
| Communications using random access buffer | Reads/writes data from multiple connected devices to the random access buffer on the Ethernet interface module. | 0 | 0 | |
| Read/write communications of programmable controller CPU internal data | Reads/writes programmable controller CPU data from/to the external devices. | 0 | × | |
| Broadcast communication | Sends/receives data to all external devices on the same Ethernet as the Ethernet interface module by UDP/IP-based data communications. (Broadcast) | 0 | 0 | |
| Communications while the programmable controller CPU is stopped | Continues data communications even when the programmable controller CPU is in the stop state. (during Passive open processing) | 0 | Δ | Use module parameters. |
| Router relay function | Communicates data through a router and a gateway. | 0 | Δ | Use module parameters. |
| Existence check of external device | Checks whether a connected device is normally operating after a connection is established (open processing). | 0 | Δ | Change it to a sequence program that uses the dedicated instruction (OPEN). Only KeepAlive is available for TCP/IP. |
| Communications using pairing open | Opens connection with the connection for reception and connection for transmission as a single pair. (For communications using a fixed buffer) | 0 | Δ | Change it to a sequence program that uses the dedicated instruction (OPEN). |
| Timer setting value units for data exchange | Sets the unit (500ms/2s) of each time value. | 0 | Δ | Use module parameters. Each timer value can be set in increments of 100ms. |

AJ71QE71N3-T/AJ71QE71N-B5/AJ71QE71N-B2 and RJ71EN71

 \bigcirc : Compatible/function available, \triangle : Partly changed, \times : Incompatible/function not available, -: Not applicable

| Function | | MELSEC-A/ QnA series | MELSEC iQ-R series | Precautions | |
|--|--|-------------------------|--|---|--|
| | AJ71QE | | AJ71QE71N3-T RJ71EN71 (Q- AJ71QE71N-B5 compatible AJ71QE71N-B2 Ethernet) | | |
| Initial processing (sequence program/network parameters) | Enables data communications with an external device. | 0 | Δ | Use module parameters. | |
| Open processing | Connects the communication line to enable data communications with external devices. | 0 | 0 | | |
| Communications using fixed buffer (procedural/nonprocedural) | Sends/receives any data between the programmable controller CPU and external devices using the fixed buffer on the Ethernet interface module. | 0 | Δ | | |
| Communications using random access buffer | Reads/writes data from multiple connected devices to the random access buffer on the Ethernet interface module. | 0 | 0 | | |
| Read/write communications of programmable controller CPU internal data | Reads/writes data on the programmable controller CPU from/to the external devices. | 0 | Δ | Some of the commands and device ranges are restricted. | |
| Communications using data link instructions | Reads/writes data on the programmable controller CPU in other stations over Ethernet using data link instructions. | 0 | 0 | | |
| File transfer (FTP server functions) | Reads/writes data in files from connected devices using an FTP command. | 0 | 0 | | |
| Broadcast communication | Sends/receives data to all external devices on the same Ethernet as the Ethernet interface module by UDP/IP-based data communications. (Broadcast) | 0 | 0 | | |
| Communications while the programmable controller CPU is stopped | Continues data communications even when the programmable controller CPU is in the stop state. (during Passive open processing) | 0 | Δ | Use module parameters. | |
| MELSECNET/H, MELSECNET/10 relay exchange | Communicates data over multiple network systems where Ethernet, MELSECNET/H, and MELSECNET/10 exist together or network systems that relay multiple Ethernet networks. | 0 | Δ | Use module parameters. | |
| Router relay function | Communicates data through a router and a gateway. | 0 | 0 | | |
| Existence check of external device | Checks whether a connected device is normally operating after a connection is established (open processing). | 0 | 0 | | |
| Communications using pairing open | Opens connection with the connection for reception and connection for transmission as a single pair. (For communications using a fixed buffer) | 0 | Δ | For the MELSEC iQ-R series, connection No.8 cannot be used. | |
| Parameter registration to E ² PROM | Registers parameters to E ² PROM. | 0 | Δ | For the MELSEC iQ-R series, E ² PROM is not supported. Register the parameters to the CPU. | |

10.4 Precautions for Replacement

Computer link/serial communication modules

I/O signals and buffer memory areas

The layouts of I/O signals and buffer memory areas differ between the MELSEC-A/QnA series and the MELSEC iQ-R series. If the I/O signals and buffer memory areas are used in the MELSEC-A/QnA series program, the program needs to be corrected for the MELSEC iQ-R series.

Send area and receive area in the refresh setting

In MELSEC iQ-R series, the range of the send area and the receive area cannot be specified in the refresh setting. All the send and receive areas listed below are refreshed.

- Send area (CH1): Buffer memory address 1024 to 1535 (400H to 5FFH)
- Receive area (CH1): Buffer memory address 1536 to 2047 (600H to 7FFH)
- Send area (CH2): Buffer memory address 2048 to 2559 (800H to 9FFH)
- Receive area (CH2): Buffer memory address 2560 to 3071 (A00H to BFFH)

Processing time

The time such as the processing time for data communications differ between the MELSEC-A/QnA series and the MELSEC iQ-R series.

For details on the processing time, refer to the manual for the module used.

Ethernet interface modules

Dedicated instruction

The dedicated instructions differ between the MELSEC-A/QnA series and the MELSEC iQ-R series.

If the dedicated instruction is used in the MELSEC-A/QnA series program, the program needs to be corrected for MELSEC iQ-R series.

I/O signals and buffer memory areas

The layouts of I/O signals and buffer memory areas differ between the MELSEC-A/QnA series and the MELSEC iQ-R series. If the I/O signals and buffer memory areas are used in the MELSEC-A/QnA series program, the program needs to be corrected for the MELSEC iQ-R series.

Parameter registration to E²PROM

 E^2 PROM is not supported for the Ethernet interface module in the MELSEC iQ-R series. Delete the sequence program corresponding to the parameter registration to E^2 PROM.

Initial processing/End processing

Both the initial processing/End processing by the sequence program and the initial processing by the network parameter cannot be used together.

Delete the processing by the sequence program when using the network parameter.

Open processing/close processing

The open processing/close processing by the I/O signals and the processing by the dedicated instruction (OPEN/CLOSE) cannot be used together on the same connection.

When the open processing/close processing by the dedicated instruction (OPEN/CLOSE) is used, delete the processing by the I/O signals.

Passive open processing

For the MELSEC iQ-R series, an open request cannot be canceled before the open processing is completed once Passive open processing is executed. Execute close processing after the open processing is completed.

Communications using a fixed buffer

Communications using a fixed buffer by the I/O signals and communications by the dedicated instruction (BUFSND/BUFRCV/BUFRCVS) cannot be used on the same connection.

When communications using a fixed buffer by the dedicated instruction (BUFSND/BUFRCV/BUFRCVS) are used, delete communications by the I/O signals.

Processing time

The time such as the processing time for data communications differ between the MELSEC-A/QnA series and the MELSEC iQ-R series.

For details on the processing time, refer to the manual for the module used.

Replacement from 10BASE5/10BASE2 to 100BASE-TX/10BASE-T

Convert 10BASE5/10BASE2 into 10BASE-T/100BASE-TX.

Use a media converter and convert the interface from 10BASE5 or 10BASE2 to 10BASE-T.

For details, refer to the following.

Production discontinuation of MELSEC-Q series Ethernet interface module/FL-net (OPCN-2) interface module (FA-A-0190)

SLMP (MC protocol) communication setting

Select "SLMP Connection Module" for the MELSEC iQ-R series.

Random access buffer communication setting

Select the connection target module, and then select "Random Access Buffer" in "Communication Method" for the MELSEC iQ-R series.

Broadcast setting

Select the connection target module, and then select "Broadcast Send" or "Broadcast Receive" in "Communication Method" for the MELSEC iQ-R series.

Unused connection setting

Set "MELSOFT Connection Module" in the unused connection number for the MELSEC iQ-R series.

TCP/IP connection module setting

Setting the connected device automatically determines the protocol in the MELSEC iQ-R series.

Alive check setting

For the MELSEC iQ-R series, set whether to perform an alive check in "External Device Configuration" for each connection. Only the KeepAlive command can be used for the TCP/IP alive check.

Online change setting

For the MELSEC iQ-R series, enable the online change function in "Enable/Disable Online Change" under "Own Node Settings" of "Basic Settings" when the SLMP communications are performed. When the FTP server function is used, enable the function in "Allow Online Change" under "FTP Server Settings" of "Application Settings".

Send frame setting

Only "Ethernet (V2.0)" frame can be used for the MELSEC iQ-R series. "IEEE 802.3" frame can be used for received data only.

Gateway parameter settings

Set "Subnet Mask" or "Default Gateway" under "Own Node Settings" of "Basic Settings" and set "Gateway Information" under "Gateway Parameter Settings" of "Application Settings" for the MELSEC iQ-R series.



For details on these precautions, refer to the following.

- MELSEC iQ-R Module Configuration Manual
- MELSEC iQ-R Serial Communication Module User's Manual (Startup)
- MELSEC iQ-R Serial Communication Module User's Manual (Application)
- MELSEC iQ-R Ethernet/CC-Link IE User's Manual (Startup)
- MELSEC iQ-R Ethernet User's Manual (Application)


11 PROJECT REPLACEMENT

This section describes how to replace the MELSEC-A/QnA series project with the MELSEC iQ-R series project. There are two methods for project replacement: one method uses MELSEC-A/QnA -> MELSEC iQ-R Conversion Support Tool and the other method uses GX Developer, GX Works2, and GX Works3.

11.1 Replacement Using MELSEC-A/QnA -> MELSEC iQ-R Conversion Support Tool

MELSEC-A/QnA -> MELSEC iQ-R Conversion Support Tool

This tool converts a GX Developer format project into a GX Works3 format project. This tool also can output support information which is necessary to correct the converted project.

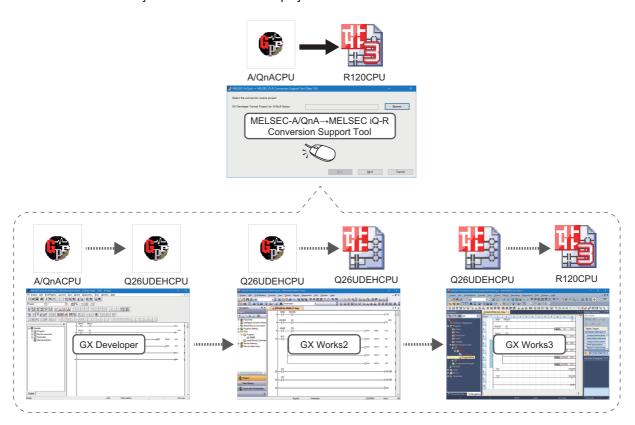

| Icon | Description |
|----------|-----------------------------|
| (| GX Developer format project |
| | GX Works2 format project |
| | GX Works3 format project |



For details, refer to the following.

MELSEC-A/QnA -> MELSEC iQ-R Conversion Support Tool Operating Manual

Instant check of where to correct


If a special relay/special register area, an instruction, and a special function module which are not available for an RCPU are used in a program, the program needs to be corrected after converting a project.

MELSEC-A/QnA -> MELSEC iQ-R Conversion Support Tool provides information of the parts to be corrected in two formats. By referring the information, the program can be corrected efficiently.

Outputting a review information list

Information such as the number of items to be corrected and corrective actions is output in HTML format.


For a special function module, information of a recommended module to replace is also displayed.

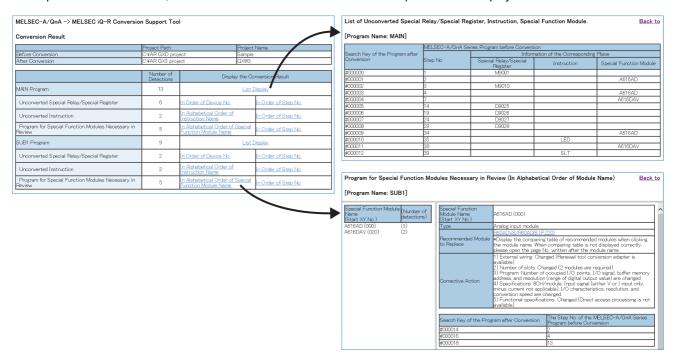

Inserting a line statement


A line statement is inserted on a part to be corrected in a program.

On the line statement, information before and after conversion and an alert are displayed.

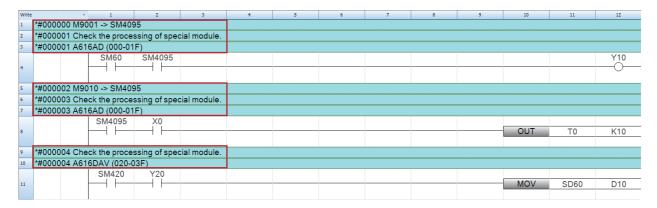

System configuration

The following figure shows the system configuration of MELSEC-A/QnA -> MELSEC iQ-R Conversion Support Tool for conversion.

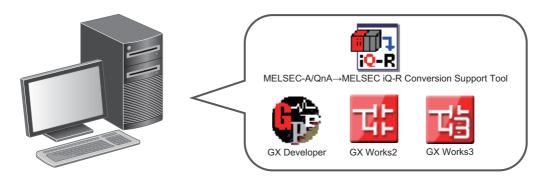

MELSEC-A/QnA -> MELSEC iQ-R Conversion Support Tool, GX Developer, GX Works2, and GX Works3 are required.

Software versions

The following table lists the software versions which are necessary for converting a project.

| Software | Version |
|---|-------------------------|
| MELSEC-A/QnA -> MELSEC iQ-R Conversion Support Tool | No restrictions |
| GX Developer | Version 8.503Z or later |
| GX Works2 | Version 1.590Q or later |
| GX Works3 | Version 1.066U or later |

Convertible projects

GX Developer format projects for the following CPU modules can be converted.

| Series | Туре | Program language | Label setting |
|------------|---|------------------------------|------------------|
| QnACPU | Q2A, Q2AS(H), Q2AS1, Q2AS(H)S1, Q3A, Q4A, Q4AR | Ladder diagram ^{*1} | Do not use label |
| ACPU | A0J2H, A1FX, A1S, A1SJ, A1SH, A1SJH, A1N, A2C, A2CJ, A2N(S1), A2S, A2SH, A3N, A2A(S1), A3A, A2U(S1), A2US(S1), A2USH-S1, A3U, A4U | | |
| CNC(M6/M7) | Q4A | | |

^{*1} When using the SFC instruction in a ladder program, instructions other than the END instruction are deleted in a converted program.



A project including an SFC program cannot be converted.

Convert the project after deleting the SFC program.

Function list

The following table lists the functions of MELSEC-A/QnA -> MELSEC iQ-R Conversion Support Tool.

| Function | Description |
|--|--|
| Converting a project | Converts a GX Developer format project into a GX Works3 format project automatically. |
| Outputting a review information list | Outputs a list of the following information as an HTML file when converting a project: a special relay/special register area, an instruction, and a special function module which are not available for an RCPU. |
| Embedding conversion information on a line statement | Embeds the following information on a line statement of a converted project (program) when converting a project: a special relay/special register area, an instruction, and a special function module which are not available for an RCPU. |

Obtaining MELSEC-A/QnA->MELSEC iQ-R Conversion Support Tool

Please consult your local Mitsubishi Electric representative.

Installation and uninstallation

For the installation/uninstallation procedure of MELSEC-A/QnA -> MELSEC iQ-R Conversion Support Tool, refer to the following.

□ MELSEC-A/QnA -> MELSEC iQ-R Conversion Support Tool Installation Instructions (BCN-P5999-1284)

The above manual is stored in the zip file where the installer is located.


Converting a project

This section describes the operations to convert a GX Developer format project into a GX Works3 format project.


Precautions

When a program exists after the END instruction in a conversion source program, the program after the END instruction will be deleted at conversion.

Operating procedure

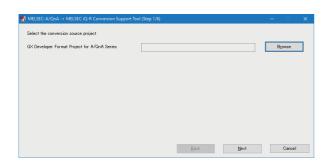


1. Specify a conversion source GX Developer format project.

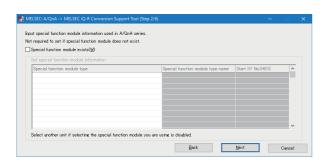



- **2.** When a special function module is used in the source project, select the checkbox of "Special function module exists" and set the following items:
- · Special function module type
- · Special function module type name
- Start XY No. (HEX)




- In an input screen for special function module information, data can be copied and pasted.
- In the following case, review information is embedded on a line statement of a converted program: there is an instruction using a buffer memory address or an input/output signal of the special function module which was set in the step 2 in the source project. Also, the information is output as a list.
- If special function module information is not set in the step 2, a program is not detected as the one to be reviewed even when a special function module is used in the source project.

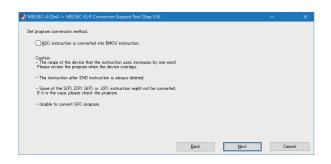

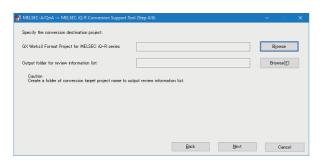

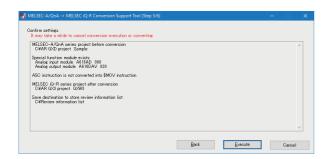

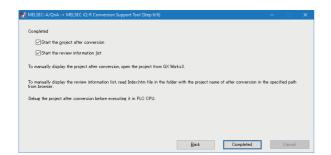

3. Select the checkbox of "ASC instruction is converted into \$MOV instruction." as necessary.

When converting the ASC instruction into the \$MOV instruction, the range of a device that the instruction uses increases by one word. Review a program when the device overlaps.

- **4.** Specify a converted GX Works3 format project and an output folder for a review information list.
- The converted GX Works3 format project is saved as a single file format.
- A folder with the same name as that of the converted GX Works3 format project file is created in the output folder for a review information list.
- **5.** Check the settings, and click the [Execute] button.

- **6.** Select the checkboxes of "Start the project after conversion" and "Start the review information list" as necessary.
- 7. Click the [Completed] button.

Precautions

- A converted model is R120CPU. Therefore, change the model to match customer use.
- The number of displayed contacts of a program is not applied from a GX Developer format project. Change the number as necessary in GX Works3.

For the method to change the module type and the number of displayed contacts, refer to the following.

GX Works3 Operating Manual

• The S(P)./Z(P)./G(P)./J(P). instruction of a QnACPU may not be converted. Check an unconverted instruction in a review information list and a line statement.



If MELSEC-A/QnA -> MELSEC iQ-R Conversion Support Tool is forcibly terminated or an error occurs in the tool while converting a project, a process of GX Works3 converting the project in the background may remain. In this case, terminate the process of GX Works3 by any of the following methods:

- Log off the personal computer.
- Terminate the process of "GXW3.exe" in the task manager.

Review information list


Information regarding a special relay/special register area, an instruction, and a special function module which are not available for an RCPU is output in an HTML file.

Operating procedure

1. Right-click "Index.htm" stored in (output folder for review information list)\(folder with the converted project name), and select [Open with] ⇒ [(Web browser)].

The conversion result of all the programs is displayed.

2. Click each link displayed in the "Display the Conversion Result" column to check the detail.

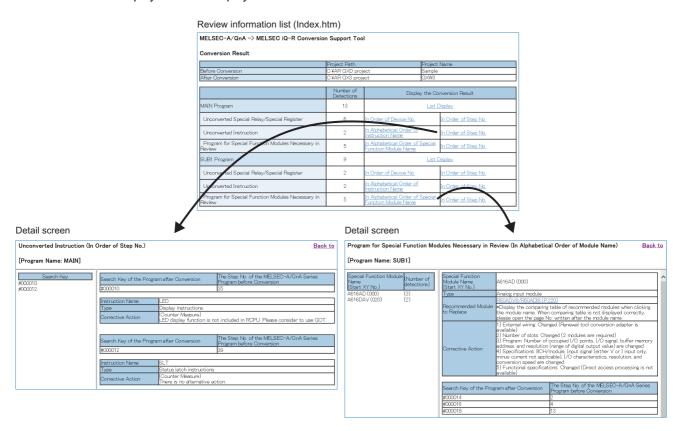




By checking the "Number of Detections" column, each number of unconverted special relay/special resister areas, instructions, and programs for special function modules to be reviewed can be confirmed.

Detail screen

The following figures are display examples of a review information list.



Unconverted instruction (in order of step No.)

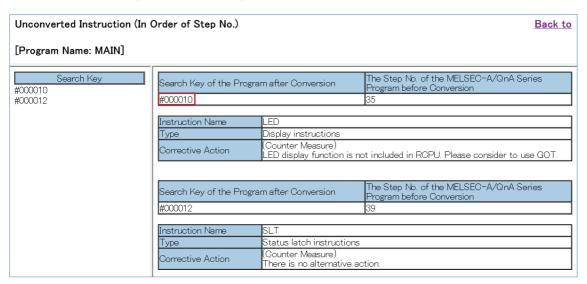




A search key is displayed on a review information list. In a converted GX Works3 format project, by searching the search key with the character string search function, the cursor can jump to the target line statement.

Ex.

Program for special function modules necessary in review (in alphabetical order of special function module name)

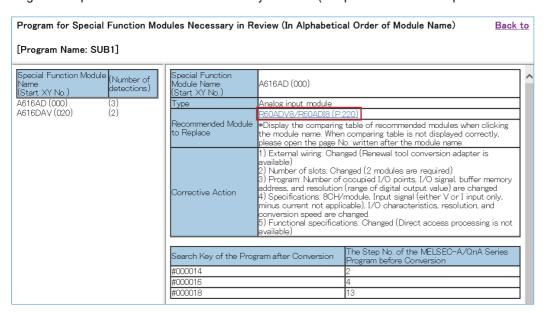



"Recommended Module to Replace" is displayed in a detail screen of "Program for Special Function Modules Necessary in Review".

This handbook appears by clicking the module name, and shows a comparison table of recommended modules.

Line statement

Information regarding a special relay/special register area, an instruction, and a special function module which are not available for an RCPU is embedded on a line statement of a relevant ladder block.

A line statement type is set to "In Peripheral". ("*" is added at the beginning of the character strings.)

For the operation method of a statement, refer to the following.

GX Works3 Operating Manual



A search key (example: #000000) for each step is added on a line statement.

This search key is also displayed on a review information list, and it is possible to search mutually with this key.

Operating procedure

1. Open a converted GX Works3 format project.



A converted project is stored in the folder specified in the following.

Page 309 Converting a project

- **2.** Select [View] ⇒ [Statement Display].
- Check an embedded line statement.

Checking conversion information of special relay/special resister area and instruction


Special relay/special resister areas and instructions which are not available in an RCPU are converted as follows.

Special relay areas/special register areas: SM4095/SD4095

Instructions: OUT SM4095



Special relay areas/special register areas

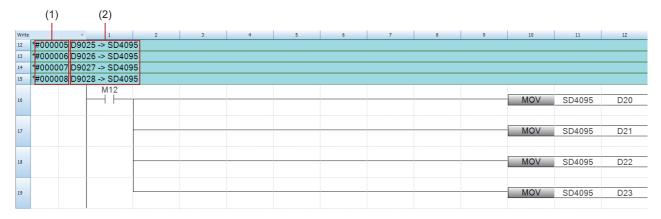

- (1) Search key
- (2) Conversion information




By searching a search key in a detail screen of a review information list, the cursor can jump to the review information for the program.

Checking conversion information of a special function module

Buffer memory addresses and input/output signals of a special function module are not converted.

Therefore, a statement that shows a necessity of reviewing is inserted on a part in which an instruction to access a special function module (FROM, DFRO, TO, DTO) and input/output signal exist.

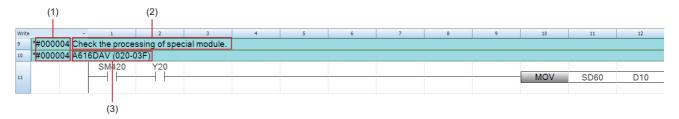

- (1) Search key
- (2) Alert
- (3) Model name of a special function module (start and end input/output numbers)



By searching a search key in a detail screen of a review information list, the cursor can jump to the review information for the program.

11.2 Replacement Using GX Developer/GX Works2/GX Works3

To replace projects by this method, use GX Developer Version 8.62Q or later and GX Works2 Version 1.05F or later. To read SFC programs, use GX Works2 Version 1.535H or later and GX Works3 Version 1.020W or later.

Project replacement flow

1. Operation with GX Developer

Change the PLC type of the ACPU project (in GX Developer format) (A/QnACPU \rightarrow Q26UDEHCPU), and save it as the QCPU project (in GX Developer format).

2. Operation with GX Works2


Read the QCPU project (in GX Developer format), and save it as the QCPU project (in GX Works2 format).

3. Operation with GX Works3


Read the QCPU project (in GX Works2 format), and convert it into the RCPU project (in GX Works3 format).


Operation method

· Operation with GX Developer

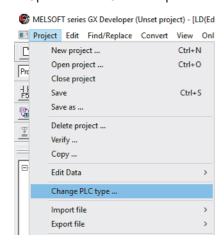



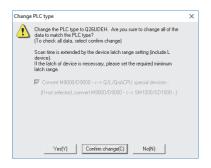

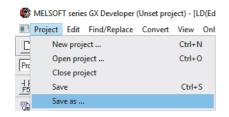


1. Select [Project] ⇒ [Change PLC Type].

- **2.** Select "QCPU(Qmode)" and "Q26UDEHCPU", and click the [OK] button.
- **3.** The following message appears. Read the message, and click the [Yes] button.


4. Select [Project] ⇒ [Save as] to save the project.

· Operation with GX Works2

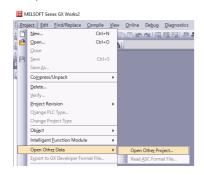






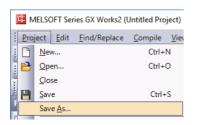


· Operation with GX Works3

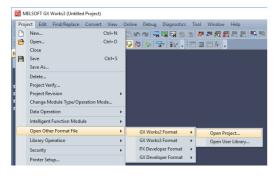


5. Select [Project] ⇒ [Open Other Data] ⇒ [Open Other Project] to open the GX Developer format project saved in Step 4.


- **6.** The following message appears. Read the message, and click the [Yes] button.
- **7.** Select [Compile] ⇒ [Rebuild All].
- **8.** Select [Project] ⇒ [Save As] to save the project.

9. Select [Project] ⇒ [Open Other Format File] ⇒ [GX Works2 Format] ⇒ [Open Project] to open the GX Works2 format project saved in Step 8.

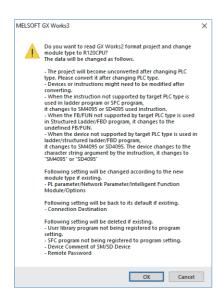



10. The following message appears. Read the message, and click the [OK] button.

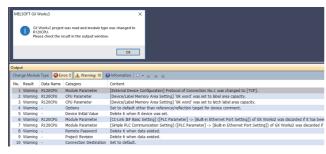

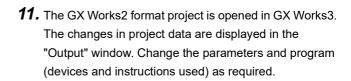



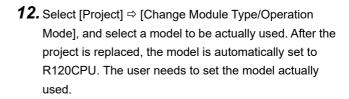

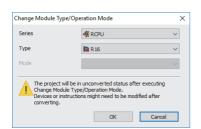

11.3 Instruction Replacement

After the project is replaced, instructions that are not supported by the RCPU are converted into those using SM4095/SD4095. For details on the converted instructions, refer to the following.

Transition from MELSEC-A/QnA (Large Type) Series to Q Series Handbook (Fundamentals)

MELSEC-Q Series to MELSEC iQ-R Series Migration Guide

11.4 Parameter Replacement

MELSEC-A/QnA series uses GX Developer, but MELSEC iQ-R series uses GX Works3. Therefore, the user needs to review and re-set parameters.

For how to set parameters for the RCPU, refer to the following.

MELSEC iQ-R CPU Module User's Manual (Startup)

11.5 Special Relay and Special Register Replacement

Devices used as special relay and special register differ between the A/QnACPU and the RCPU.

The special relay and special register areas of the A/QnACPU are automatically converted into those of the RCPU when the project is replaced. At this time, the special relay and special register areas that are not supported by the RCPU are converted into SM4095/SD4095.

Search SM4095/SD4095, and modify the program as required.

The following table lists the special relay and special register areas of each CPU module.

| Category | ACPU | QnACPU | QCPU | RCPU |
|------------------|----------------|-----------------|-----------------|-----------------|
| Special relay | M9000 to M9255 | SM0 to SM2047*1 | SM0 to SM2047*1 | SM0 to SM4096*1 |
| Special register | D9000 to D9255 | SD0 to SD2047*1 | SD0 to SD2047*1 | SD0 to SD4096*1 |

^{*1} In the QnACPU, QCPU, and RCPU, the special relay and special register areas have the same number but different meanings. For details, refer to the manual for the CPU module used.

11.6 Precautions for Replacement

Timer

The setting method, setting range, and processing method of the timer differ between the A/QnACPU and the RCPU. Modify the program as required.

| Category | | ACPU | QnACPU | RCPU | |
|--|----------------------|---------------------------|---|--|--|
| Low-speed timer | Measurement unit | Fixed to 100ms | In the range of 10 to 1000ms (Default: 100ms) | In the range of 1 to 1000ms (Default: 100ms) | |
| | Specification method | [OUT Tn Kn] | [OUT Tn Kn] | | |
| High-speed timer | Measurement unit | Fixed to 10ms | In the range of 0.1 to 100ms (Default: 10ms) | In the range of 0.01 to 100ms (Default: 10ms) | |
| | Specification method | [OUT Tn Kn] | [OUT H Tn Kn] | | |
| Retentive timer | Measurement unit | Fixed to 100ms | In the range of 10 to 1000ms (Default: 100ms) | In the range of 1 to 1000ms (Default: 100ms) | |
| | Specification method | [OUT Tn Kn] | [OUT STn Kn] | | |
| High-speed Measurement retentive timer unit | | None | In the range of 0.1 to 100ms (Default: 10ms) | In the range of 0.01 to 100ms (Default: 10ms) | |
| | Specification method | | [OUT H STn Kn] | | |
| Setting range | | 1 to 32767 | | 0 to 32767 | |
| Processing when 0 is set | | Infinite (no timeout) | Instant-on | | |
| Update processing of the current value, on/off processing of the contact | | During the END processing | At execution of [OUT Tn Kn/OUT H Tn Kn] | | |

Counter

The processing method of the counter differs between the ACPU and the RCPU. Modify the program as required.

| Category | ACPU | QnACPU | RCPU |
|--|---------------------------|-----------------------------|------|
| Specification method | [OUT Cn Kn] | | |
| Update processing of the current value, on/off processing of the contact | During the END processing | At execution of [OUT Cn Kn] | |

Display instructions

The RCPU does not support display instructions. Consider replacing them as described below.

| Category | ACPU | QnACPU | RCPU |
|----------|--|--|---|
| PR | When M9049 is off, the characters before 00H are output. When M9049 is on, 16 characters are output. | When SM701 is off, the characters before 00H are output. When SM701 is on, 16 characters are output. | Consider replacing the instructions with a display unit or a touch panel. |
| PRC | A comment (16 characters) is output. | When SM701 is off, a comment (32 characters) is output. When SM701 is on, a comment (first 16 characters) is output. | |

Index register

The index register area of the ACPU is "Z, Z1 to Z6, V, V1 to V6", but the area of the RCPU is "Z0 to Z20". (The device "V" is used as the edge relay in the RCPU.) The index register is replaced as follows when the project is converted.

| Category | ACPU | RCPU |
|----------------|----------|-----------|
| Index register | Z | Z0 |
| | Z1 to Z6 | Z1 to Z6 |
| | V | Z7 |
| | V1 to V6 | Z8 to Z13 |

When the value other than Z/Z1 is used as an index modified device in the contact instructions of the timer and the counter in the ACPU, it is converted into SM4095. Modify the program.

Index register 32-bit specification

For the index register 32-bit specification, the ACPU uses Z for the last 16 bits and V, the same area number as Z, for the first 16 bits.

However, the RCPU uses LZ (long index register) or ZZ (using two points of index register).

When the index register 32-bit specification is used in the ACPU, modify the program.

File register

The storage location of the file register differs between the A/QnACPU and the RCPU.

| Category | ACPU | QnACPU | RCPU |
|----------------------------|--------------------------------------|--|--|
| Storage location | Memory cassette | Memory card (Two cards, four drives maximum) | Device/label memory, extended SRAM cassette |
| Maximum number of points | Depends on the memory cassette used. | 1018K points × 2 (when two 2M memory cards are used) | R00/R01/R02CPU: 98304 points, R04/R08/R16CPU: Calculated by a formula.*1 |
| Number of points per block | 8K points | 32K points | 32K points |

^{*1} The maximum value is $[\alpha + \beta]$.


The value must be in the following range.

File register file storage area \leq [α + β]

Dedicated instructions

The LEDA, LEDB, LEDC, SUB, and LEDR instructions used in the AnA/AnUCPU are converted into the same format as basic instructions and application instructions in the RCPU.

However, the dedicated instructions that are not supported by the RCPU are converted into SM4095. Modify the program.

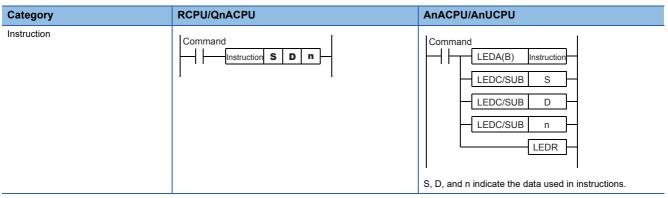

α: <Capacity of the R**CPU> (R04CPU: 160K words, R08CPU: 544K words, R16CPU: 800K words)

β: Capacity of the extended SRAM cassette

Main program and subprograms

A main program and its subprograms in the ACPU are converted into separate programs when the project is converted.

Boot operation (Writing programs to ROM)

The program memory of the RCPU is flash ROM, and therefore the boot operation is not required.

REVISIONS

*The manual number is given on the bottom left of the back cover.

| Revision date | *Manual number | Description |
|----------------|-----------------|--|
| December 2019 | L(NA)08666ENG-A | First edition |
| September 2020 | L(NA)08666ENG-B | ■Added models RJ71LP21-25, MELSEC-A/QnA -> MELSEC iQ-R Conversion Support Tool ■Added part Section 11.1 ■Modified parts Chapter 9, Section 10.1, 11.1→11.2, 11.2→11.3, 11.3→11.4, 11.4→11.5, 11.5→11.6 |
| September 2020 | L(NA)08666ENG-C | ■Modified part Back cover |
| September 2023 | L(NA)08666ENG-D | ■Modified part Chapter 9 |
| January 2025 | L(NA)08666ENG-E | ■Added model RJ71BR11 ■Modified parts Chapter 9, Section 10.3, 10.4 |

Japanese manual number: L08665-D

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

© 2019 MITSUBISHI ELECTRIC CORPORATION

WARRANTY

Please confirm the following product warranty details before using this product.

1. Gratis Warranty Term and Gratis Warranty Range

If any faults or defects (hereinafter "Failure") found to be the responsibility of Mitsubishi occurs during use of the product within the gratis warranty term, the product shall be repaired at no cost via the sales representative or Mitsubishi Service Company.

However, if repairs are required onsite at domestic or overseas location, expenses to send an engineer will be solely at the customer's discretion. Mitsubishi shall not be held responsible for any re-commissioning, maintenance, or testing on-site that involves replacement of the failed module.

[Gratis Warranty Term]

The gratis warranty term of the product shall be for one year after the date of purchase or delivery to a designated place. Note that after manufacture and shipment from Mitsubishi, the maximum distribution period shall be six (6) months, and the longest gratis warranty term after manufacturing shall be eighteen (18) months. The gratis warranty term of repair parts shall not exceed the gratis warranty term before repairs.

[Gratis Warranty Range]

- (1) The range shall be limited to normal use within the usage state, usage methods and usage environment, etc., which follow the conditions and precautions, etc., given in the instruction manual, user's manual and caution labels on the product.
- (2) Even within the gratis warranty term, repairs shall be charged for in the following cases.
 - 1. Failure occurring from inappropriate storage or handling, carelessness or negligence by the user. Failure caused by the user's hardware or software design.
 - 2. Failure caused by unapproved modifications, etc., to the product by the user.
 - When the Mitsubishi product is assembled into a user's device, Failure that could have been avoided if functions or structures, judged as necessary in the legal safety measures the user's device is subject to or as necessary by industry standards, had been provided.
 - 4. Failure that could have been avoided if consumable parts (battery, backlight, fuse, etc.) designated in the instruction manual had been correctly serviced or replaced.
 - 5. Failure caused by external irresistible forces such as fires or abnormal voltages, and Failure caused by force majeure such as earthquakes, lightning, wind and water damage.
 - 6. Failure caused by reasons unpredictable by scientific technology standards at time of shipment from Mitsubishi.
 - 7. Any other failure found not to be the responsibility of Mitsubishi or that admitted not to be so by the user.

2. Onerous repair term after discontinuation of production

- (1) Mitsubishi shall accept onerous product repairs for seven (7) years after production of the product is discontinued. Discontinuation of production shall be notified with Mitsubishi Technical Bulletins, etc.
- (2) Product supply (including repair parts) is not available after production is discontinued.

3. Overseas service

Overseas, repairs shall be accepted by Mitsubishi's local overseas FA Center. Note that the repair conditions at each FA Center may differ.

4. Exclusion of loss in opportunity and secondary loss from warranty liability

Regardless of the gratis warranty term, Mitsubishi shall not be liable for compensation to:

- (1) Damages caused by any cause found not to be the responsibility of Mitsubishi.
- (2) Loss in opportunity, lost profits incurred to the user by Failures of Mitsubishi products.
- (3) Special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi products.
- (4) Replacement by the user, maintenance of on-site equipment, start-up test run and other tasks.

5. Changes in product specifications

The specifications given in the catalogs, manuals or technical documents are subject to change without prior notice.

INFORMATION AND SERVICES

For further information and services, please contact your local Mitsubishi Electric sales office or representative. Visit our website to find our locations worldwide.

MITSUBISHI ELECTRIC Factory Automation Global Website Locations Worldwide www.MitsubishiElectric.com/fa/about-us/overseas/

TRADEMARKS

Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Unicode is either a registered trademark or a trademark of Unicode, Inc. in the United States and other countries.

The company names, system names and product names mentioned in this manual are either registered trademarks or trademarks of their respective companies.

In some cases, trademark symbols such as '™, or '®, are not specified in this manual.

MITSUBISHI ELECTRIC CORPORATION HEAD OFFICE: TOKYO BLDG., 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN NAGOYA WORKS: 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA 461-8670, JAPAN