

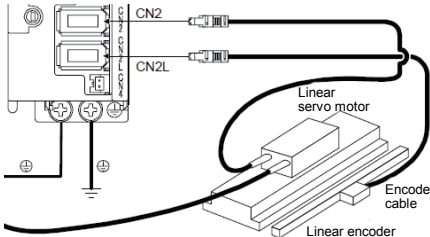
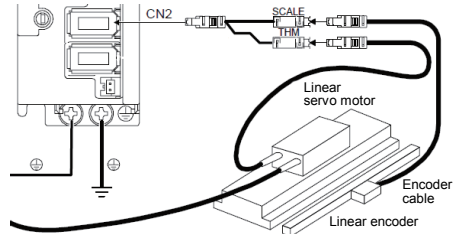
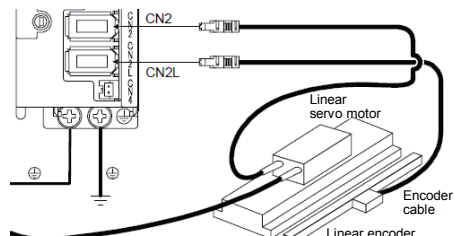
Sales and Service

Correction of Description on the Linear Encoder Connection During the Linear Servo Motor Operation with the Mitsubishi General-Purpose AC Servo MR-J4-_A-RJ/MR-J4-_B-RJ Servo Amplifier

Thank you for your continued patronage of the Mitsubishi general-purpose AC servo and FA products. We inform you of the incorrect entries in the linear encoder connection diagram showing the linear servo motor operation with the MR-J4-_A-RJ/MR-J4-_B-RJ servo amplifier. Although incorrect connection of the linear encoder will not cause a malfunction, the linear encoder will not work properly. We apologize for any inconvenience, but please check the following before wiring.

1. Correction Table

The linear encoder connection diagrams in the catalog and each Instruction Manual will be corrected as follows.

Linear encoder	Incorrect	Correct
Two-wire/four-wire type serial communication		 <p>Connect the two-wire/four-wire type serial communication linear encoder to the CN2 connector. It can also be used for the standard MR-J4-_A/MR-J4-_B amplifiers.</p>
A/B/Z-phase differential	<p>Connect the two-wire/four-wire type serial communication or A/B/Z-phase differential communication linear encoder to the CN2L connector.</p>	 <p>Connect the A/B/Z-phase differential communication linear encoder to the CN2L connector.</p>

2. Issue of the Revised Catalog and Manuals

The catalog and manuals with the corresponding section corrected will be issued as follows.

Name	No. - Ver.	Revision schedule
SERVO AMPLIFIERS & MOTORS MELSERVO-J4 catalog	L(NA)03058-D	December 2013
MR-J4-_A(-RJ) SERVO AMPLIFIER INSTRUCTION MANUAL	SH(NA)030107-F	August 2013
MR-J4-_B(-RJ) SERVO AMPLIFIER INSTRUCTION MANUAL	SH(NA)030106-E	
MR-J4-_A4(-RJ) MR-J4-_B4(-RJ) SERVO AMPLIFIER INSTRUCTION MANUAL	SH(NA)030119-B	
LINEAR ENCODER INSTRUCTION MANUAL	SH(NA)030111-D	

Date of issue	May 2013	Title	Correction of Description on the Linear Encoder Connection During the Linear Servo Motor Operation with the Mitsubishi General-Purpose AC Servo MR-J4-_A-RJ/MR-J4-_B-RJ Servo Amplifier	Mitsubishi Electric Corp., Nagoya Works 5-1-14 Yada-minami, Higashi-ku, Nagoya 461-8670 Tel.: +81 (52) 721-2111 Main line
----------------------	----------	--------------	---	--